



BOOMRACING



LAND ROVER

SERIES III

109

Pickup Truck

1/10 HARD BODY KIT 334MM

Congratulations!

Congratulations on your new Land Rover Series III 109 Pickup.

It took us many years to finally land a licensing agreement with Land Rover – arguably the most iconic off-road car company, ever. There were many considerations and connections that had to be made for us to get to this point. It took us years to learn about the R/C industry, to understand what our customers want, and to improve our manufacturing techniques. The Series III body has been a fun and exciting development journey and I'm proud to say that we've left it all out there.

In this box, you'll find extra pieces included for you to customize your own Series III 109 Pickup. You have the option to build either the hardtop or the convertible. The instruction manual is meticulously done to guide you through different building options.

To make the Series III ultra-scale, we constructed the body using a similar design concept as how they were built in the factories back in the day; using multiple body panels to build the complete body.

This body is designed to fit our BRX02 109 chassis, which includes all of the parts to complete the quick-release system.

We hope you enjoy this body as much as we do. Now, regress to a simpler, classier time, and experience the ageless charm of this iconic vehicle!

Jason Patrick Tsang
Boom Racing Owner and Founder





Apply Double Sided Tape



Pay attention to note



Apply Glue




Drill Hole




Apply Model Filler

Tools Included

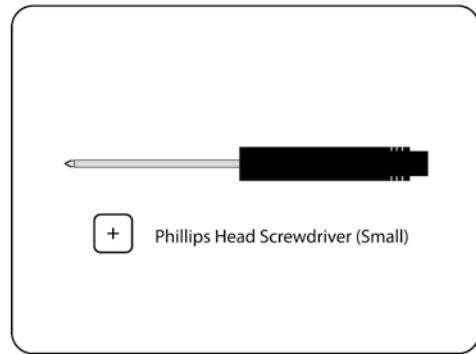

+ Phillips Head Screwdriver (Small)

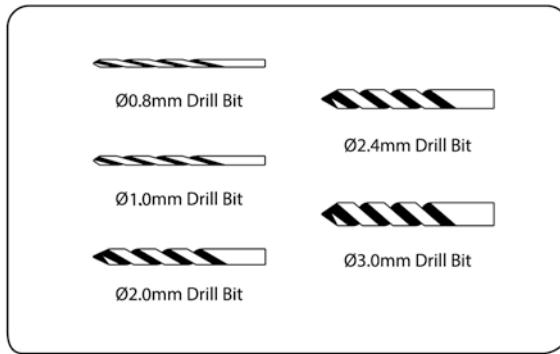


Ø0.8mm Drill Bit

Ø1.0mm Drill Bit

Ø2.0mm Drill Bit

Ø2.4mm Drill Bit


Ø3.0mm Drill Bit

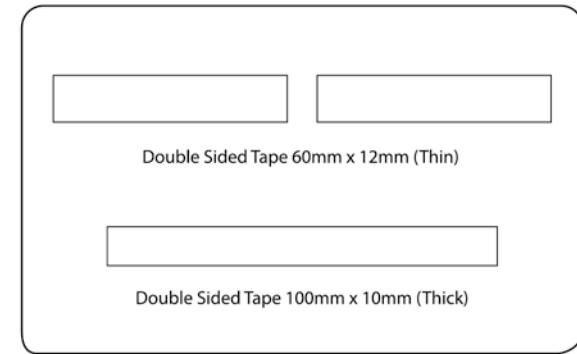


Double Sided Tape 60mm x 12mm (Thin)

Double Sided Tape 100mm x 10mm (Thick)


Tools Required

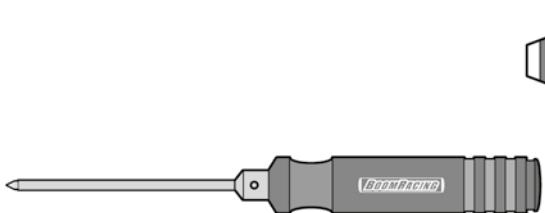

+ Phillips Head Screwdriver (Large)

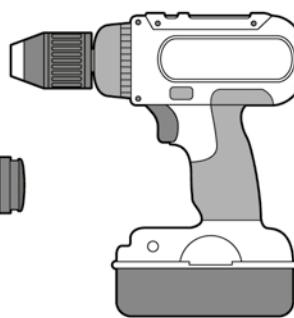


Drill

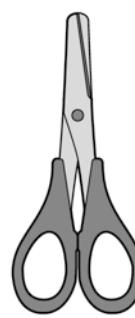


Scissors




Hobby Knife

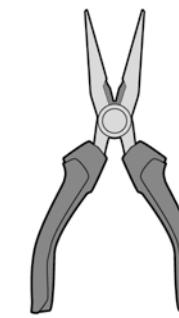

Long Nose Pliers

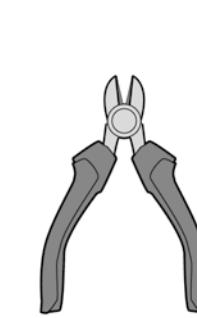

Side Cutter

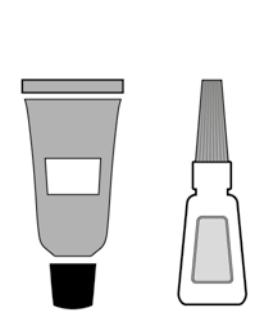

Model Filler




Glue




All screw indicators in this manual are 1:1 size (extra screws included).


M1x4 Phillips Head Self-Tapping Screw (27) ST1x4	M2.6x6 Phillips Head Self-Tapping Screw (2) ST2.6x6
M1x6 Phillips Head Self-Tapping Screw (6) ST1x6	M2.6x10 Phillips Head Self-Tapping Screw (2) ST2.6x10
M1.2x4 Phillips Head Self-Tapping Screw (16) ST1.2x4	M2x8 Counter Sunk Phillips Head Self-Tapping Screw (12) STCS2x8
M1.2x8 Phillips Head Self-Tapping Screw (2) ST1.2x8	M3x6 Counter Sunk Phillips Head Self-Tapping Screw (2) STCS3x6
M1.5x5 Phillips Head Self-Tapping Screw (6) ST1.5x5	M2x8 Counter Sunk Phillips Head Screw (4) M2x8CSS
M2x5 Phillips Head Self-Tapping Screw (10) ST2x5	D3x4 Spring Plunger (4)
M2x6 Phillips Head Self-Tapping Screw (14) ST2x6	Magnet (2) OST8x3
M2x8 Phillips Head Self-Tapping Screw (6) ST2x8	

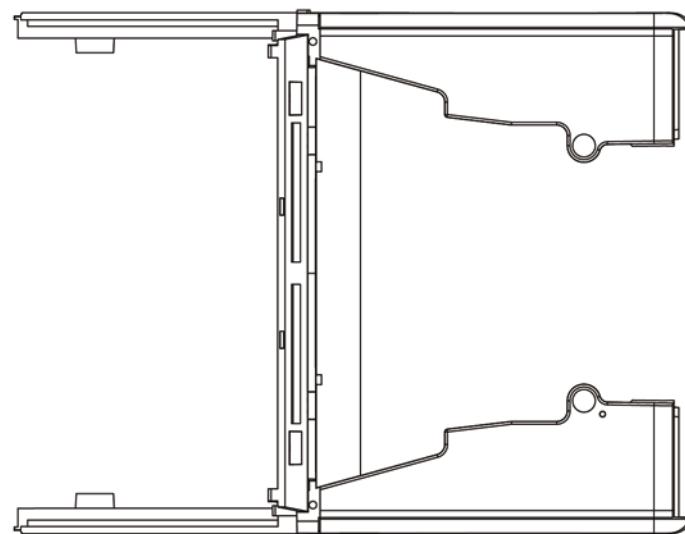


Front Body
#BRX02301

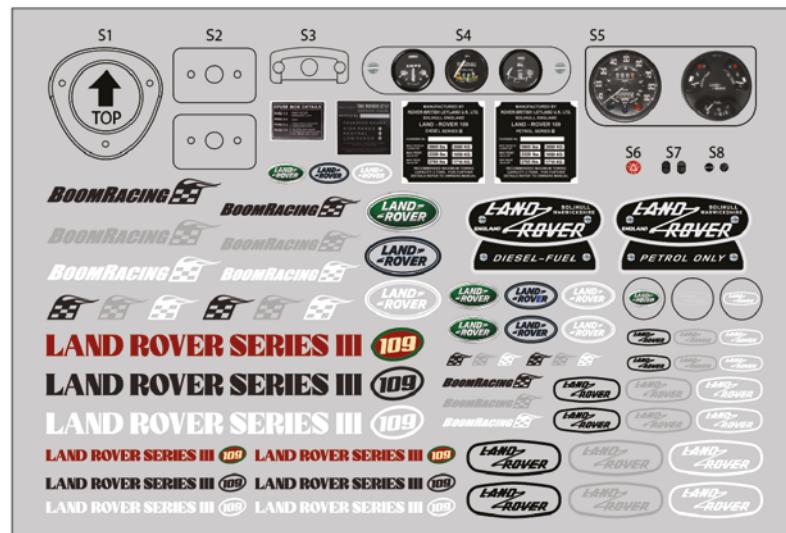


Decal Sticker Series III 109 Pickup
#BRX02318

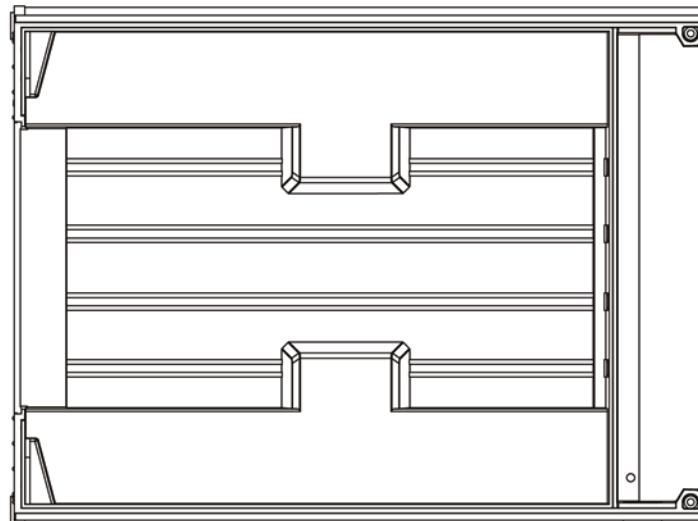


109 Rear Bed
#BRX02302

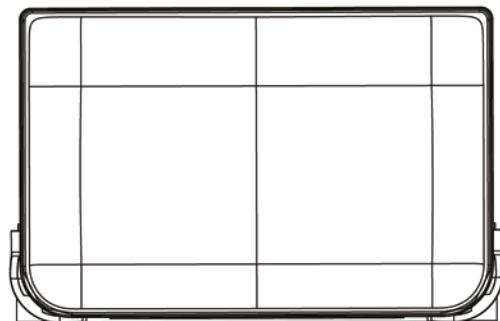


Pickup Hardtop
#BRX02303

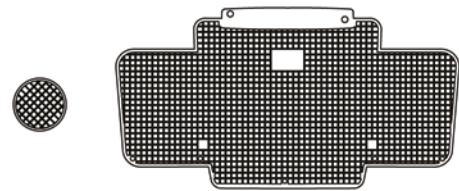


**Front Radiator Grill Mesh &
Wing Air Intake Filter**
#BRX02307

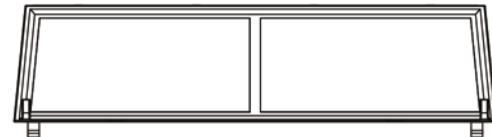


Windscreen Frame
#BRX02313

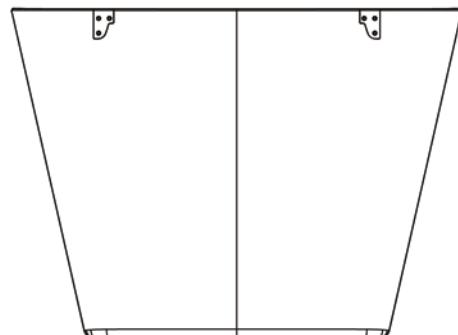

Front Bonnet
#BRX02315

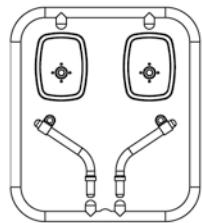





Rubber Side Mirrors
#BRX02317

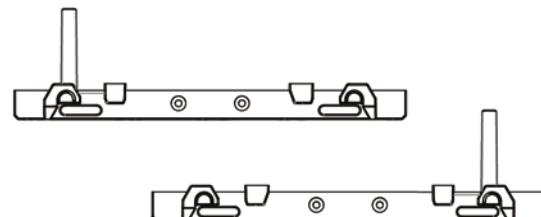





Body Brace
#BRX020112



Note: some parts are not attached to the parts tree for packaging reasons.

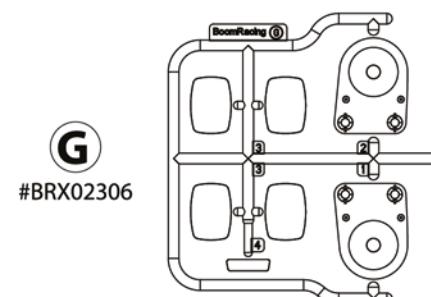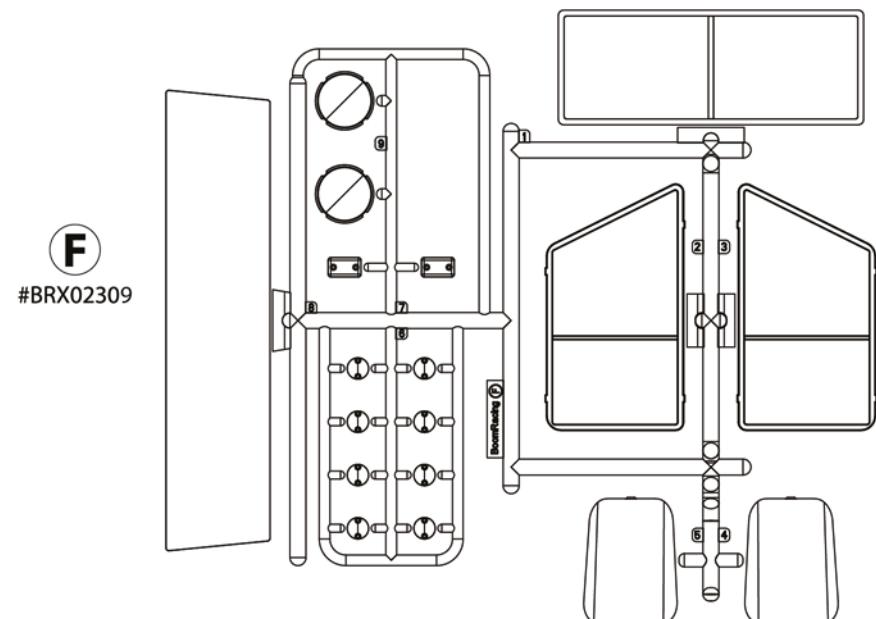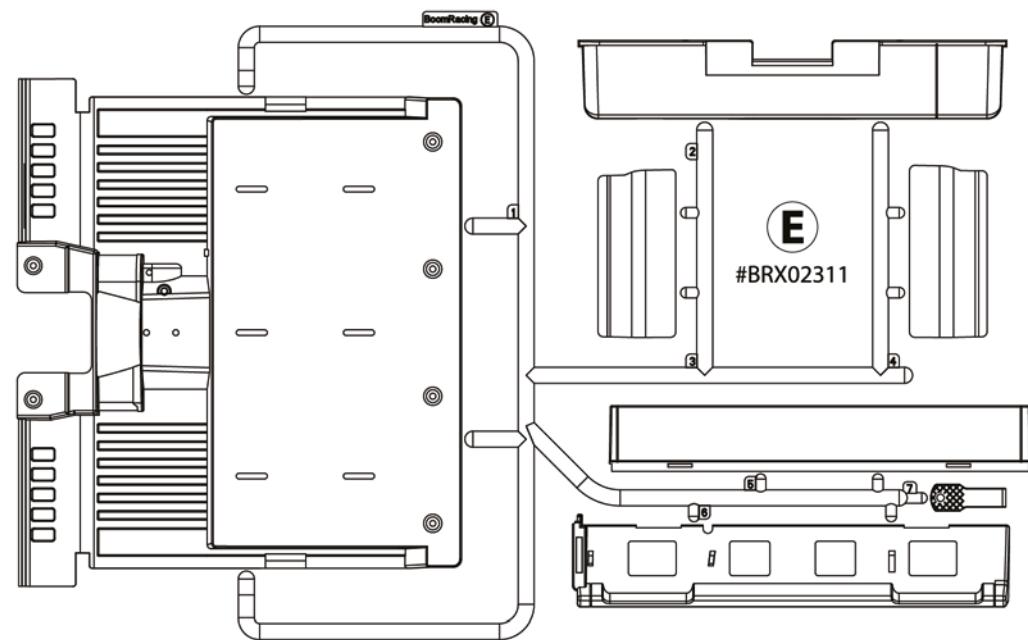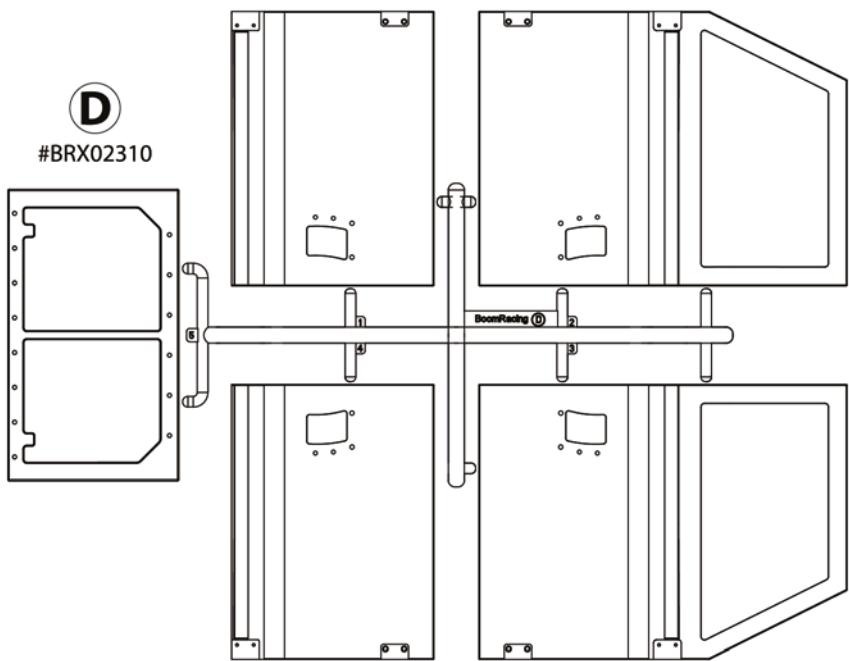

Note: some parts are not attached to the parts tree for packaging reasons.

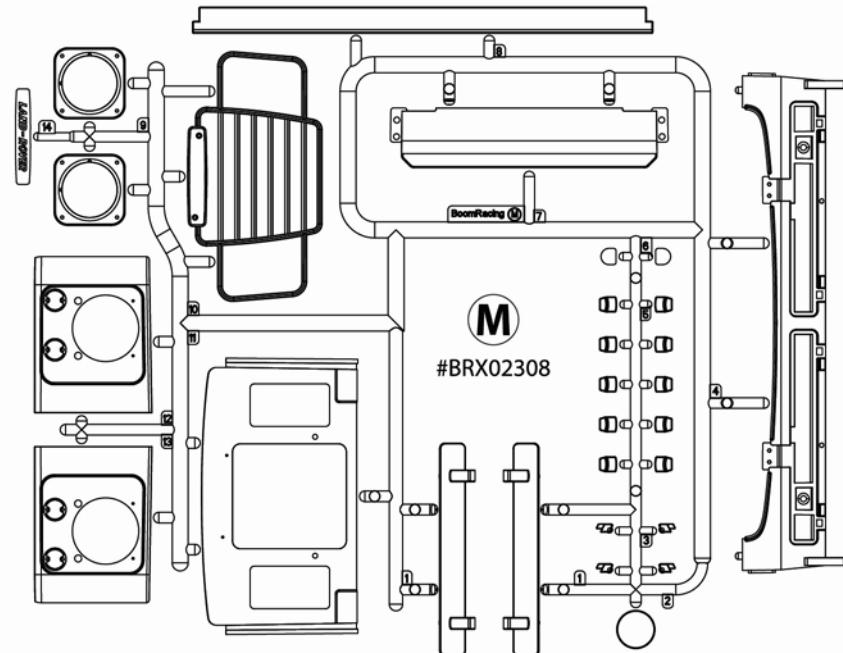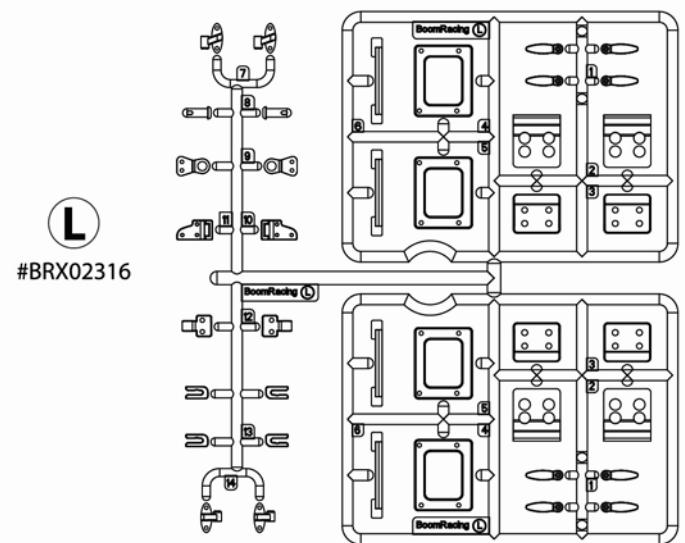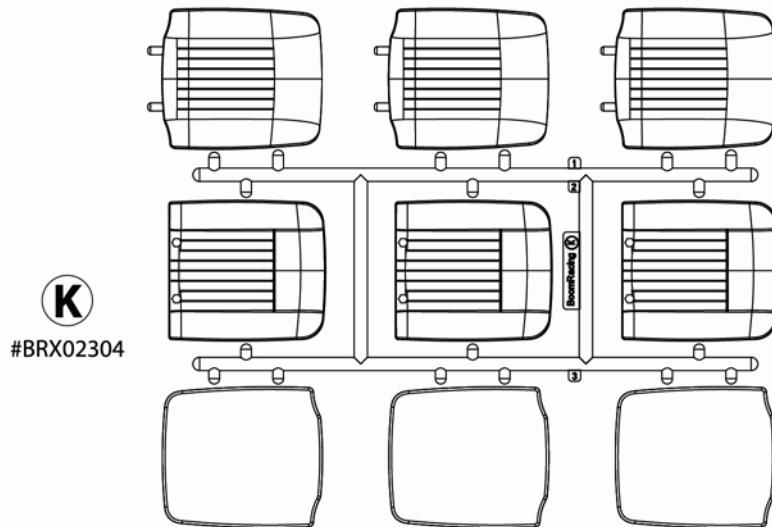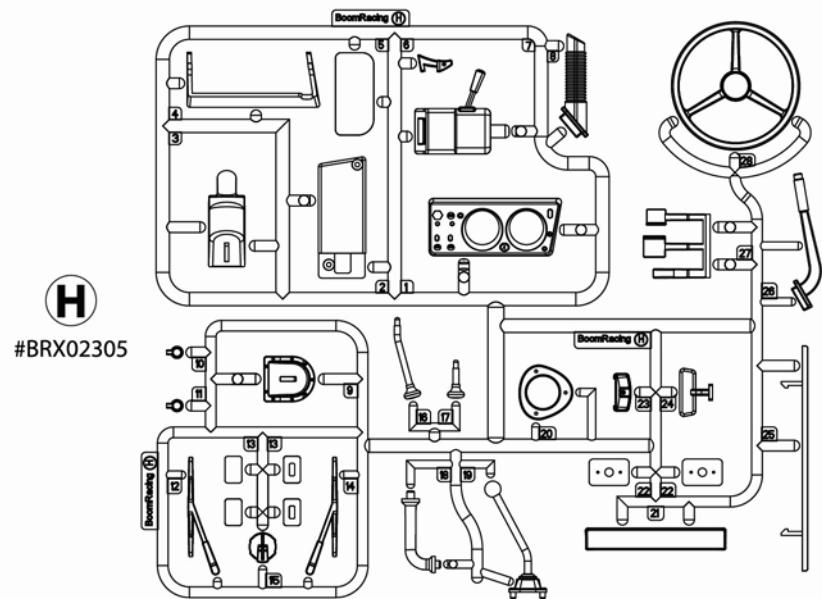



Before you begin, we recommend:

- ① Read through the entire manual prior to starting assembly.
- ② Complete step 1 before painting begins.





1


Ø0.8mm Drill Bit

Blank Installation Guide

This blank is an indication for left- or right-hand drive. Blank installation on right side for right-hand drive. Blank installation on left side for left-hand drive.

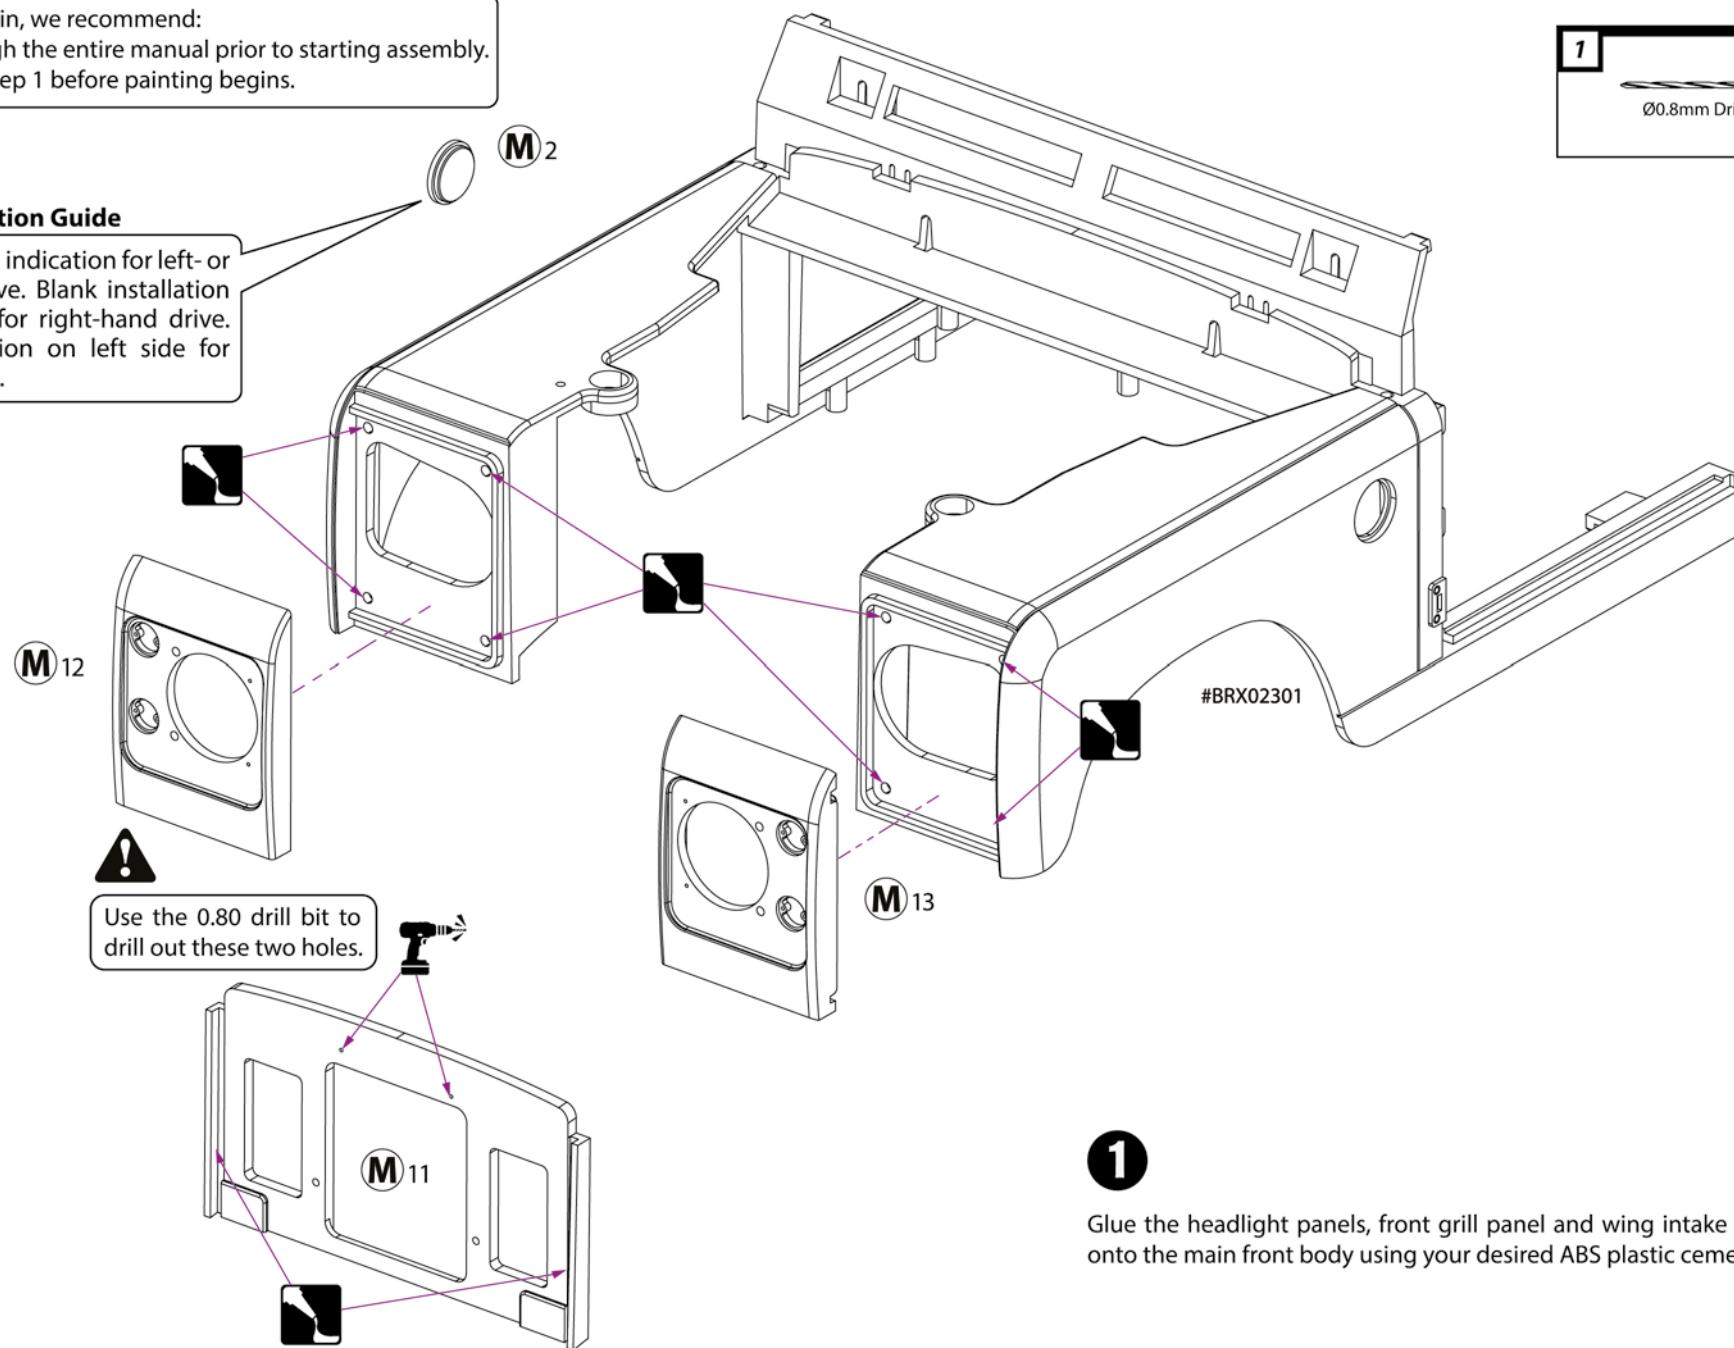


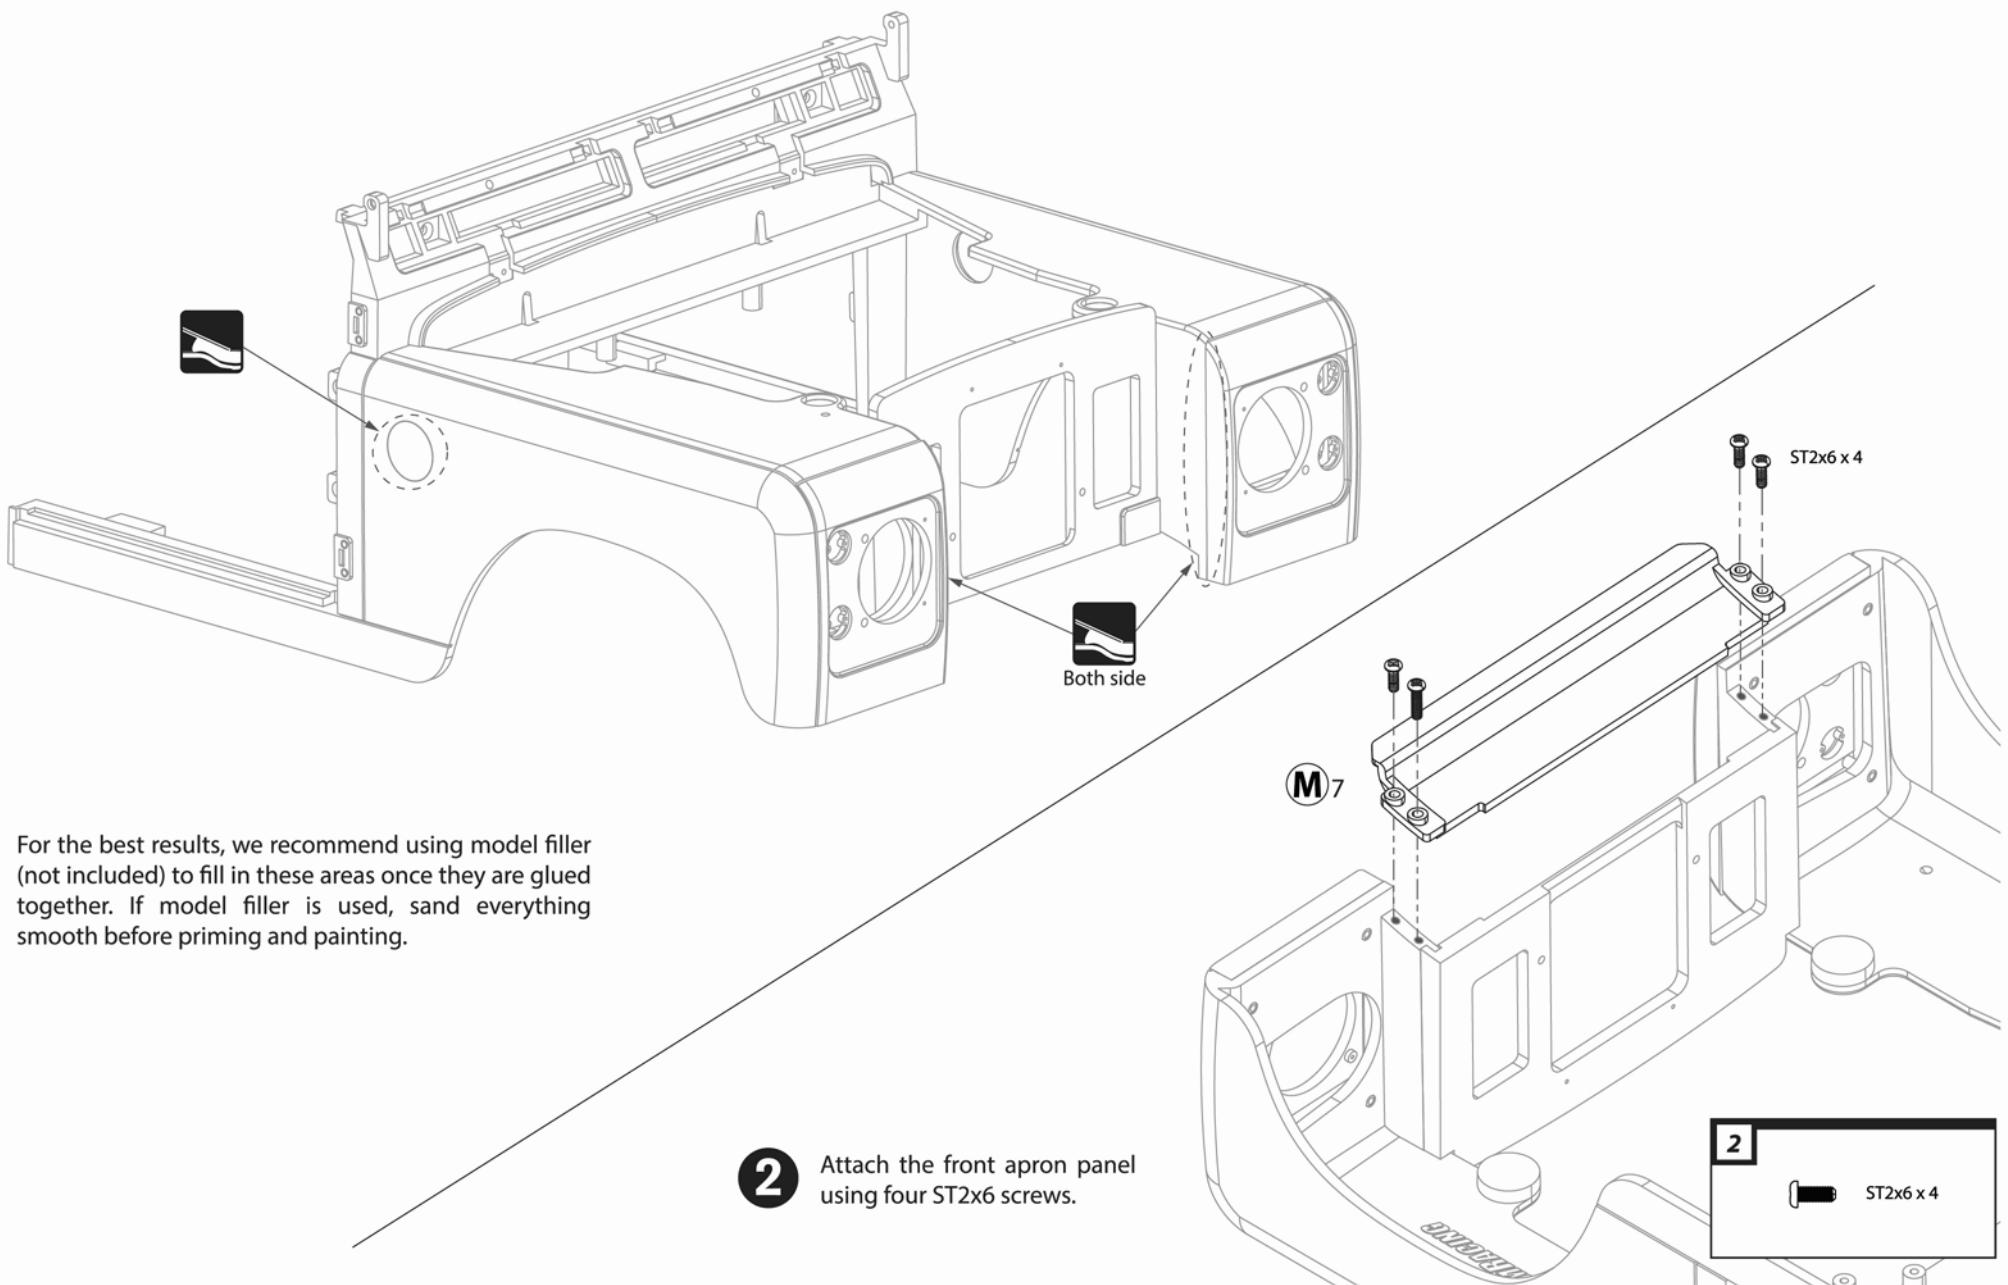

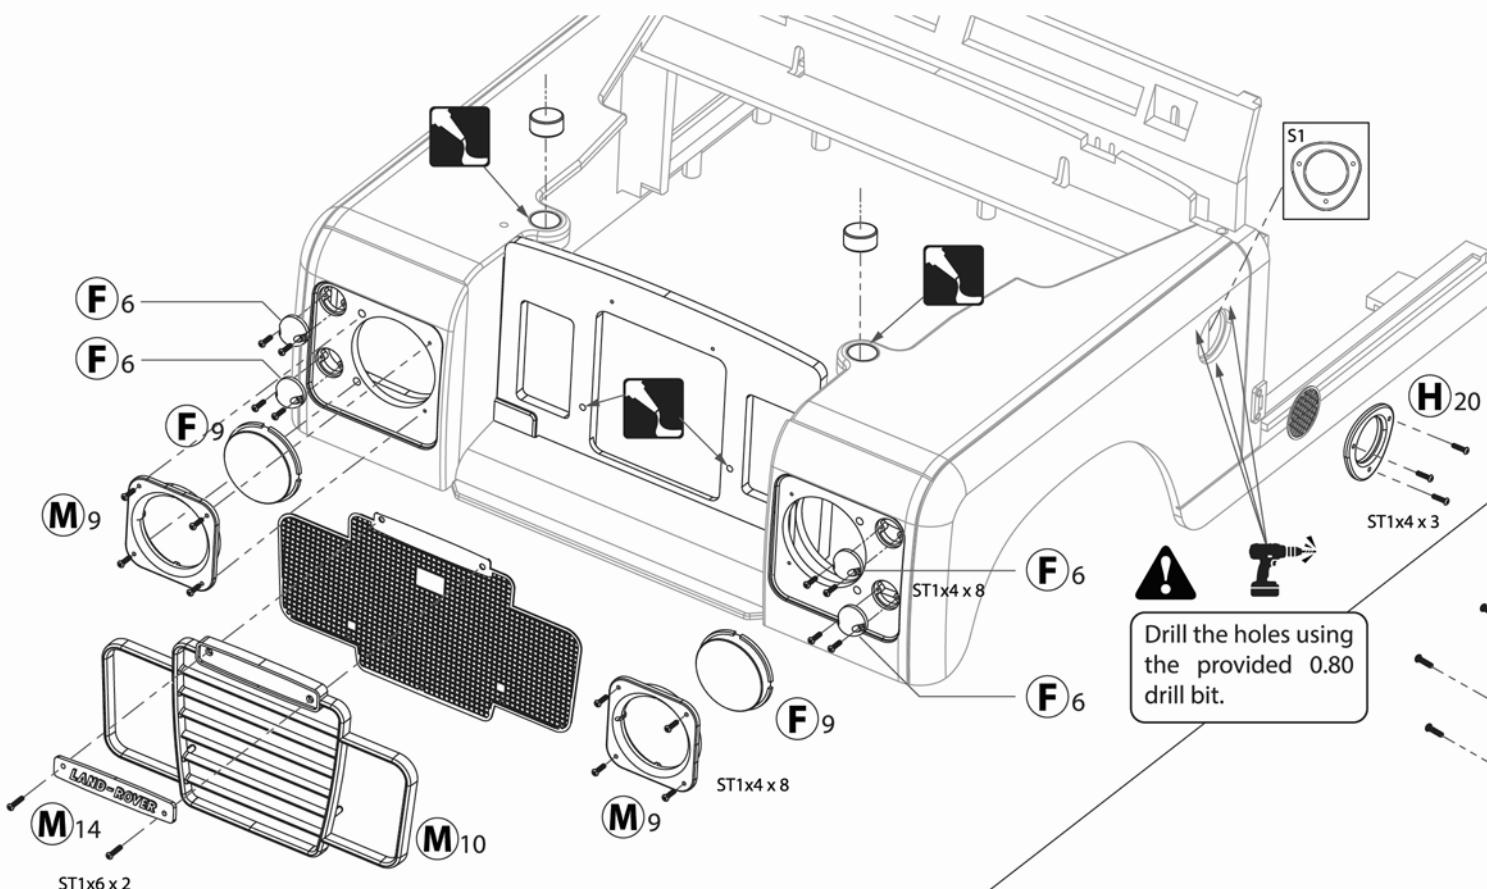

Drill the holes using the provided 0.80 drill bit.

The wing intake cover requires three holes to be drilled around the wing vent opening. Line up the decal sticker and drill the three holes using the provided drill bit, then remove decal sticker. Next, attach the intake bezel to the wing vent opening using three ST1x4 screws sandwiching the metal mesh between the intake bezel and the wing.

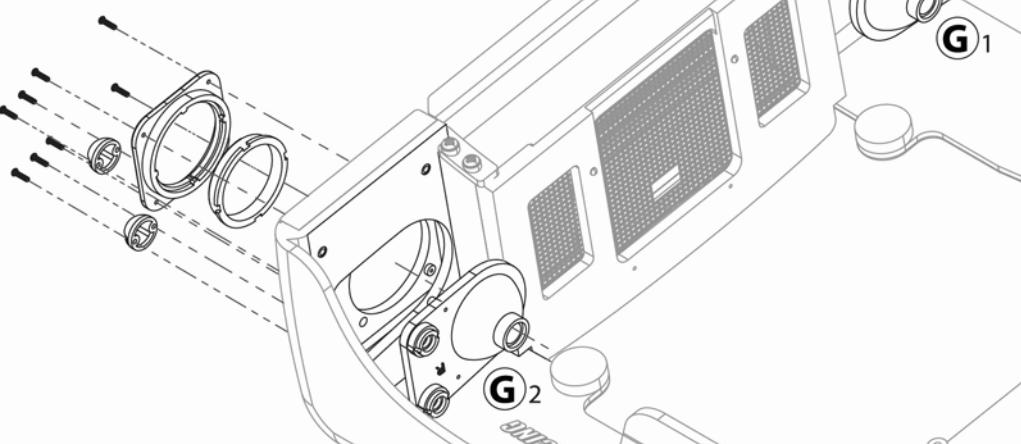


3


Paint the front grill and Land Rover badge in your desired colors. Place the Land Rover badge onto the front grill.

Attach the front grill and the stainless steel grill plate with two ST1x6 screws, together with a touch of glue after painting it in your desired color.


Fasten the light lenses, intake bezels and light buckets with sixteen ST1x4 screws.

Attach two 3x8mm magnets with a touch of super glue.

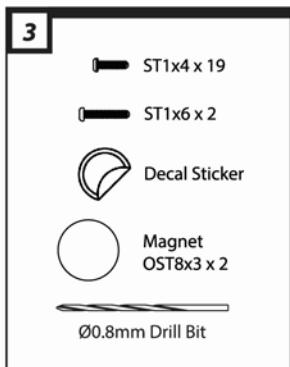


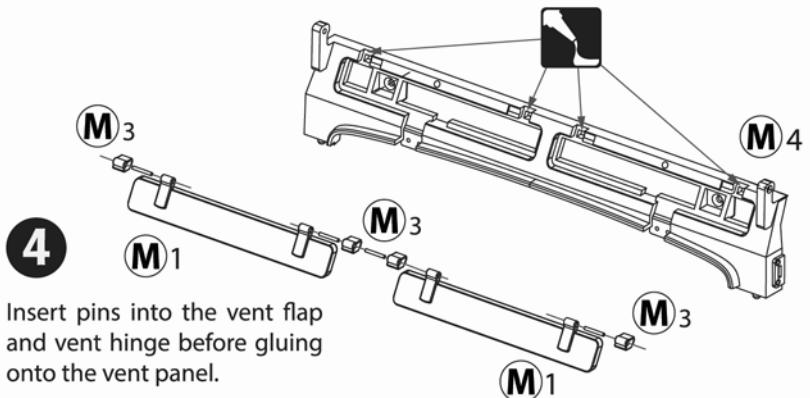

Insert pins into the vent flap and vent hinge before gluing onto the vent panel.

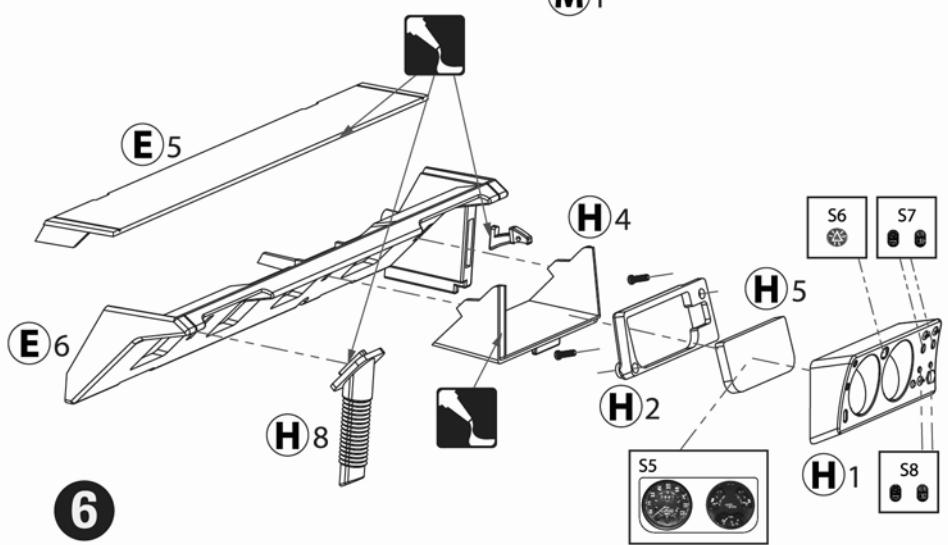


Glue the parts onto the upper dash as indicated and apply decal stickers to the instrument panel. Use two ST2x5 screws to fasten the instrument panel down.

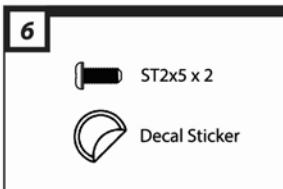



5




Insert vent panel onto the main front body section.

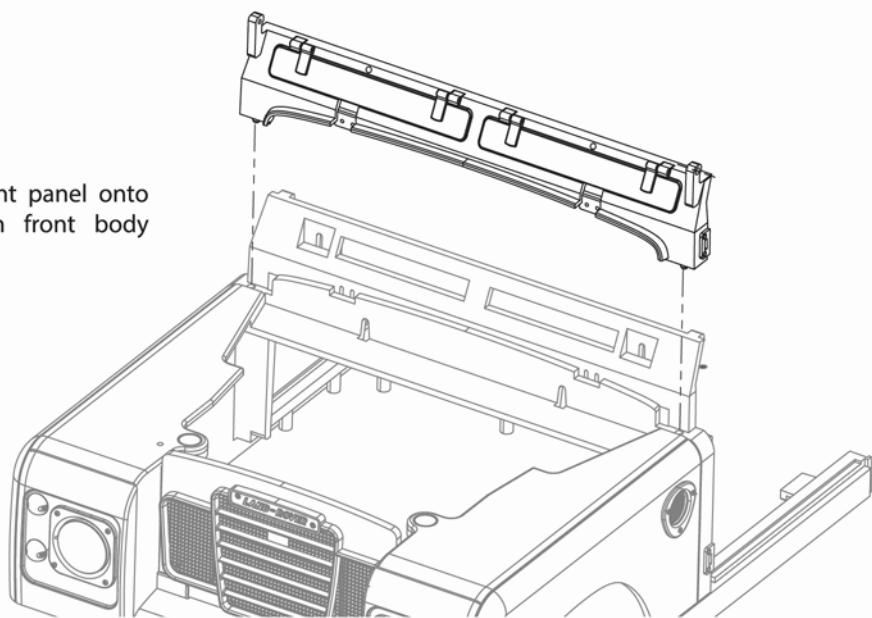

7

Attach upper dash with two STCS2x8 screws and the bonnet hinge with four ST1.5x5 screws.

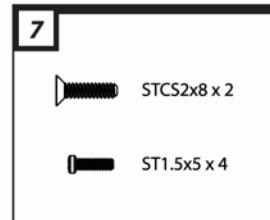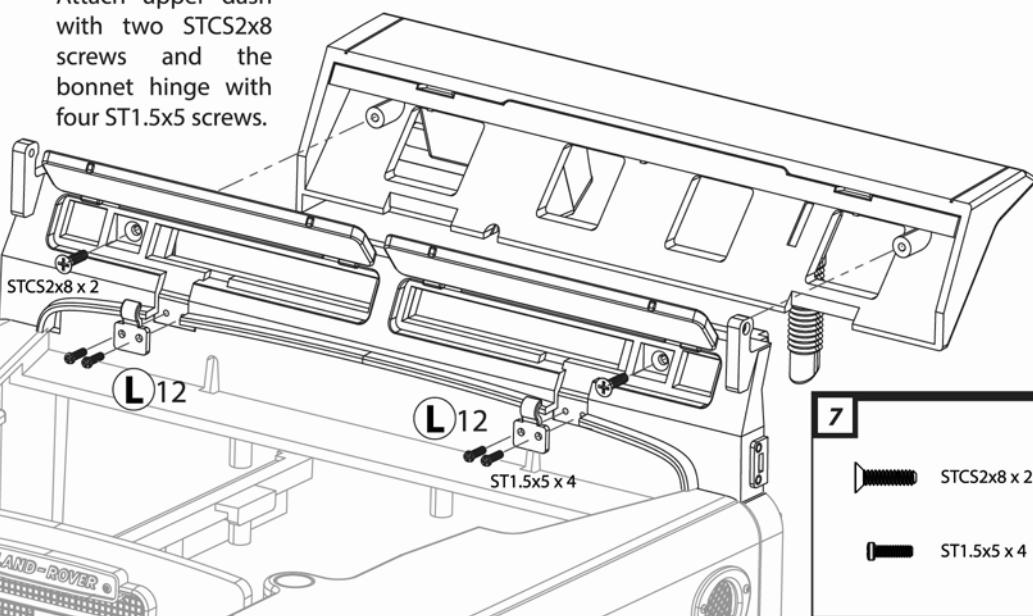

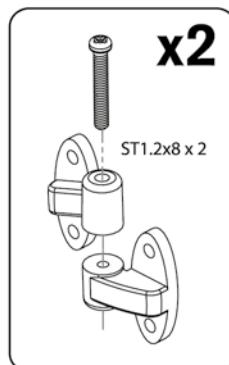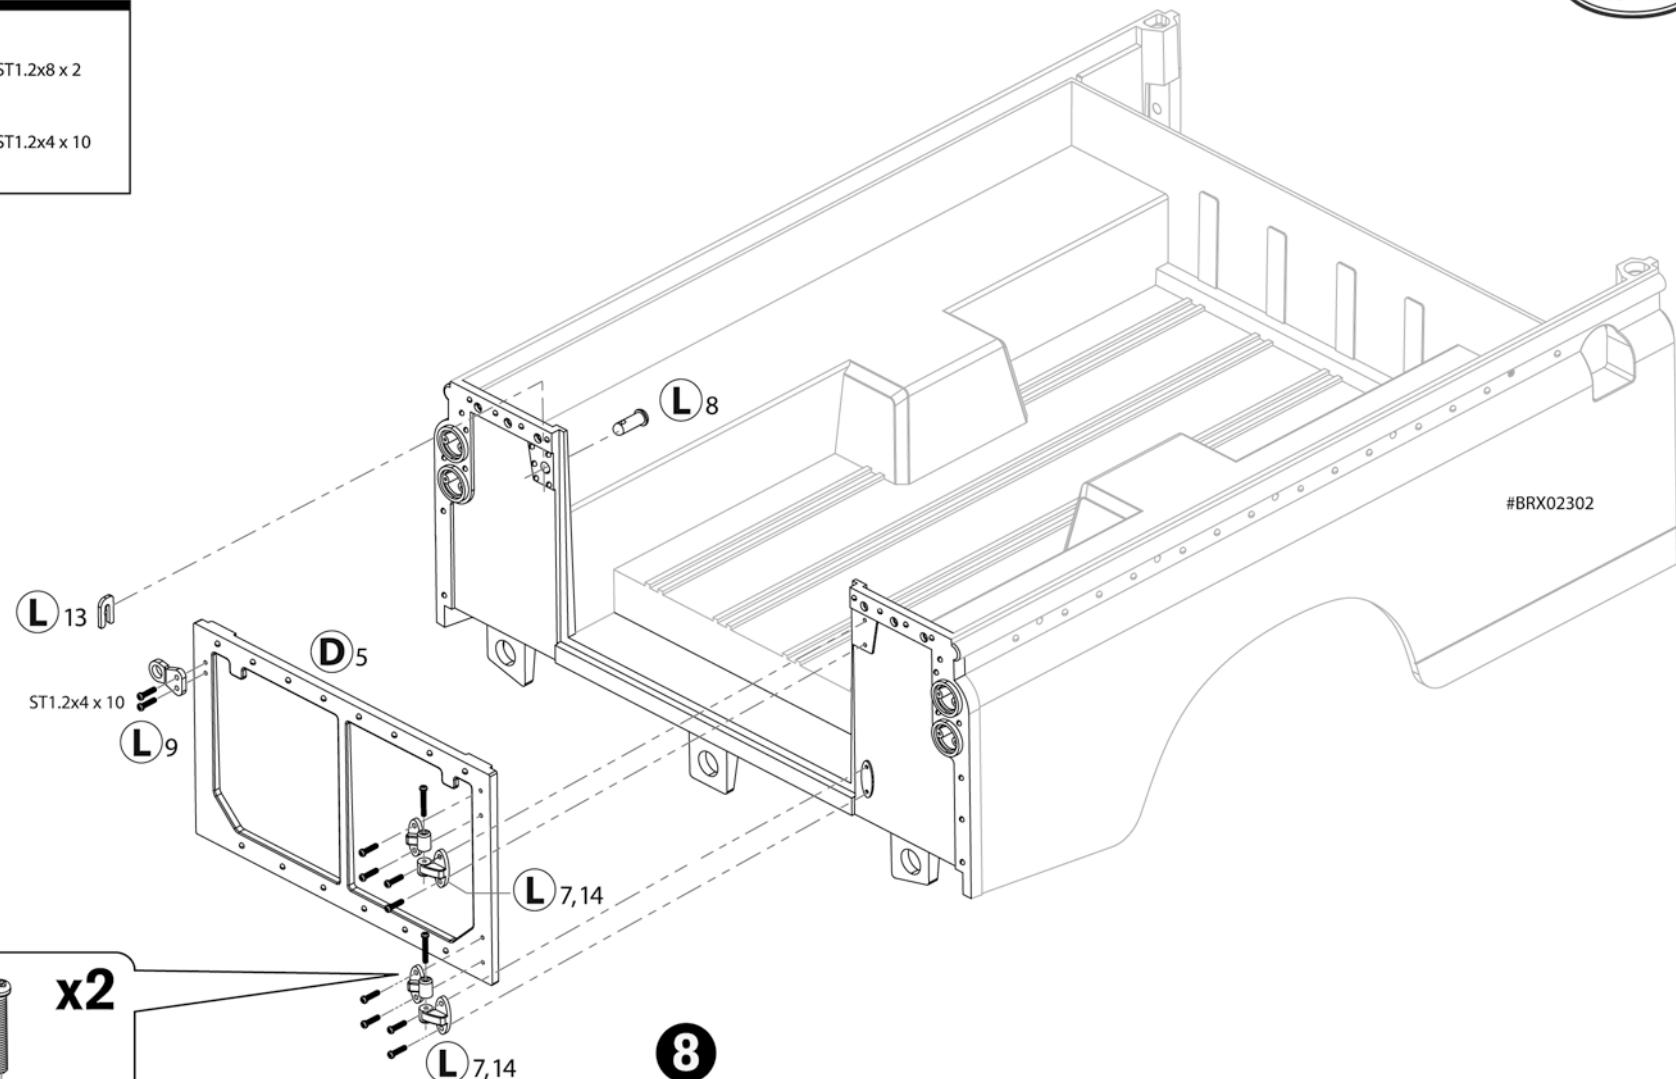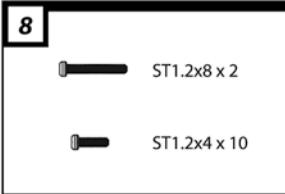

8

Assemble two tailgate hinge assemblies using one ST1.2x8 screw each. Attach the tailgate latch and the two tailgate hinge assemblies to the tailgate using six ST1.2x4 screws.

Insert the tailgate latch pin into the provided hole on the bed.

Attach the tailgate to the bed using four ST1.2x4 screws. Insert the tailgate lock into the tailgate latch and pin to secure the tailgate.



9

ST1x6 x 4



ST1x4 x 8




Ø0.8mm Drill Bit

Ø2.0mm Drill Bit

Ø3.0mm Drill Bit

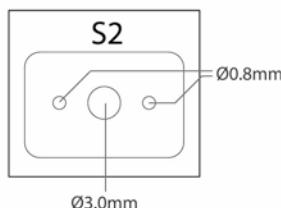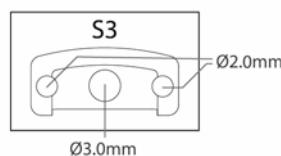


For the rear square lights and rear number plate light, choose where you would like to position them. Use the provided decal sticker to drill the holes for the lights, 3mm for LED / 0.8mm for screws, then remove the decal sticker. Next, attach the square lights with four ST1x6 screws. The number plate light you have to drill two 2.0mm holes and attached with a dab of glue. Every Series III was different depending on regional laws, so we leave that placement up to you.

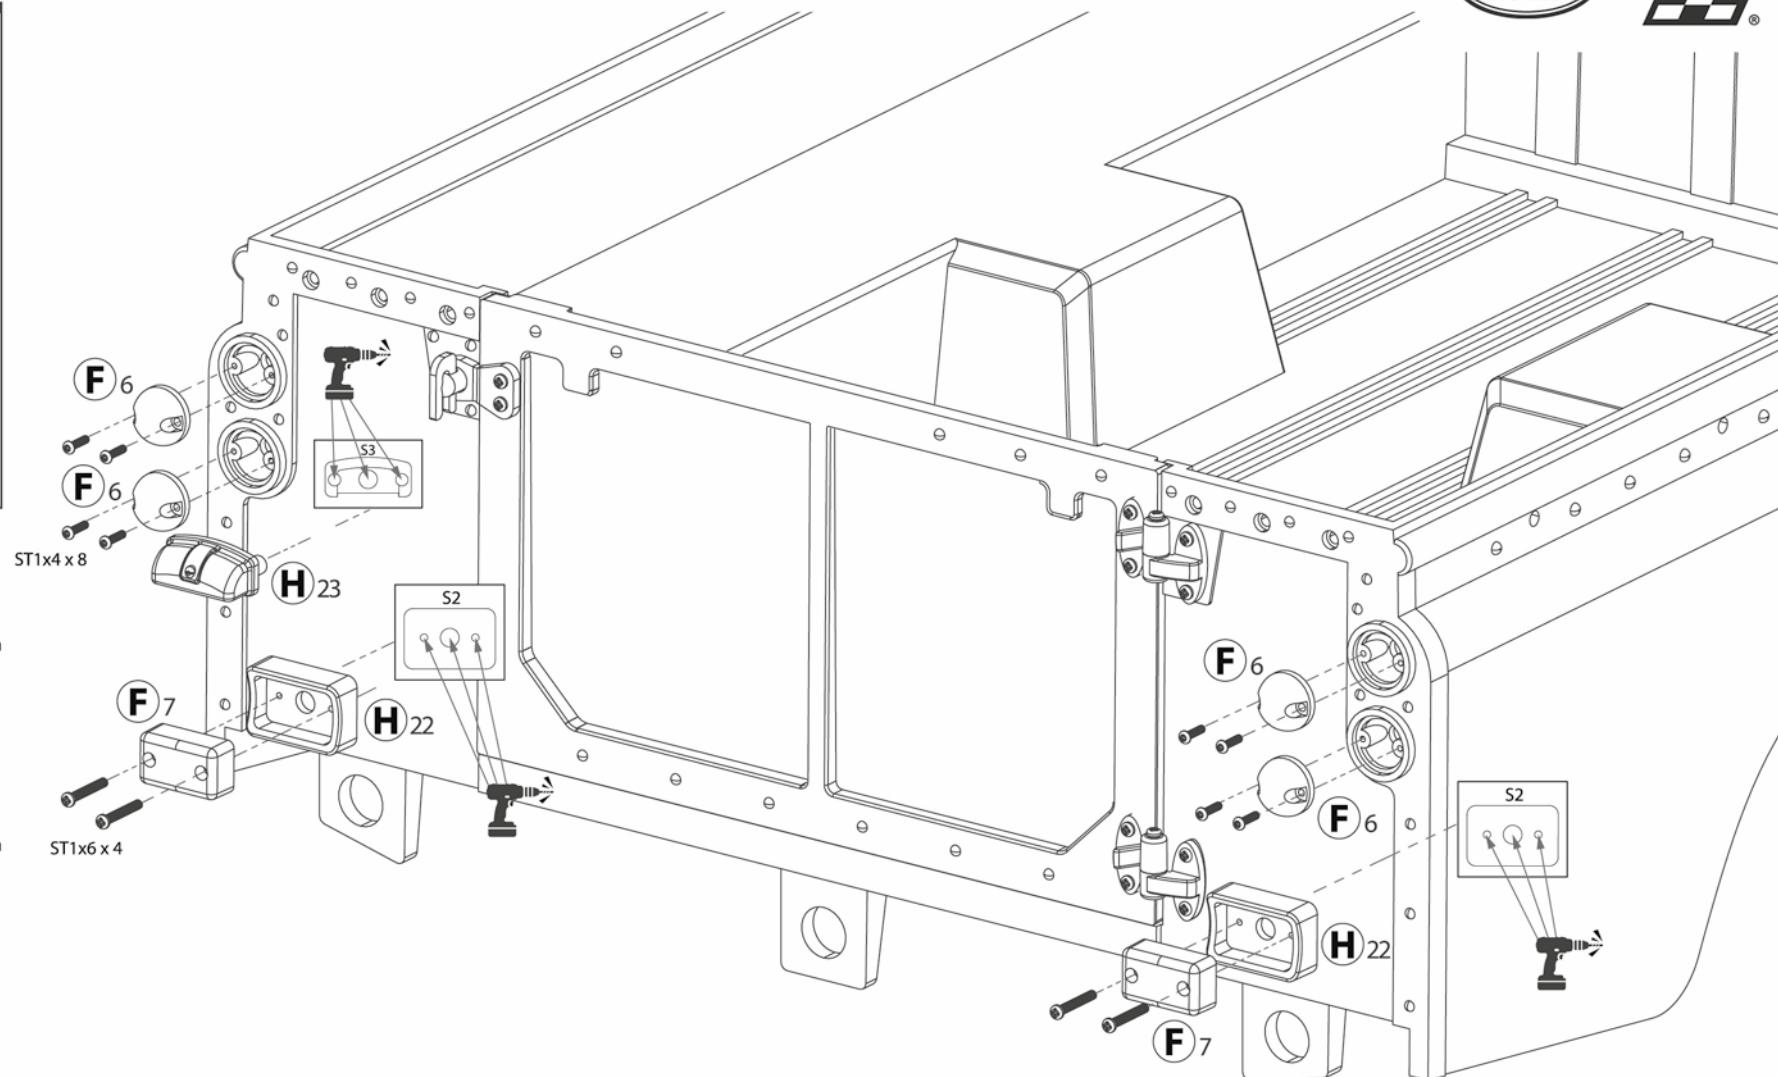

9

Attach rear light lenses with eight ST1x4 screws.

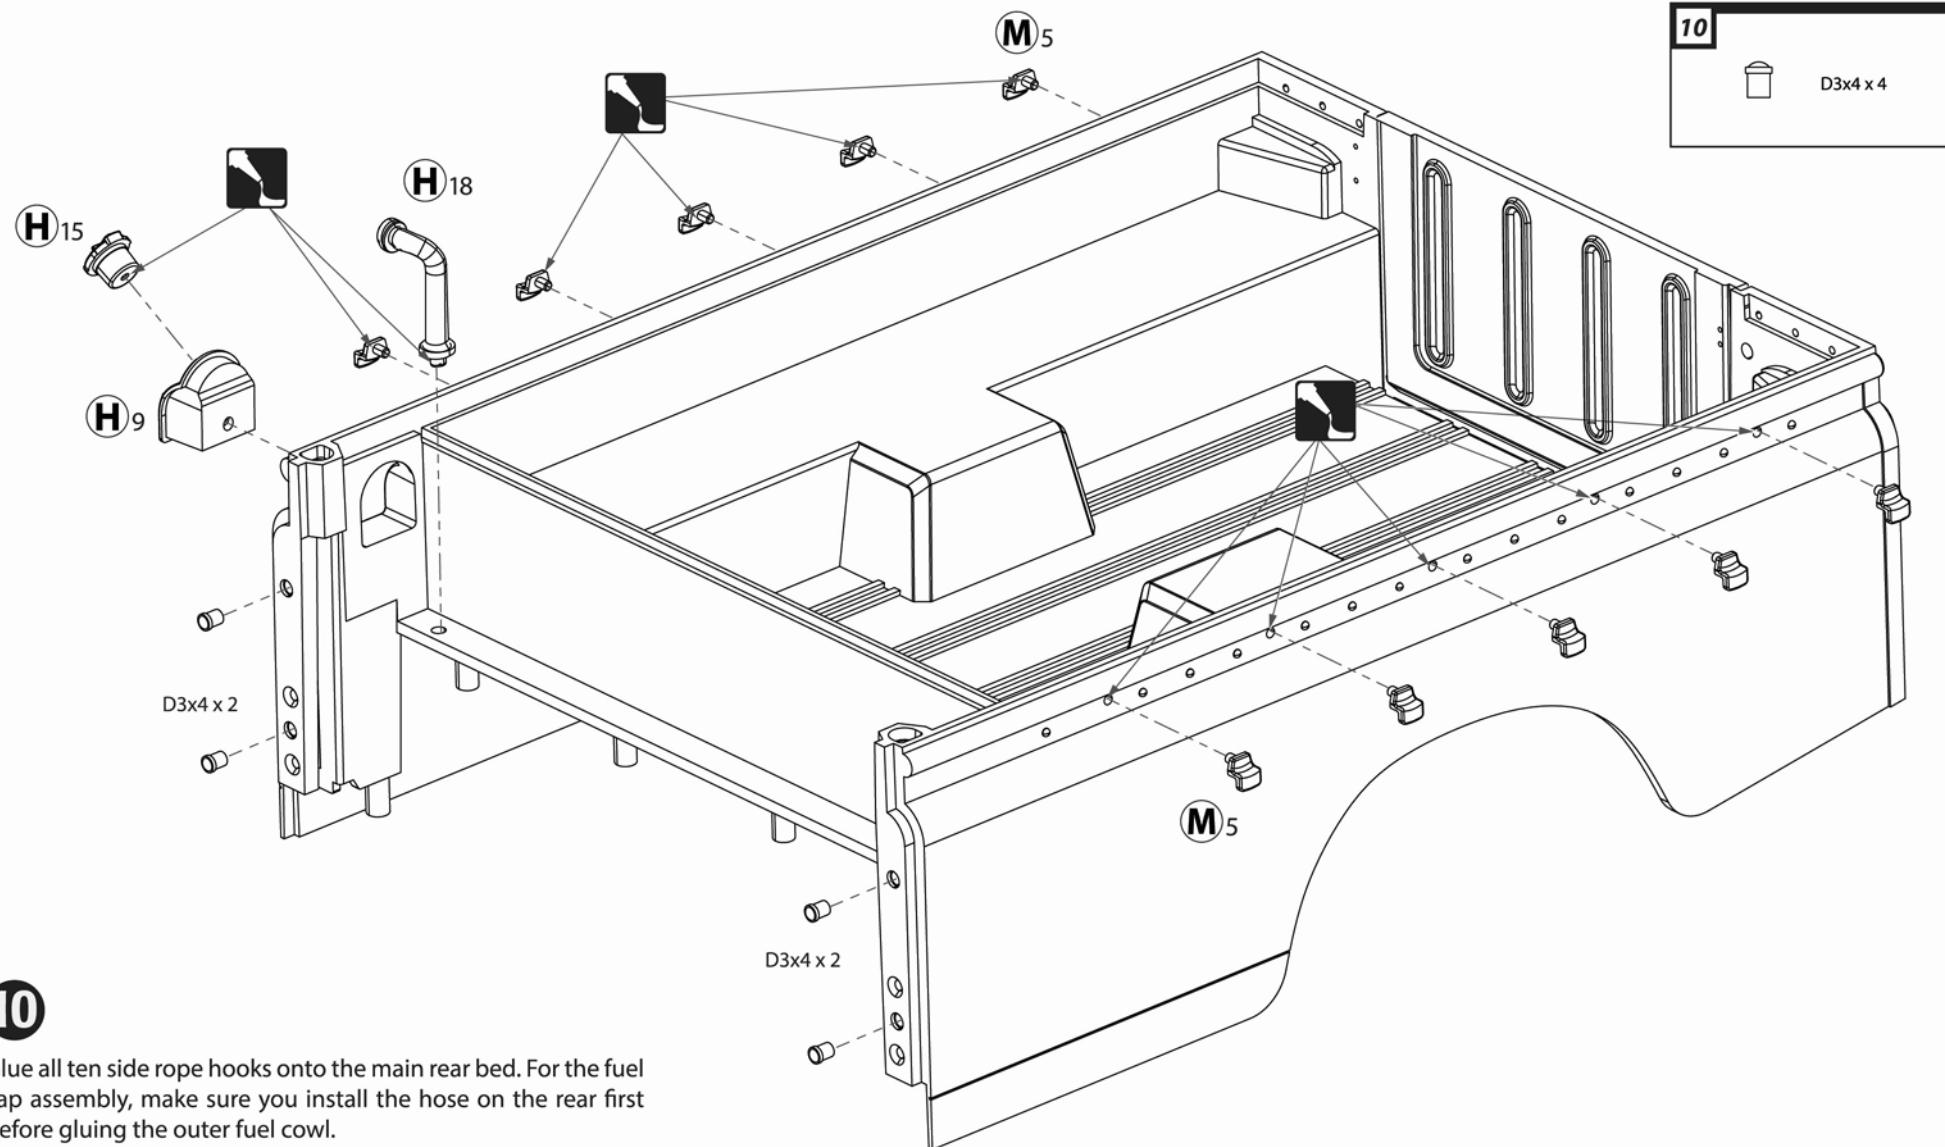



10

Glue all ten side rope hooks onto the main rear bed. For the fuel cap assembly, make sure you install the hose on the rear first before gluing the outer fuel cowl.


Insert four D3x4 spring plunger catch into the bed as indicated.

11

Attach the gear stick, hi/low stick, 2WD/4WD stick, handbrake and foot pedals with a touch of glue to the interior floor panel.

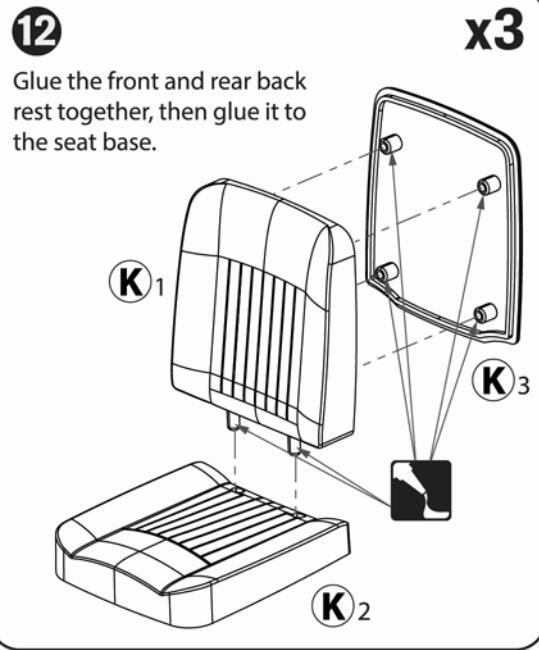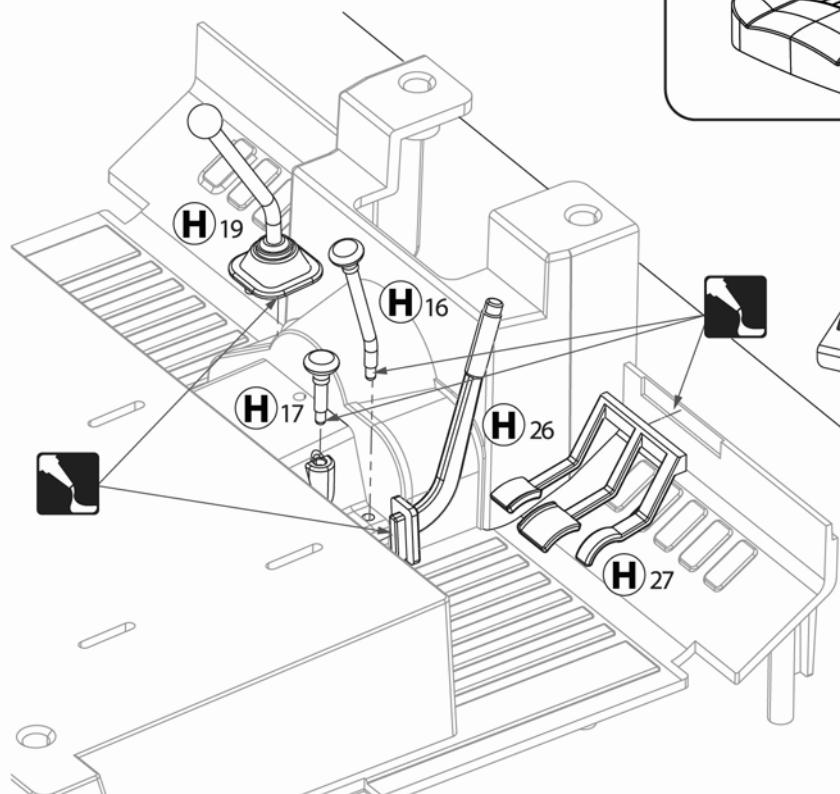
13


Glue the left and right front floor panels to the main floor panel. Attach the seats with six ST2x6 screws. Adjust the seats forward and backwards to your desired position.

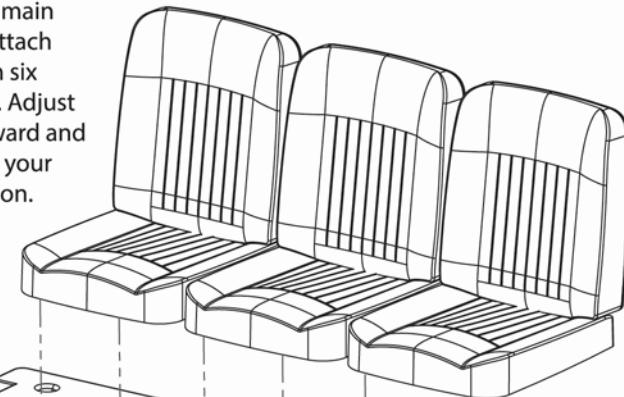
13

ST2x6 x 6




ARE YOU BUILDING A HARDDTOP OR CONVERTIBLE TRUCK?

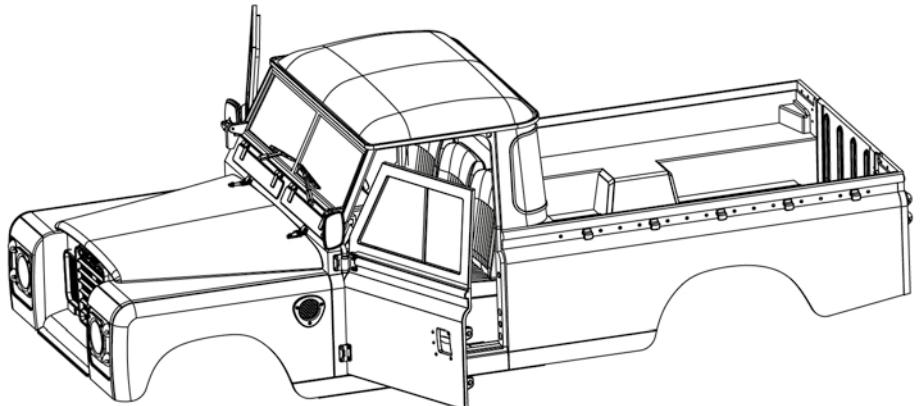

HARDDTOP

P.16

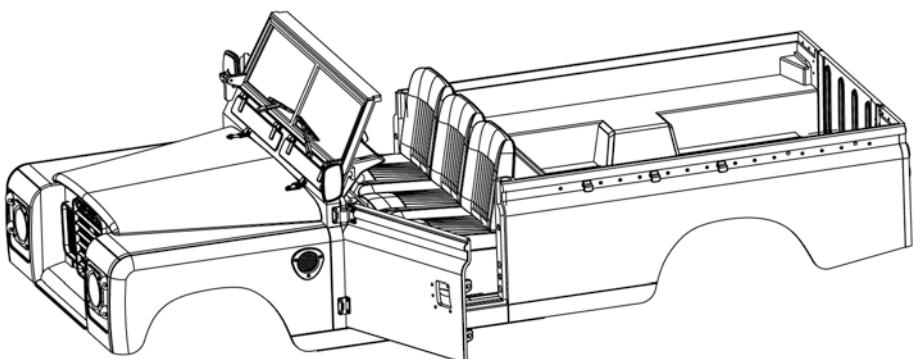




CONVERTIBLE

P.27


Continue to the next page if hardtop. Skip to page 27 if convertible.



PICK YOUR SIDE MIRROR LOCATION

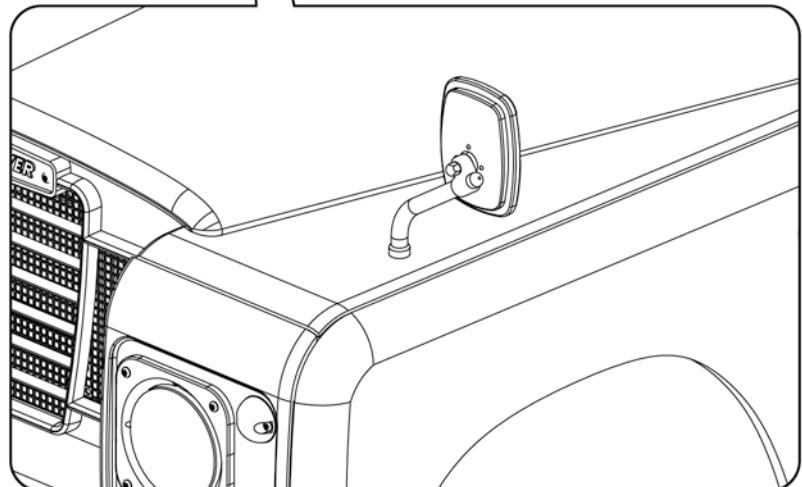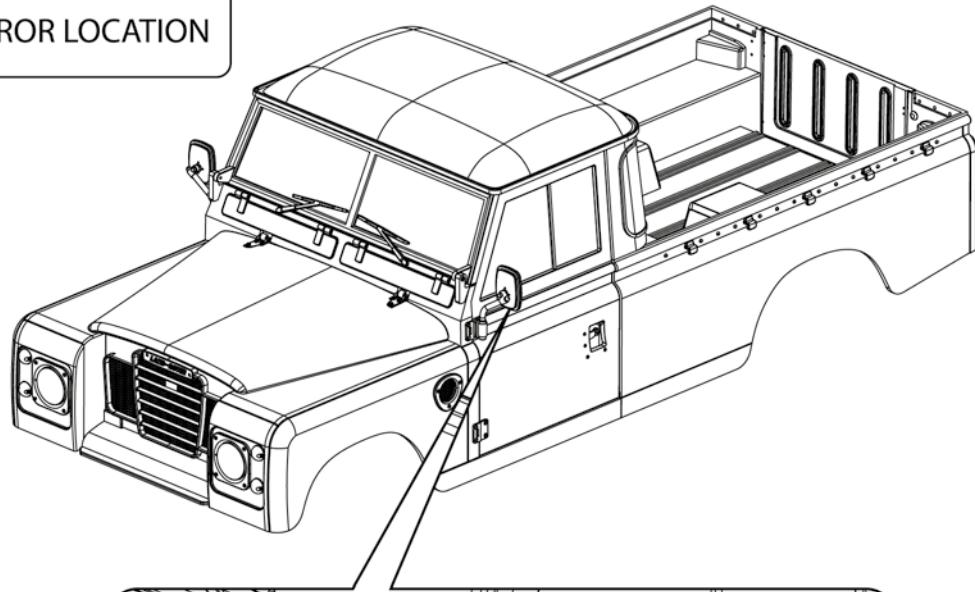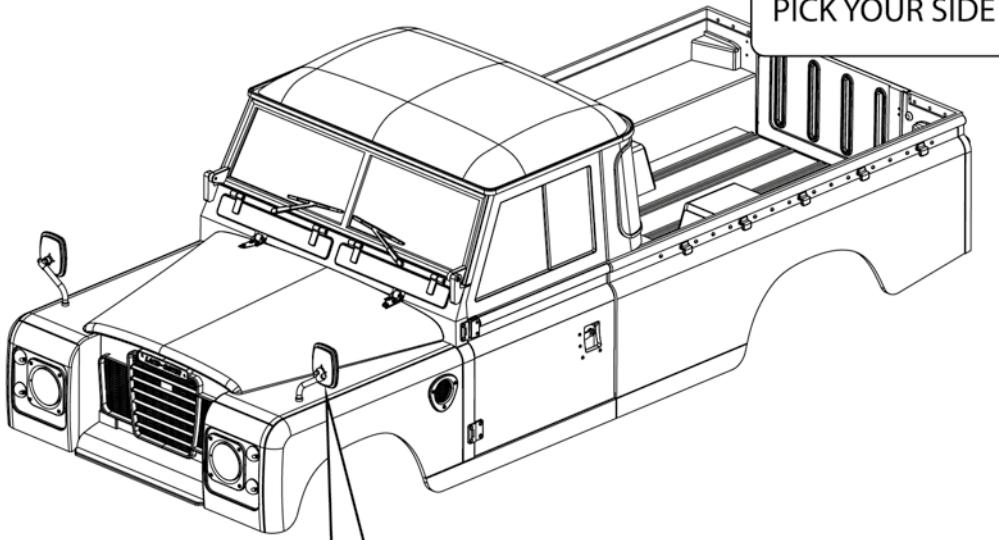


FENDER MIRRORS

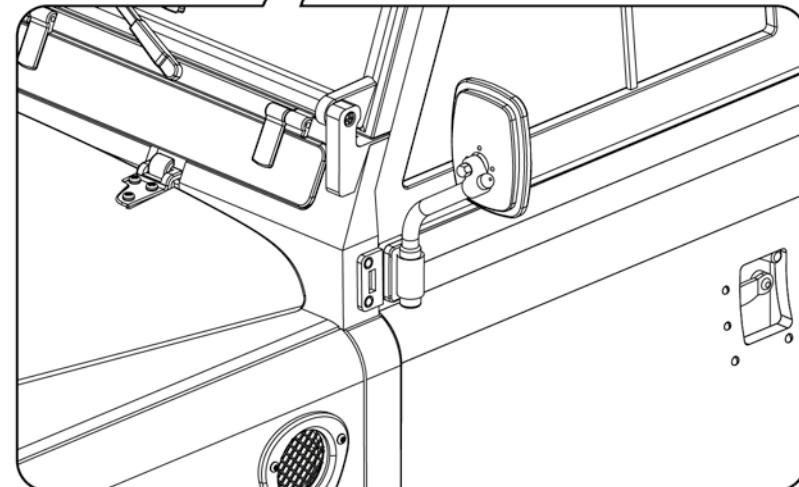

DOOR MIRRORS




FENDER MIRRORS

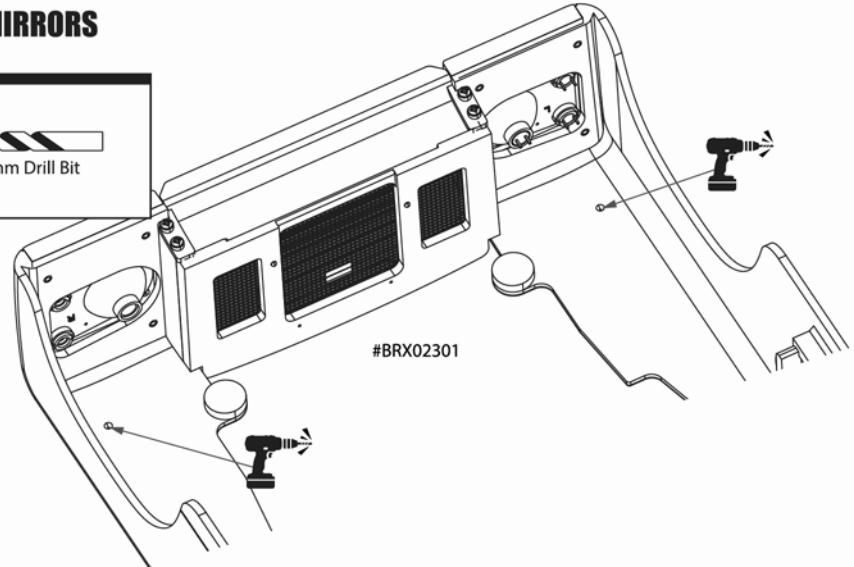


14

Drill two 2.4mm holes into the front main body from underneath as indicated. Use the provided double-sided tape (thin) to stick the mirror plate to the rubber mirror head and push the head into the mirror arm. Push the mirror arm into the holes that are drilled. Then glue from the bottom into position. Repeat on the other side.

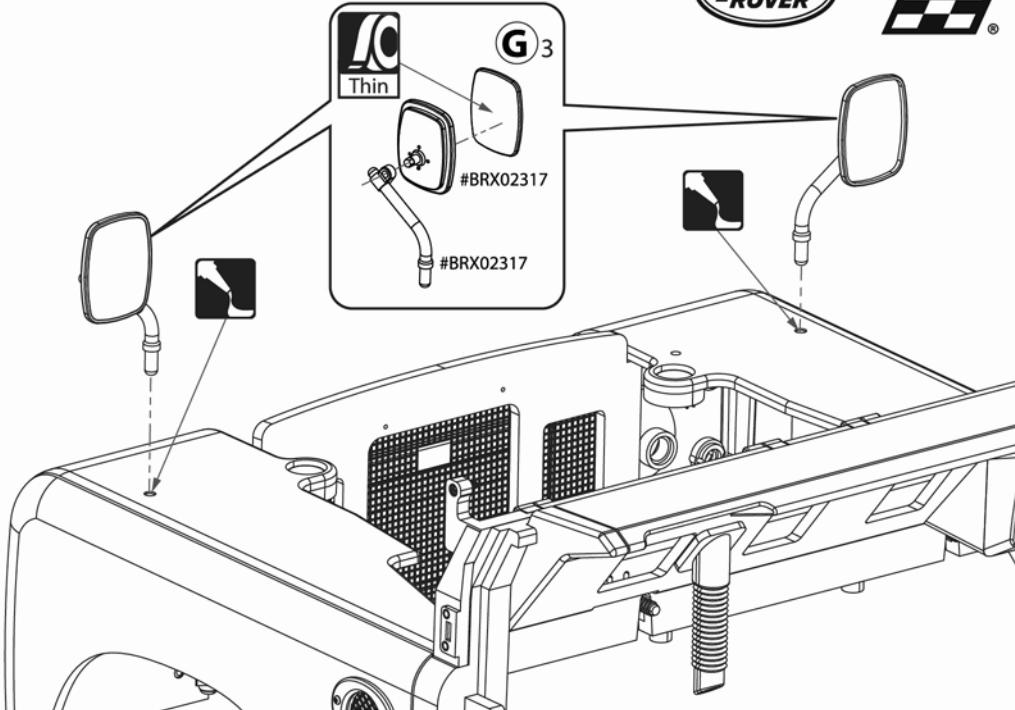


DOOR MIRRORS

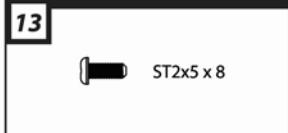

14


Use the provided double-sided tape (thin) to stick the mirror plate to the rubber mirror head and push the head into the mirror arm. Glue the mirror arm to the mirror arm holder. Next, glue the assembly to the mirror retaining plate, and then glue the whole assembly to the door. Repeat for the other side.


Clip the clear side window into position. Insert the inner and outer door handles into the door and door lock plate and glue into position. Attach door hinge using four ST2x5 screws. Repeat on the other side.

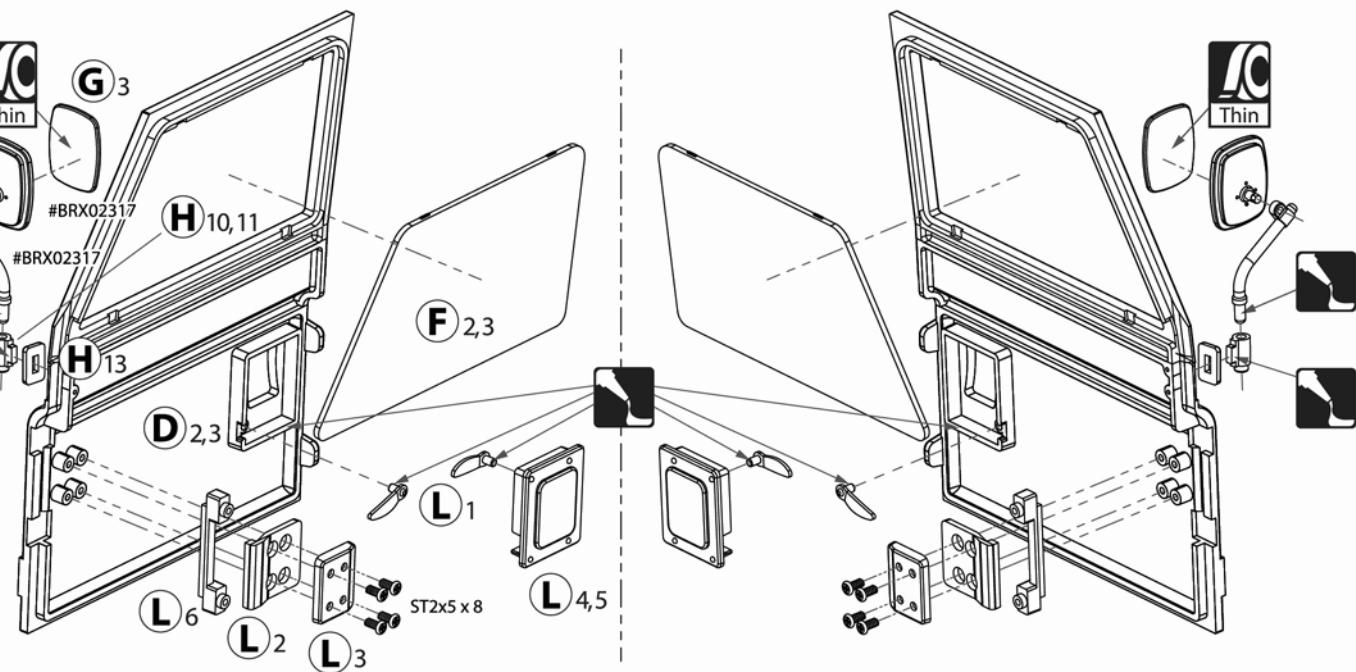

15


Attach the left and right doors to the front main body with four ST2x6 screws.

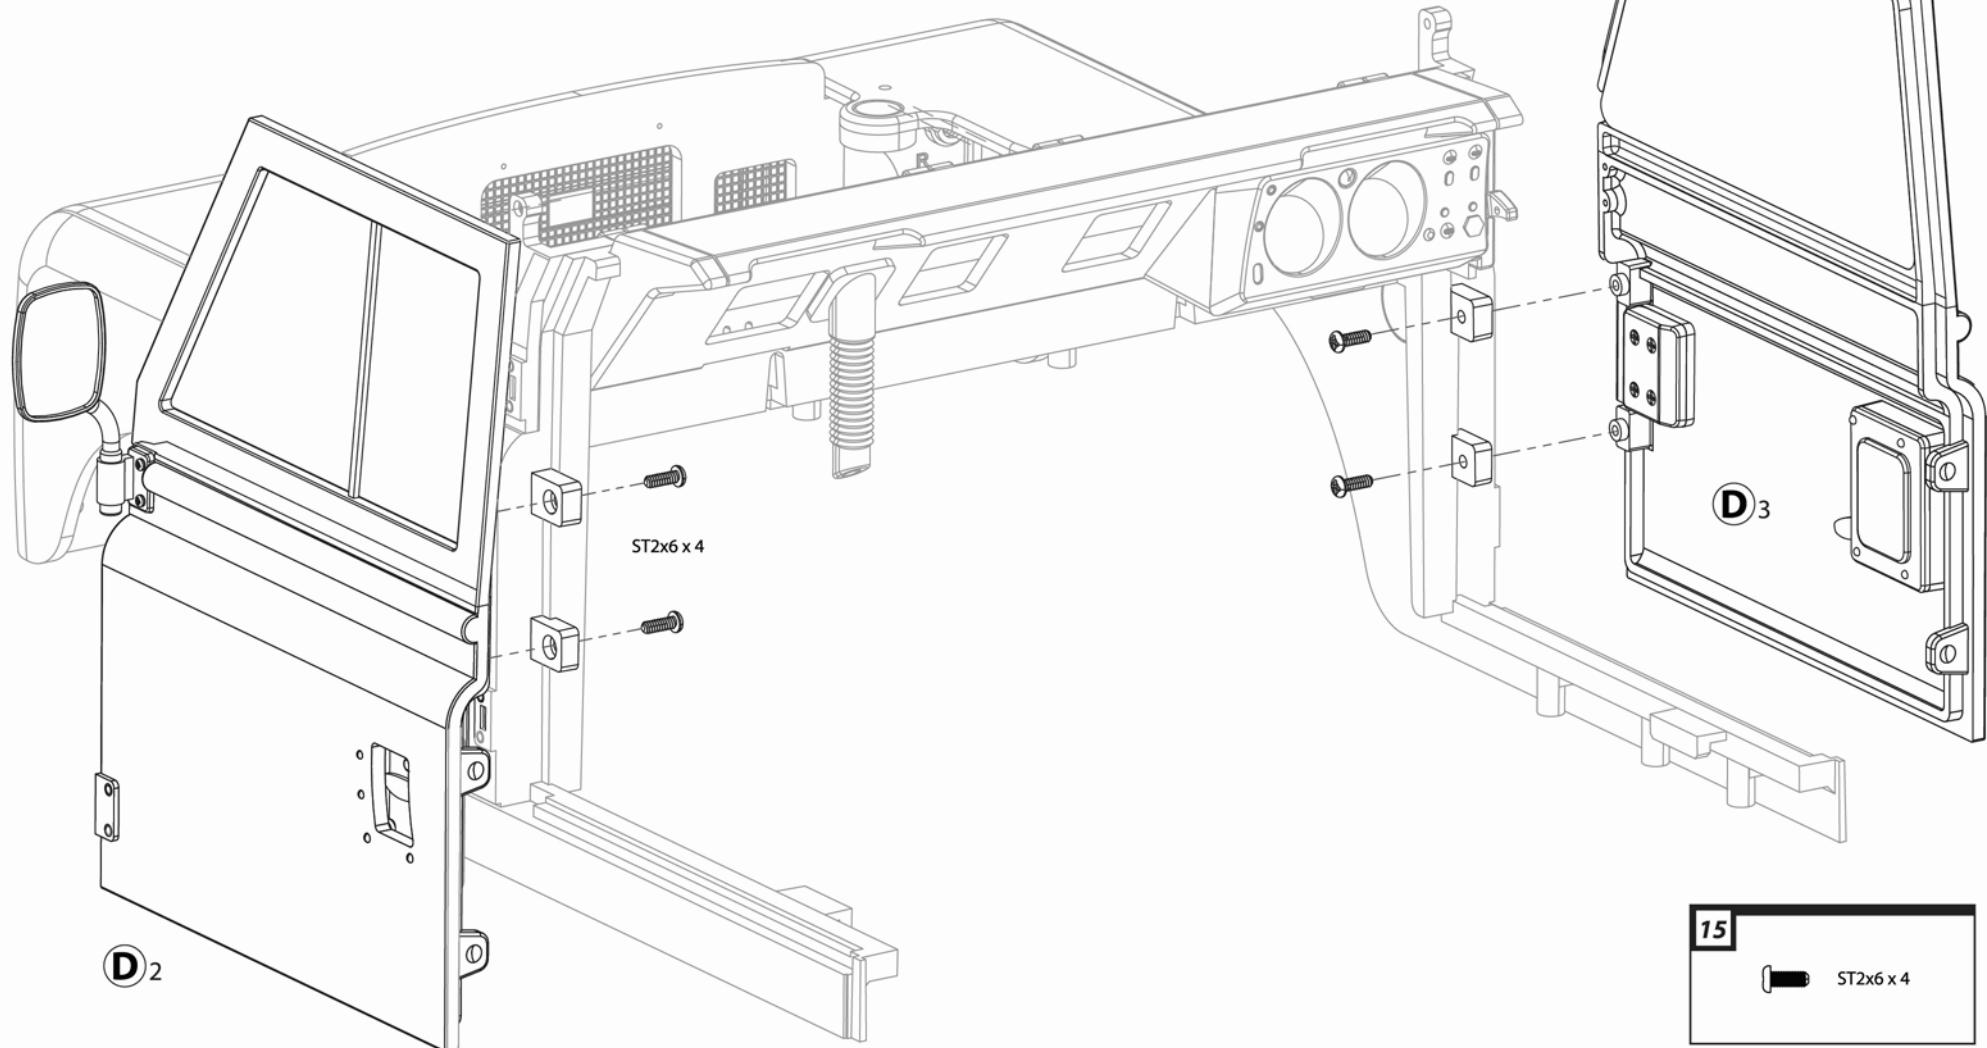

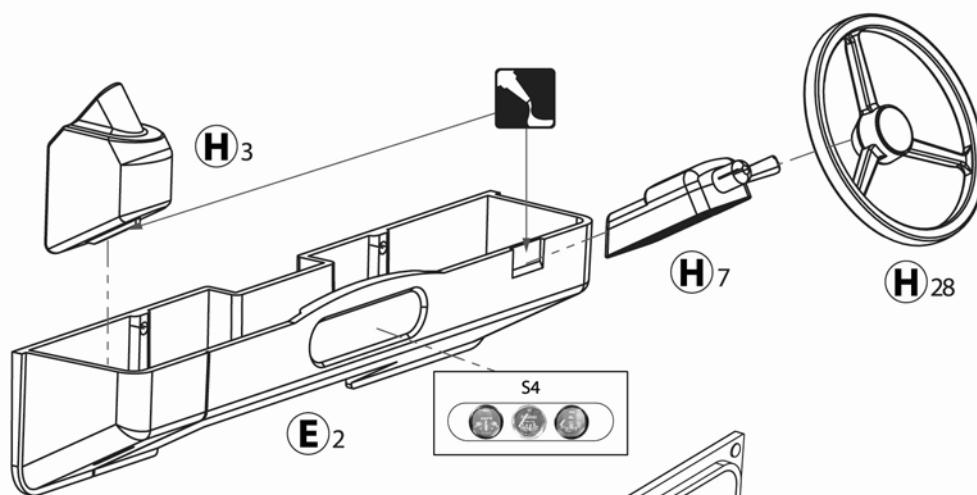


16

Glue the wiper cable cover and the steering column to the lower dash. Push the steering wheel onto the steering column and attach decal sticker.

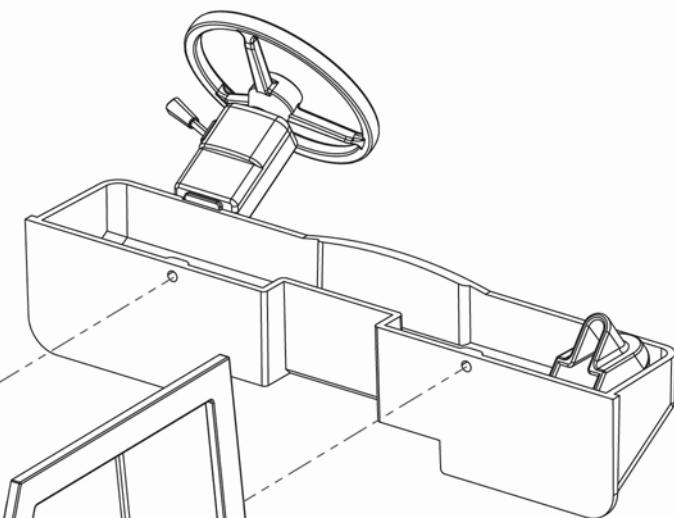

17

Attach the lower dash to the front main body using two ST2.6x6 screws.

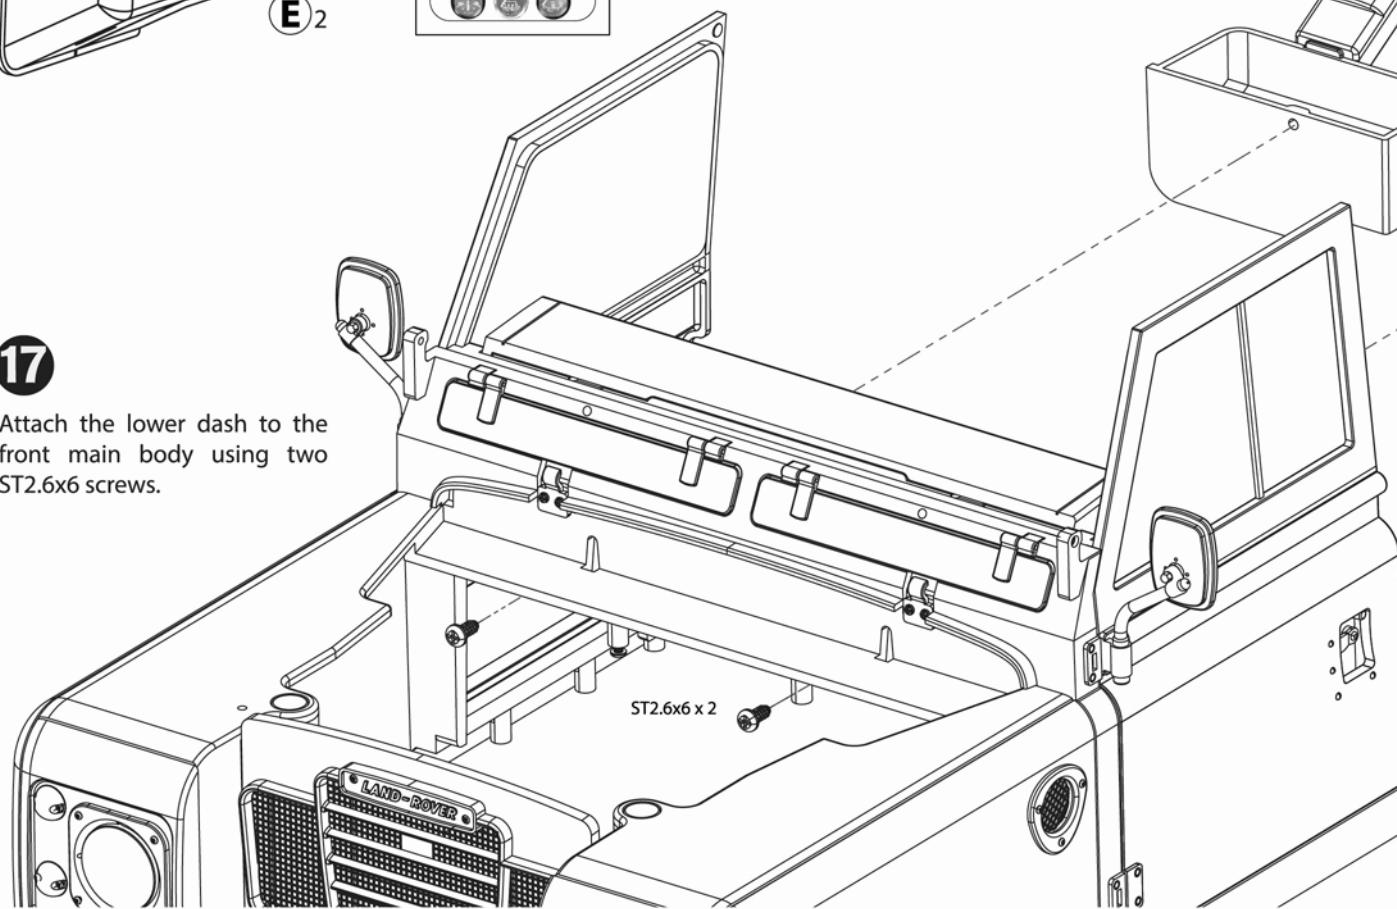


17


ST2.6x6 x 2




Decal Sticker

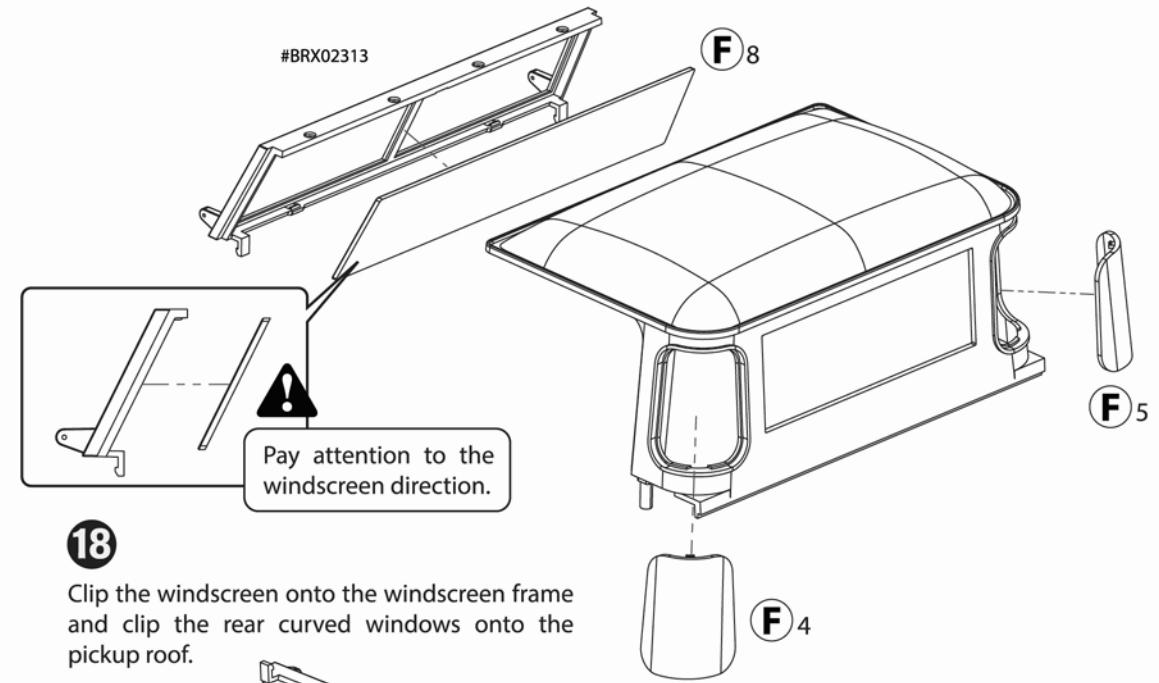**18**

Clip the windscreens onto the windscreen frame and clip the rear curved windows onto the pickup roof.

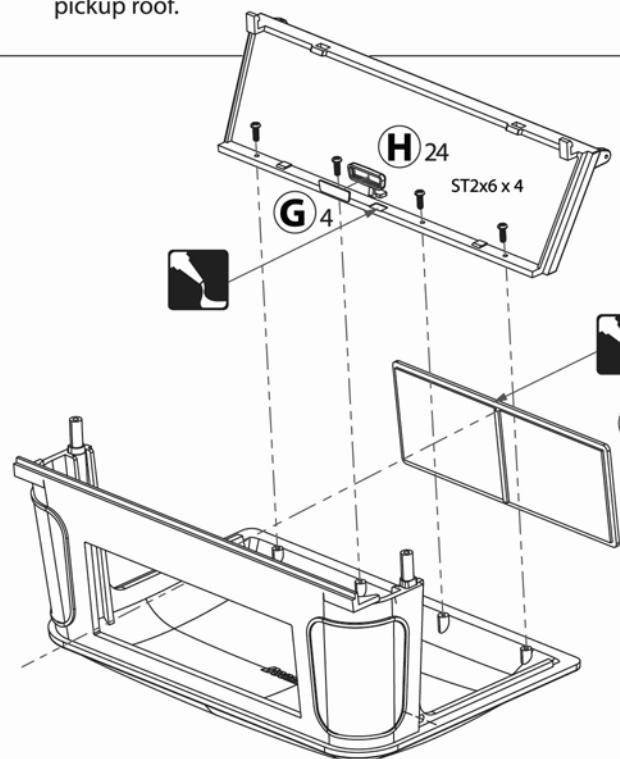**19**


Glue the rear window onto the pickup roof and the interior mirror onto the windscreen frame. Attach the frame to the pickup roof using four ST2x6 screws.

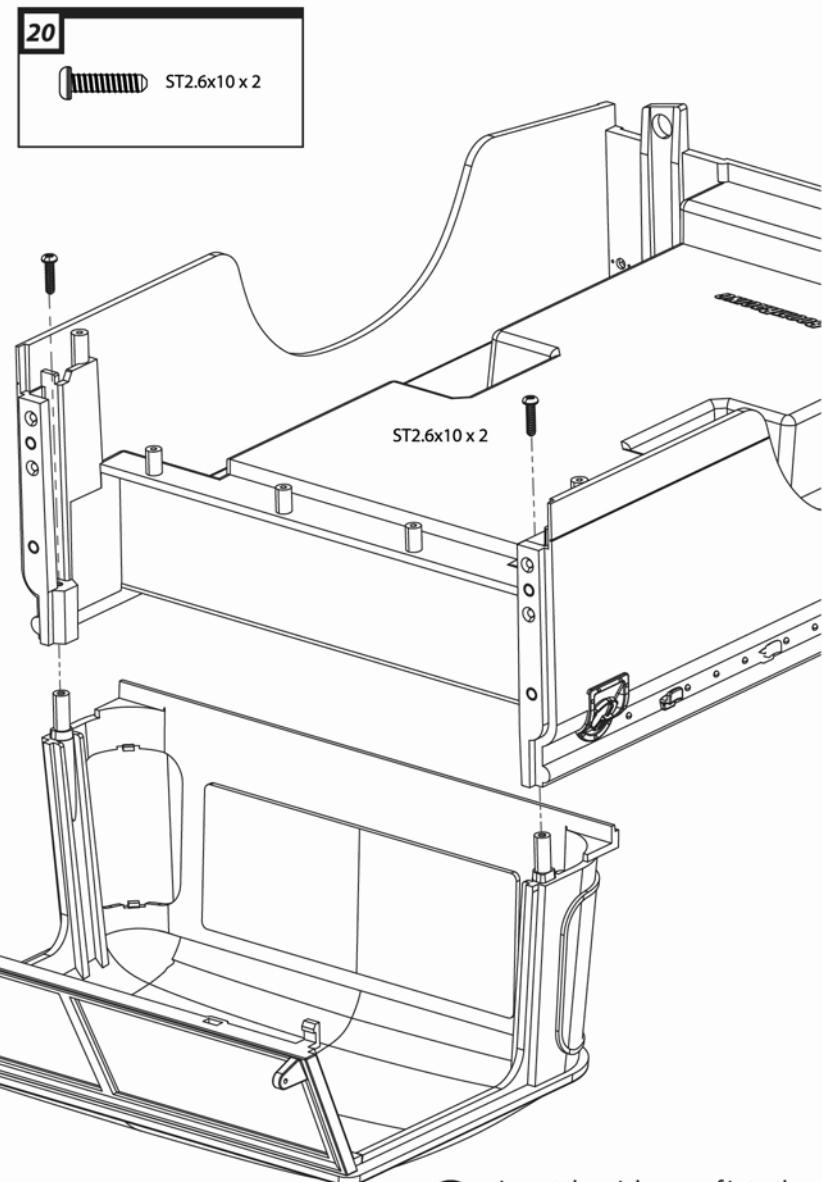**20**


Insert the pickup roof into the rear bed and tighten it down with two ST2.6x10 screws.




21 Line up the front main body with the rear bed and roof. Make sure the windscreens frame and vent panel hinge mounts line up properly.

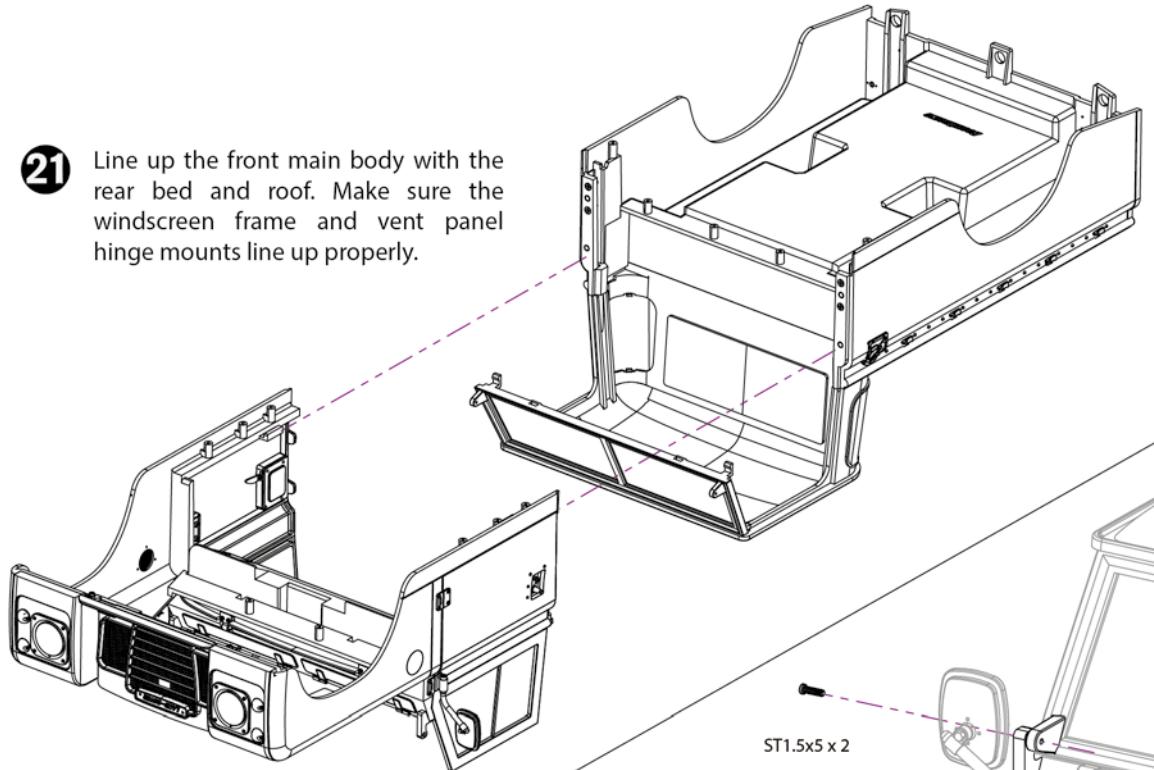



22 Attach the windscreens frame to the vent panel hinge mounts with two ST1.5x5 screws.

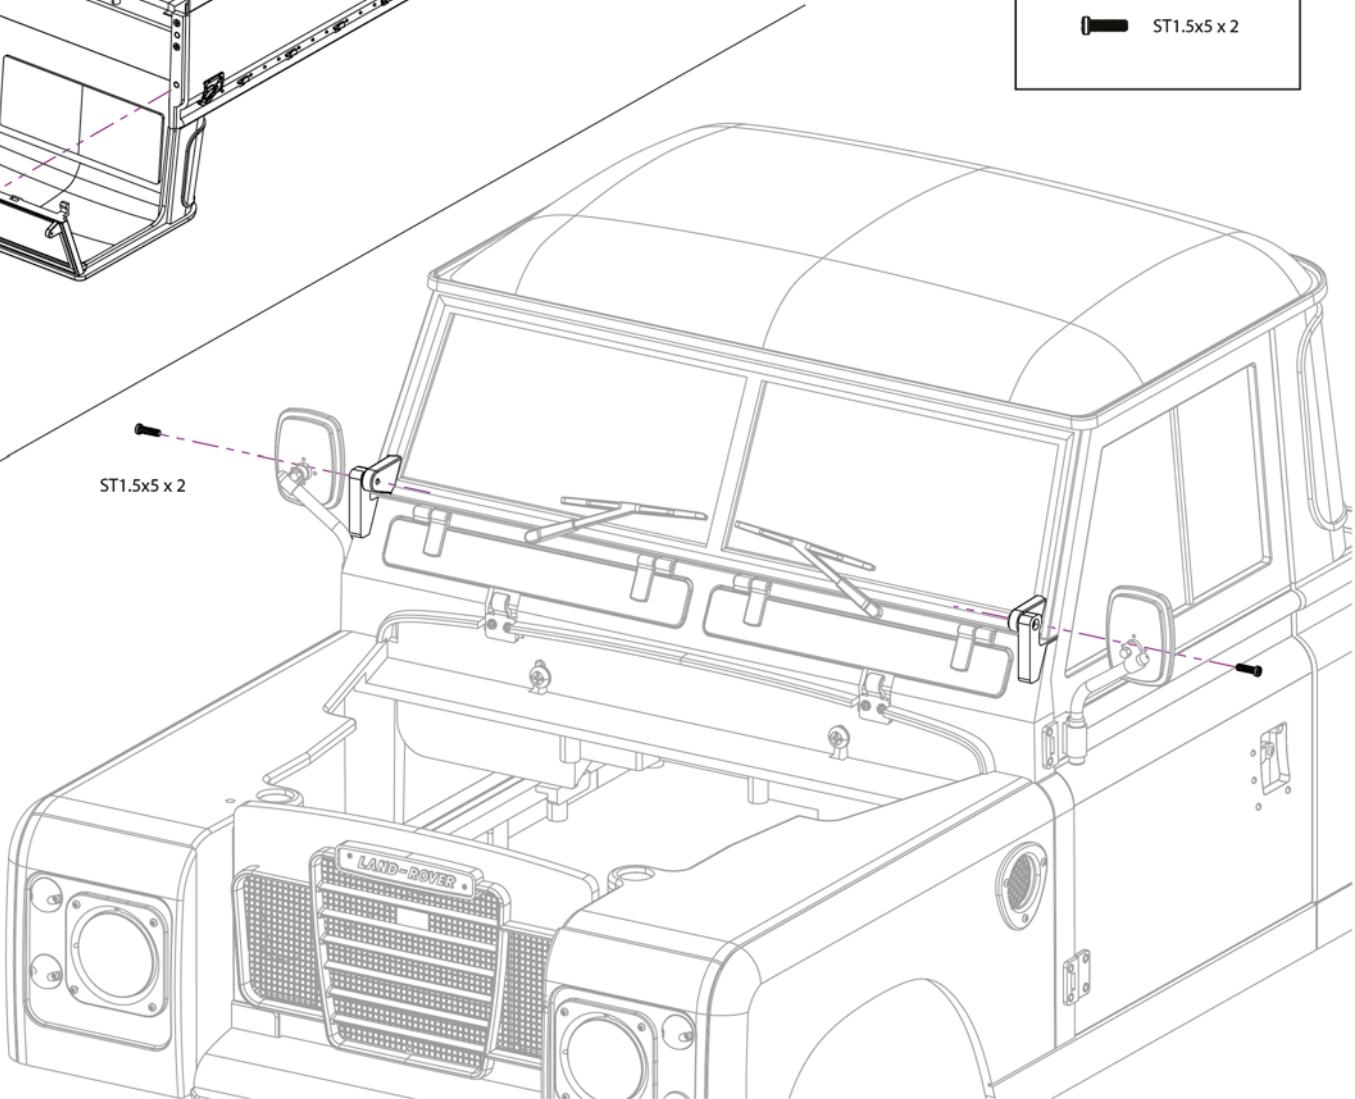

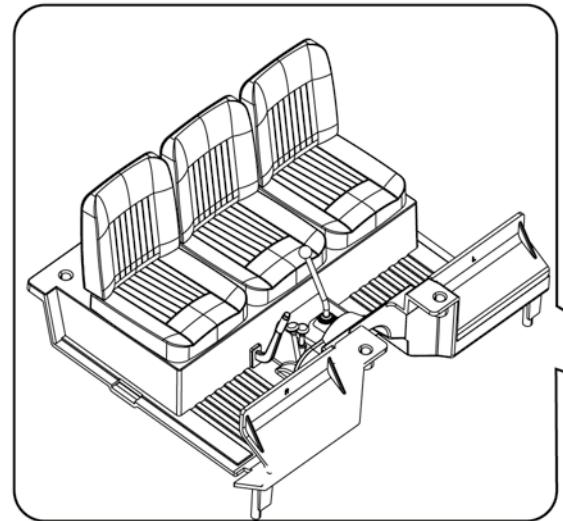



23

Carefully flip the main body and bed upside down.
Use six ST2x8 screws to lock the floor panel into position.

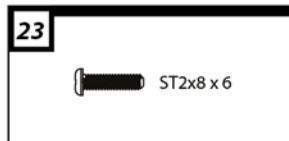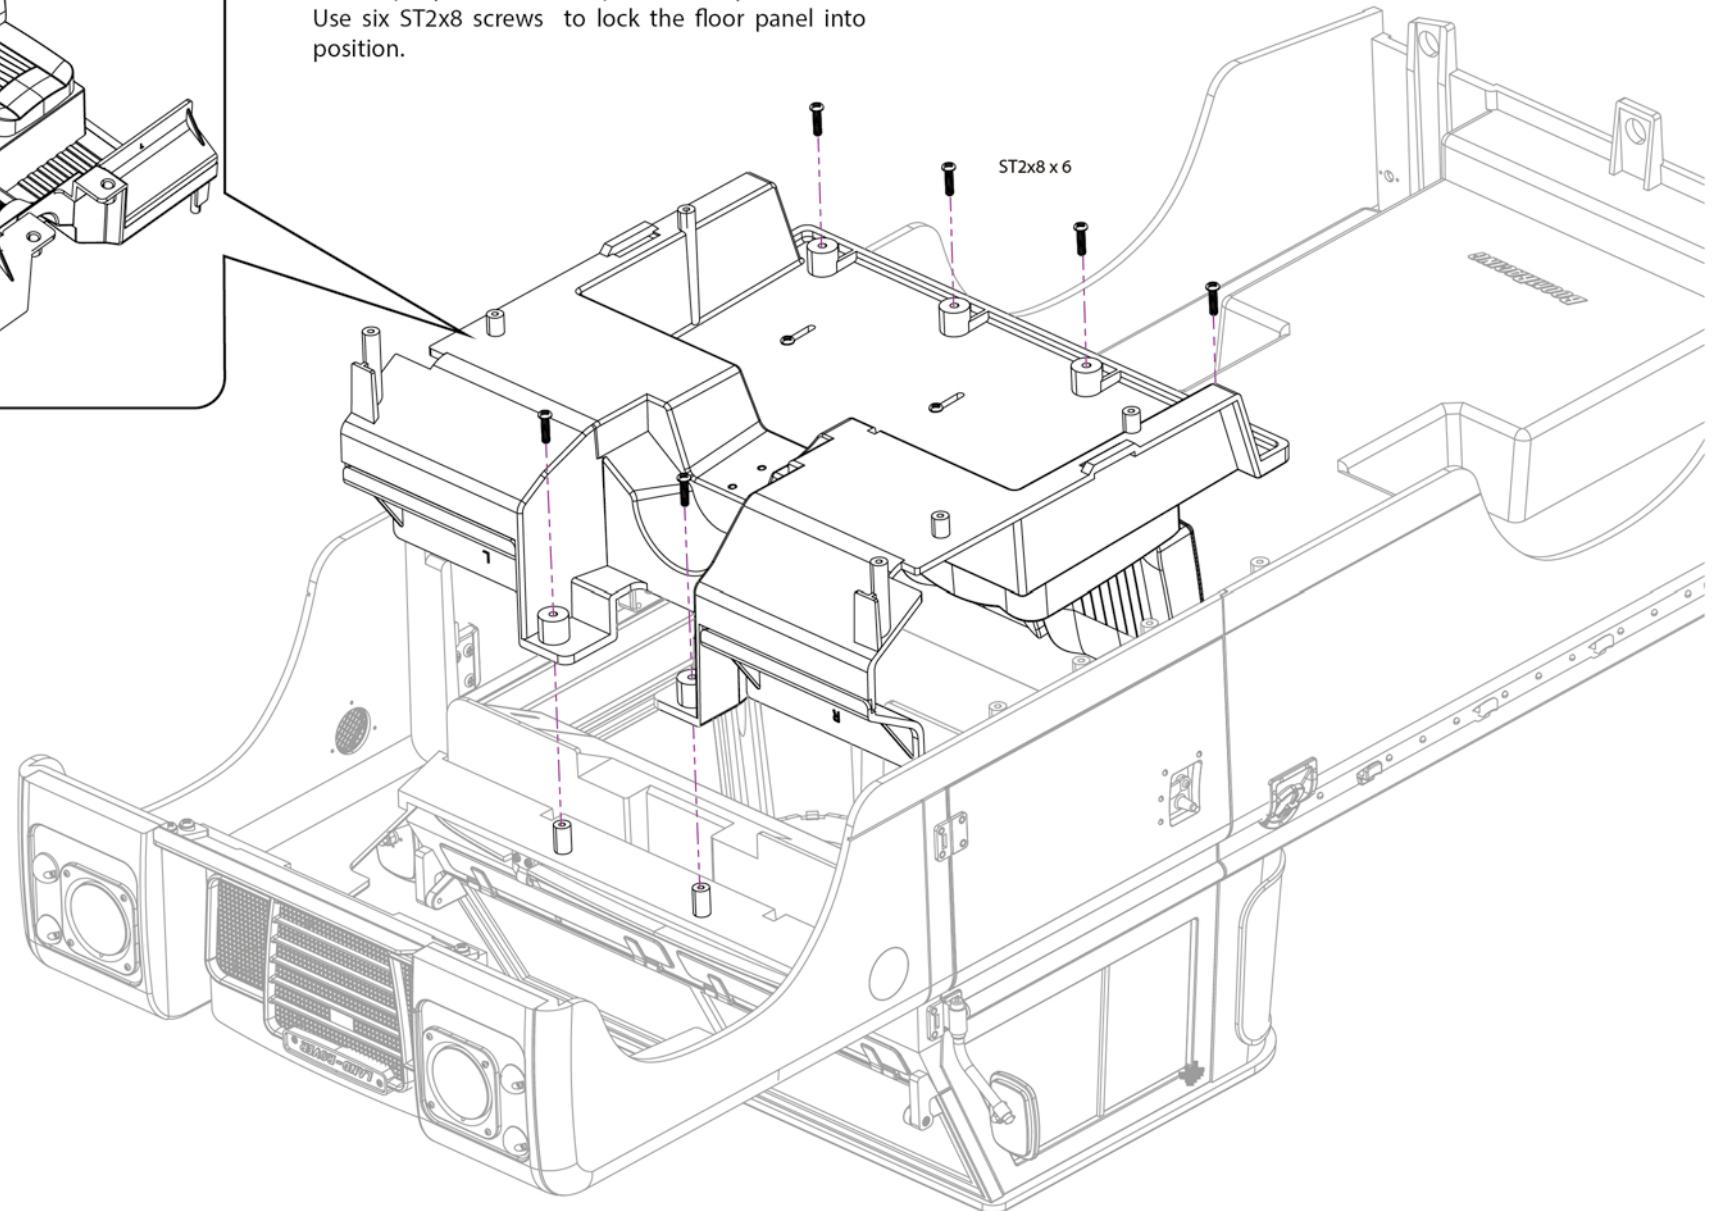







24 Attach the brace to the body using ten STCS2x8 screws to make sure everything is locked into position.

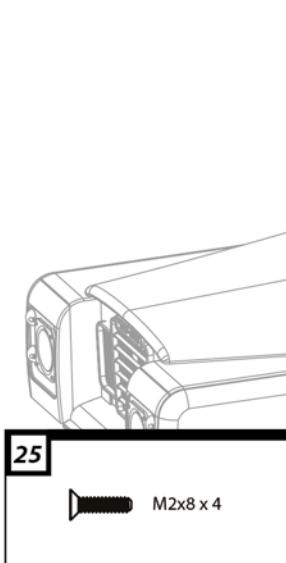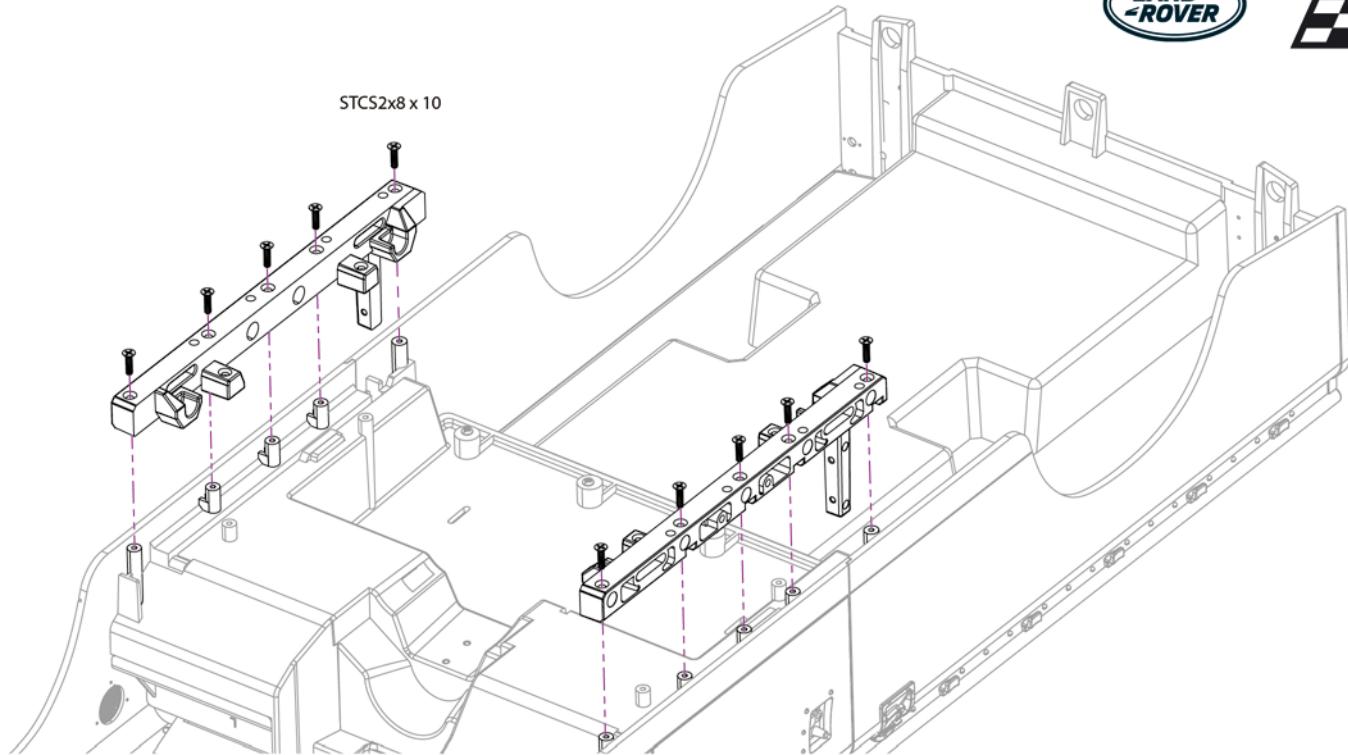

25 Open the doors and fasten two M2x8CS screws on each side into the body brace.


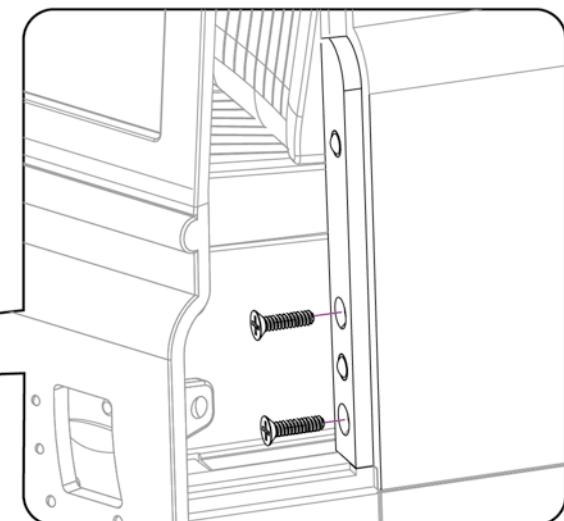


Use the two STCS3x6 screws to adjust the height of the bonnet and how tight they latch to the magnet.

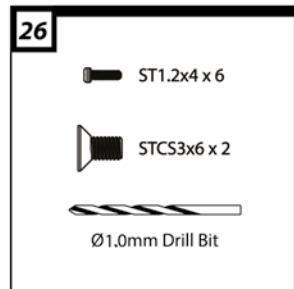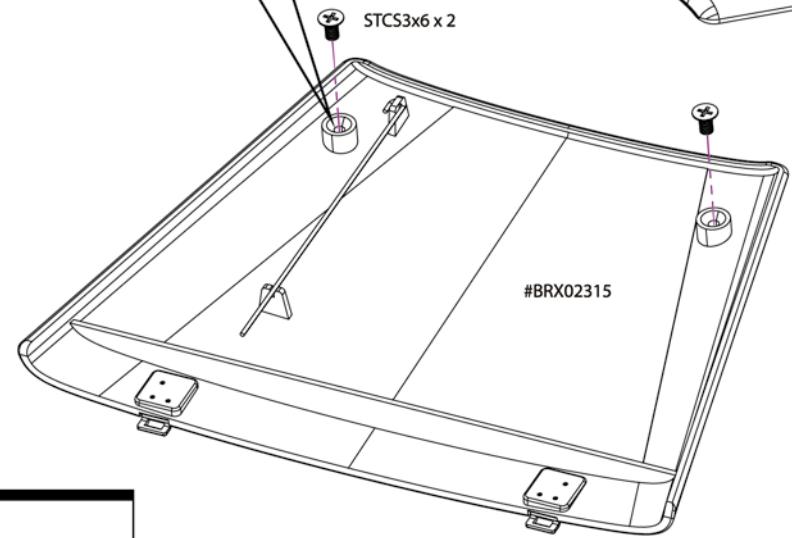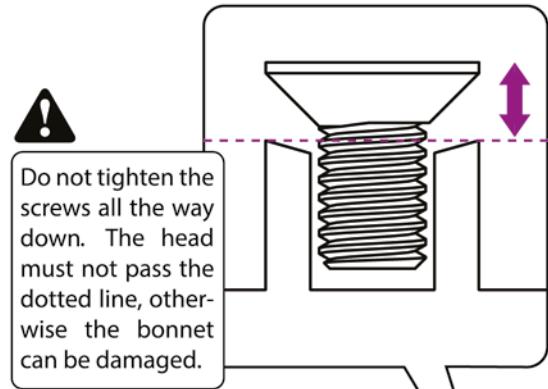



26

Attach the left and right bonnet hinge to the bonnet with six ST1.2x4 screws and two STCS3x6 screws into the bonnet.

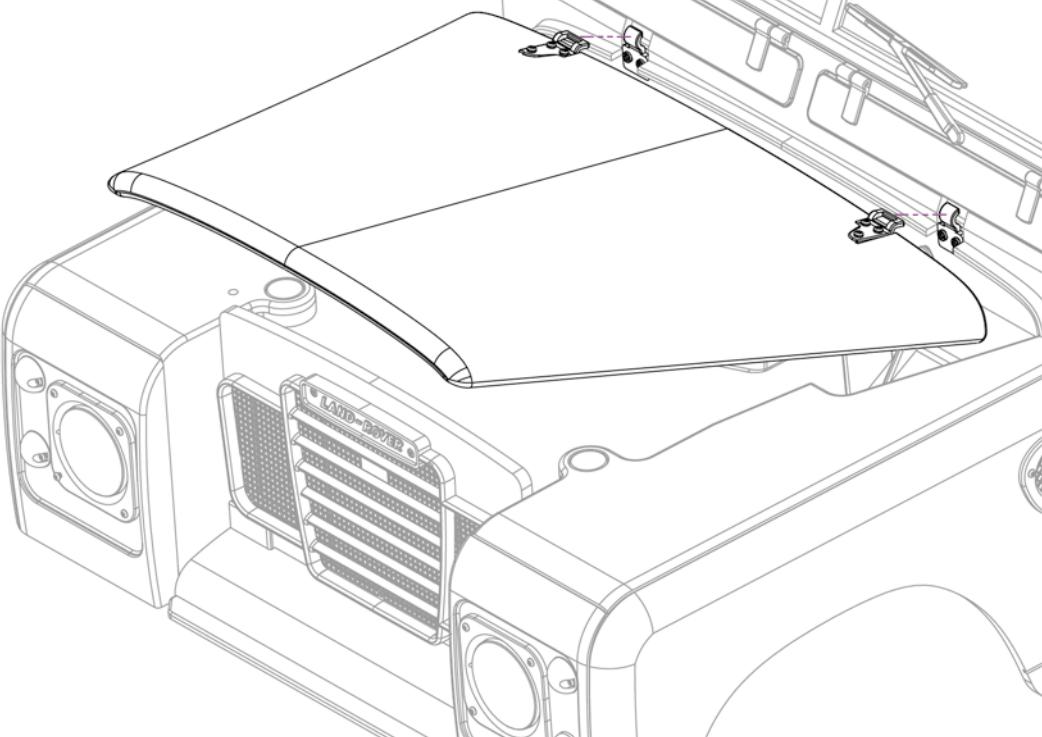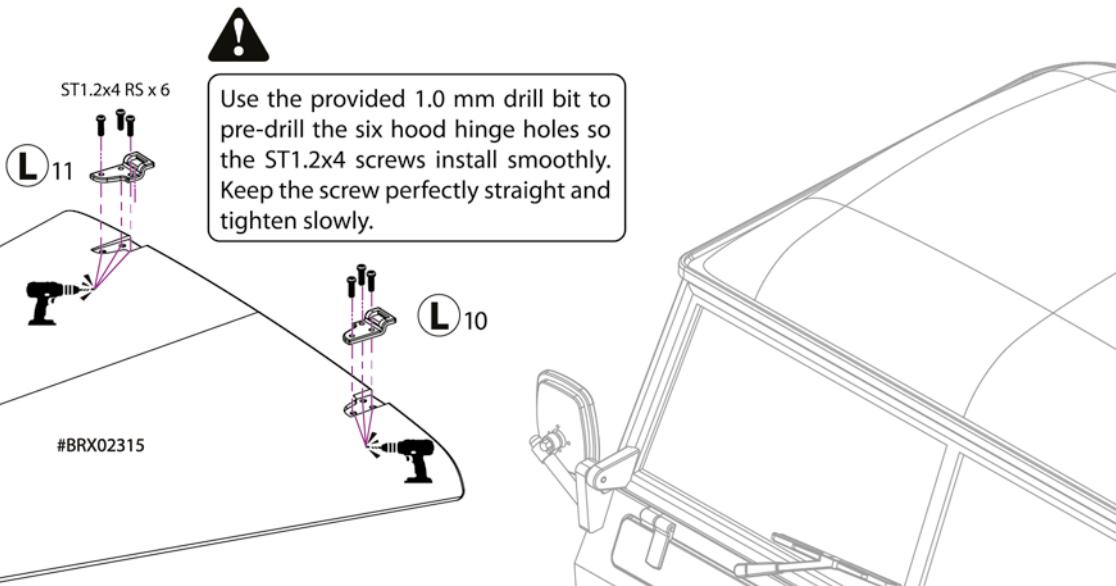




27 Snap the blanking plate onto the front chassis crossmember. Use double-sided tape to attach the license plate to the license plate mount, and the mount to the bumper.

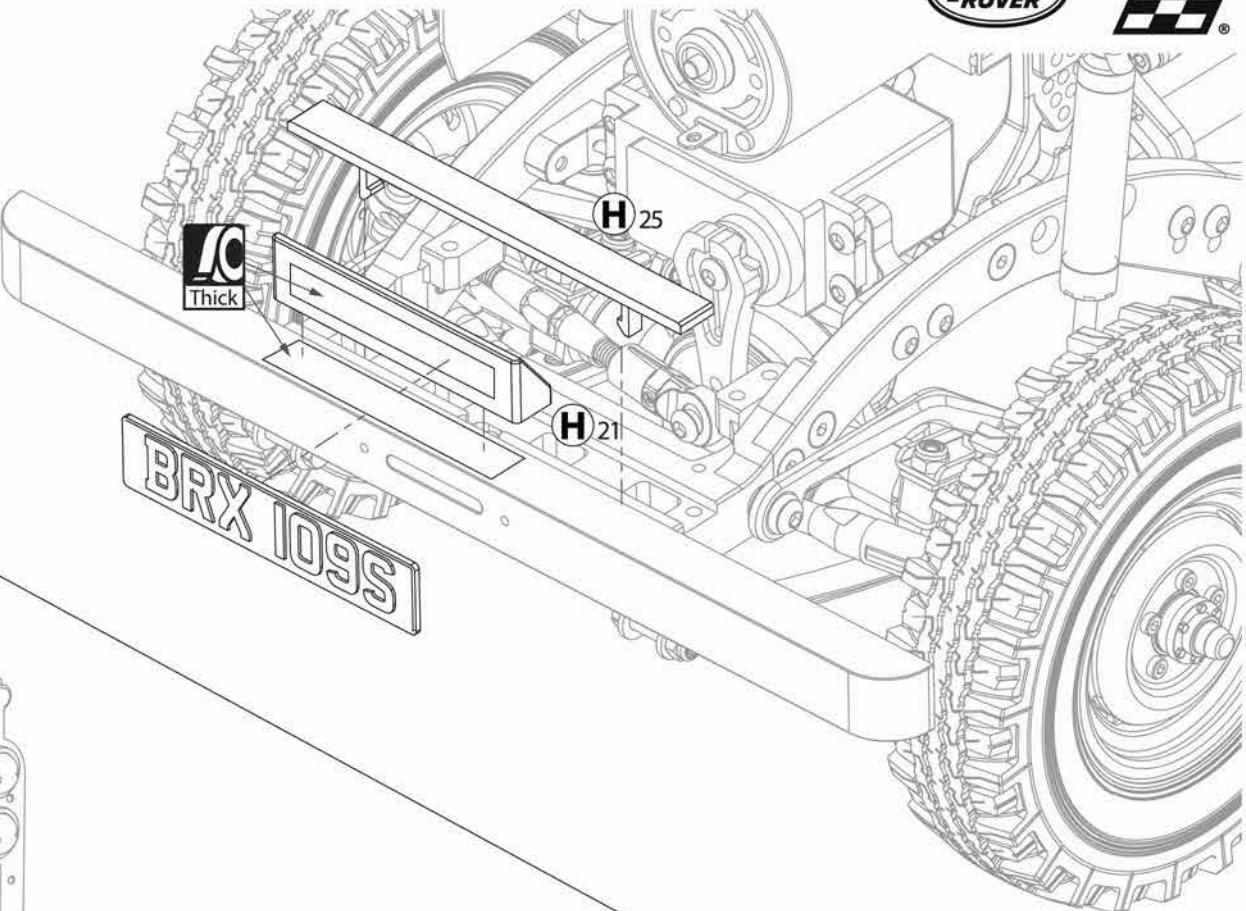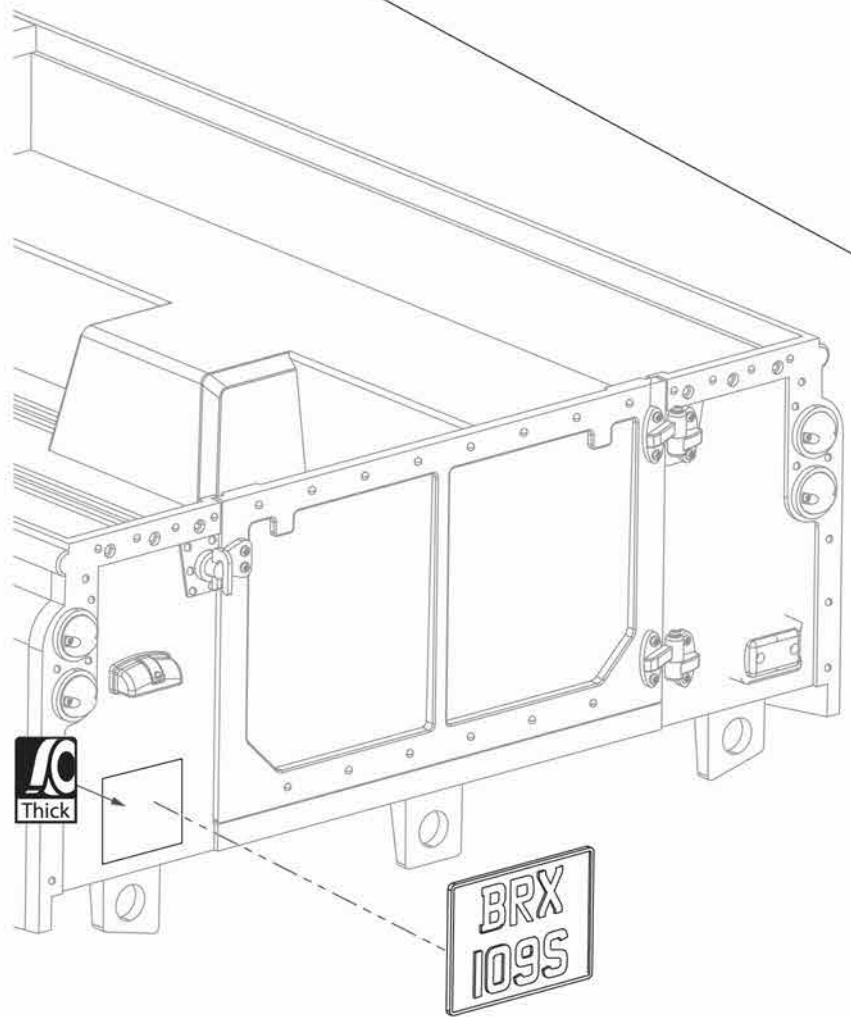





28 Use double-sided tape to attach the rear license plate onto the body below the license plate light.

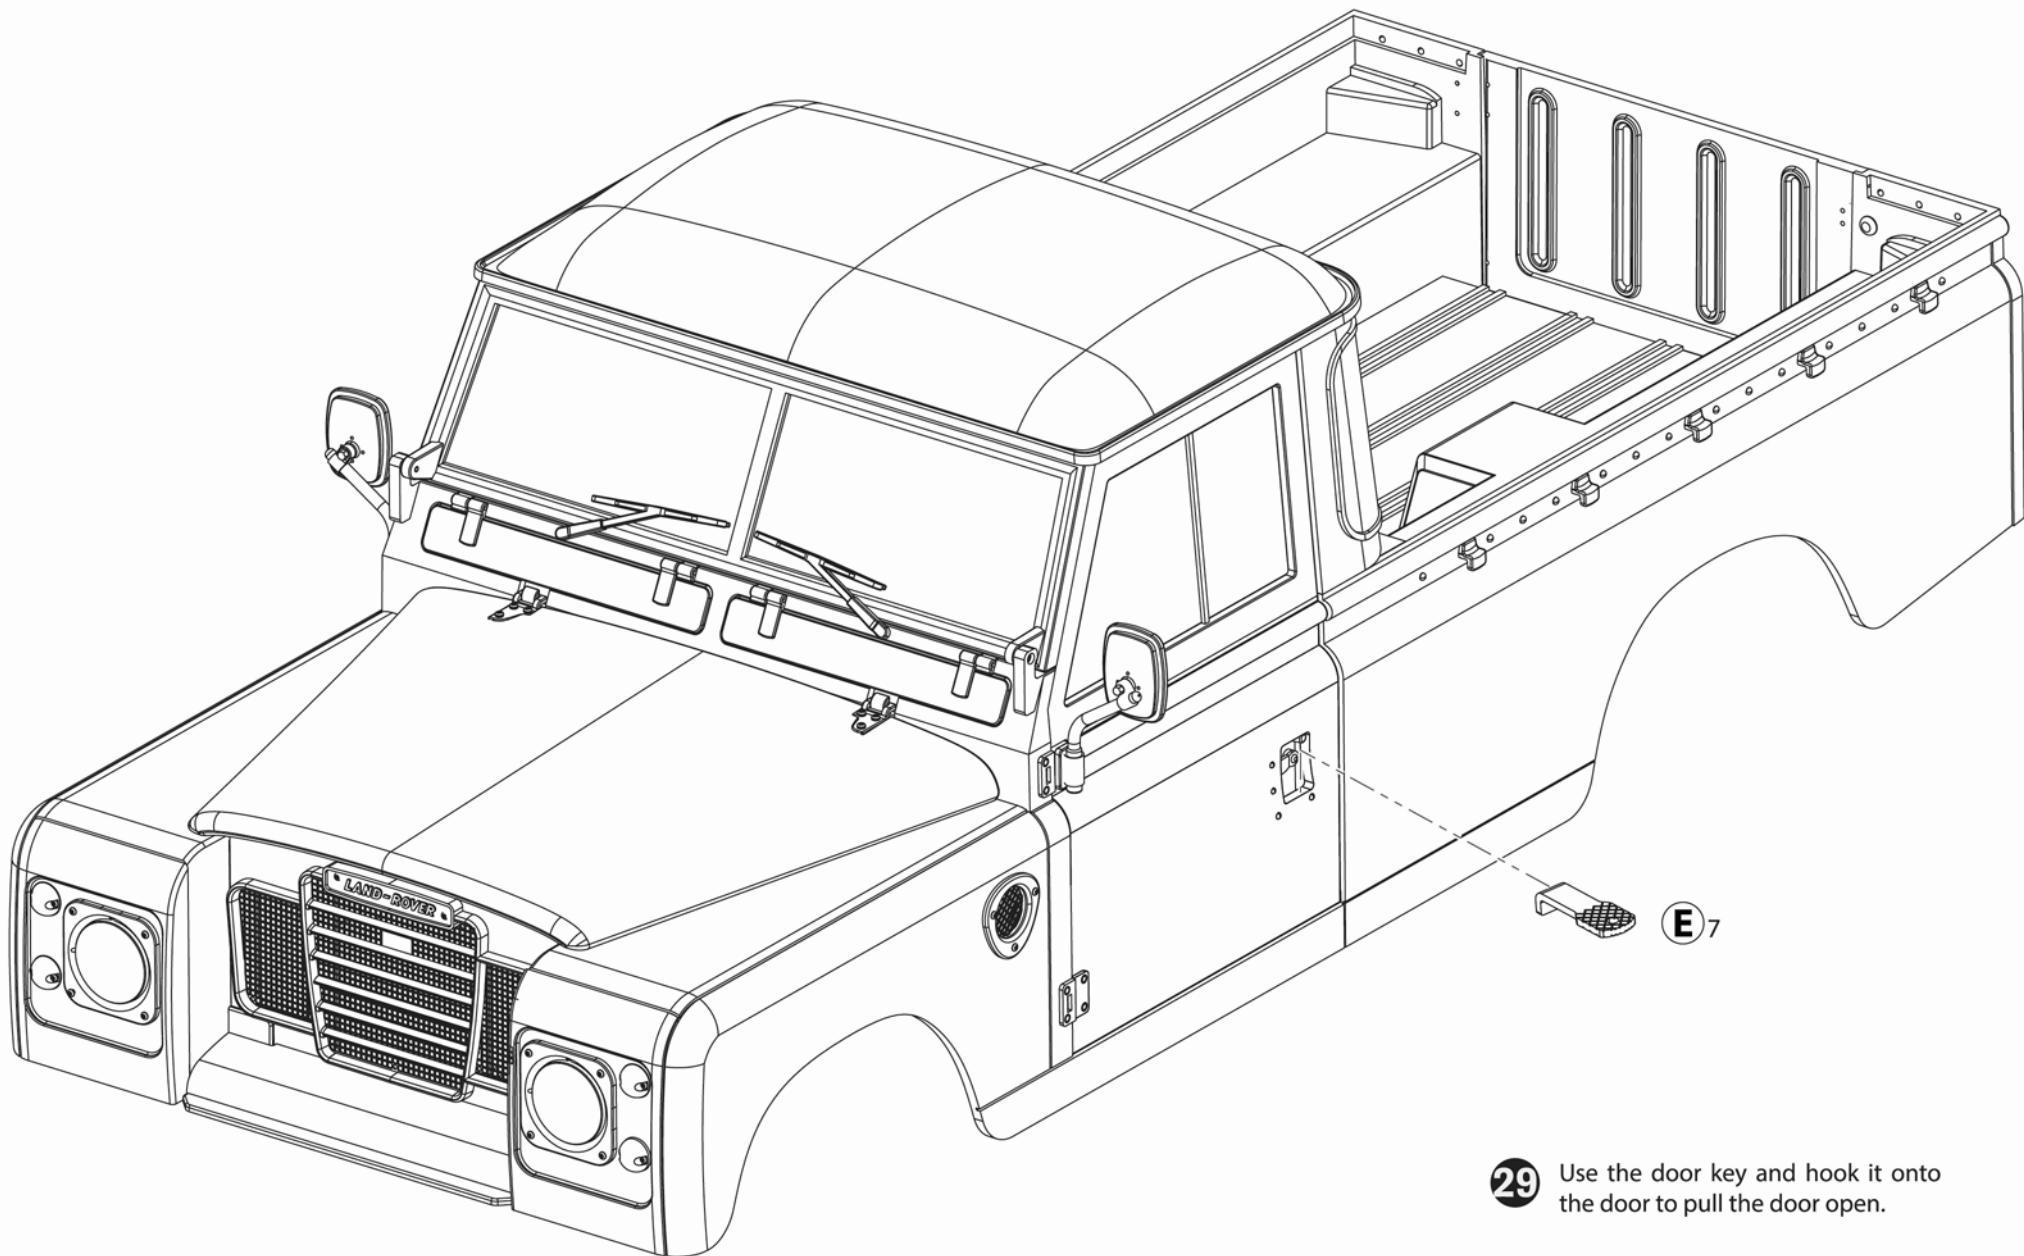

29 Use the door key and hook it onto the door to pull the door open.




PICK YOUR SIDE MIRROR LOCATION

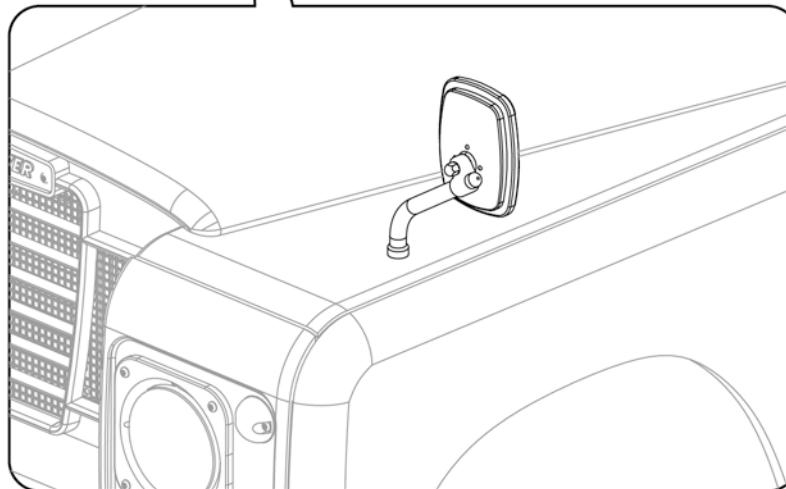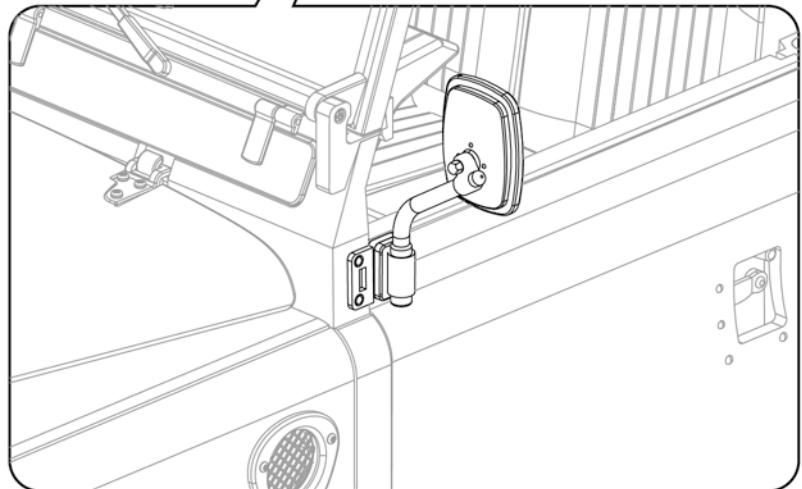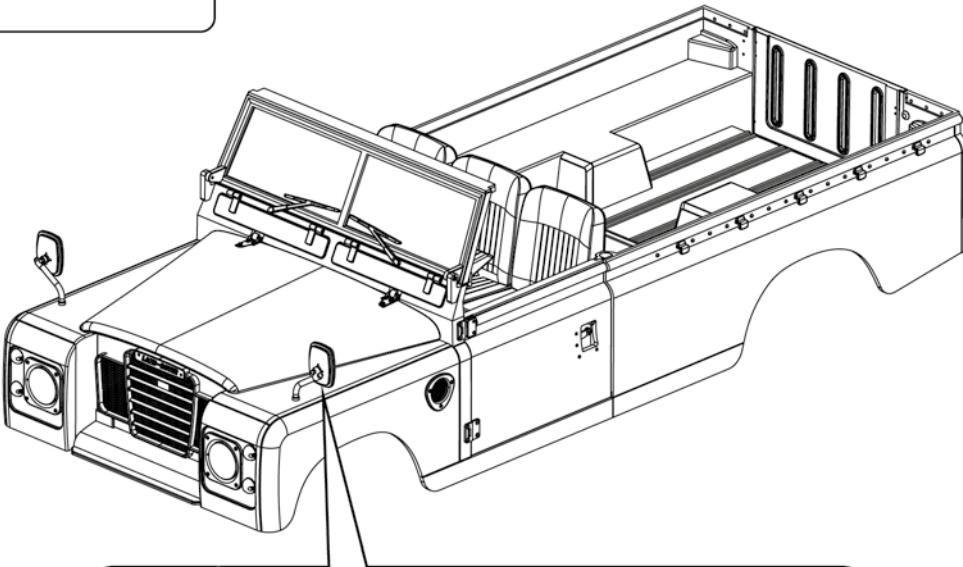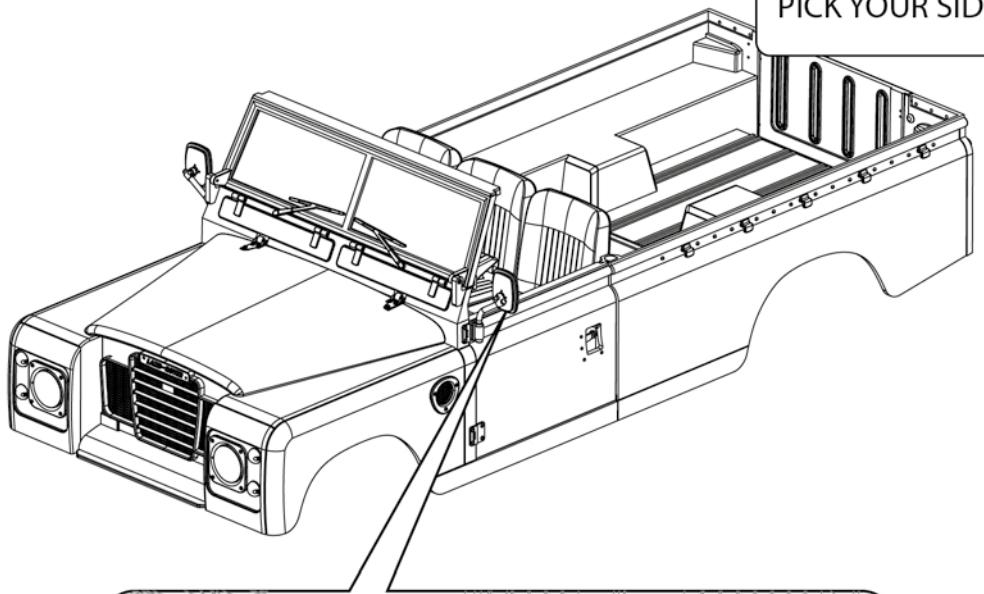

FENDER MIRRORS


DOOR MIRRORS

FENDER MIRRORS

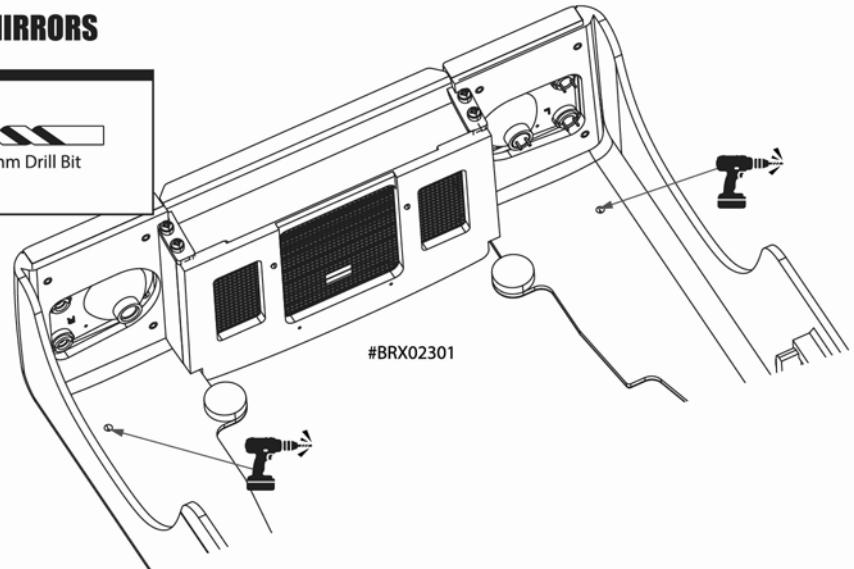


14

Drill two 2.4mm holes into the front main body from underneath as indicated. Use the provided double-sided tape (thin) to stick the mirror plate to the rubber mirror head and push the head into the mirror arm. Push the mirror arm into the holes that are drilled. Then glue from the bottom into position. Repeat on the other side.

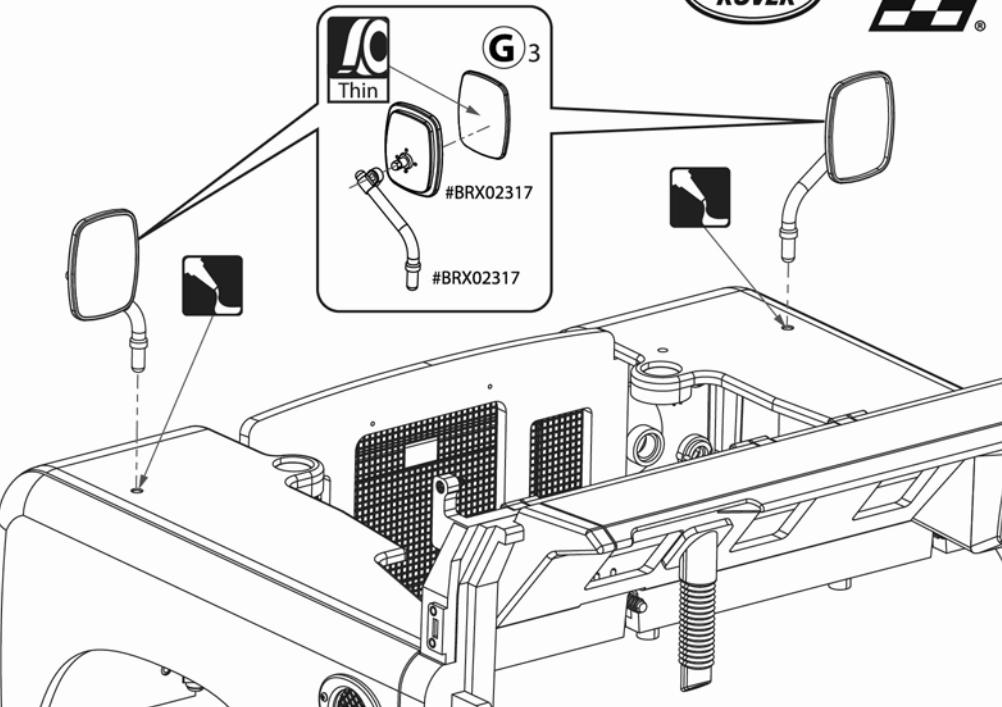


DOOR MIRRORS

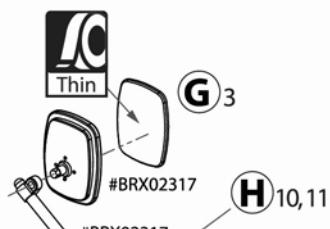

14


Use the provided double-sided tape (thin) to stick the mirror plate to the rubber mirror head and push the head into the mirror arm. Glue the mirror arm to the mirror arm holder. Next, glue the assembly to the mirror retaining plate, and then glue the whole assembly to the door. Repeat for the other side.


Insert the inner and outer door handles into the door and door lock plate and glue into position. Attach door hinge using four ST2x5 screws. Repeat on the other side.

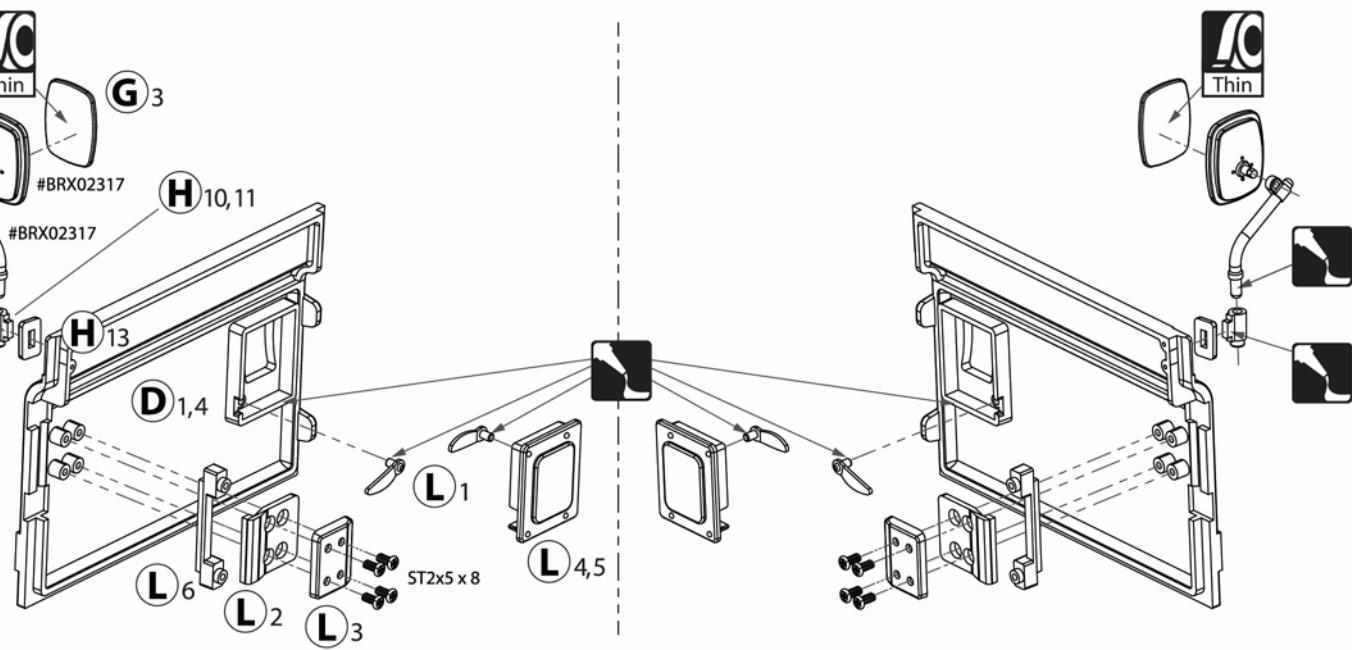

15


Attach the left and right doors to the front main body with four ST2x6 screws.

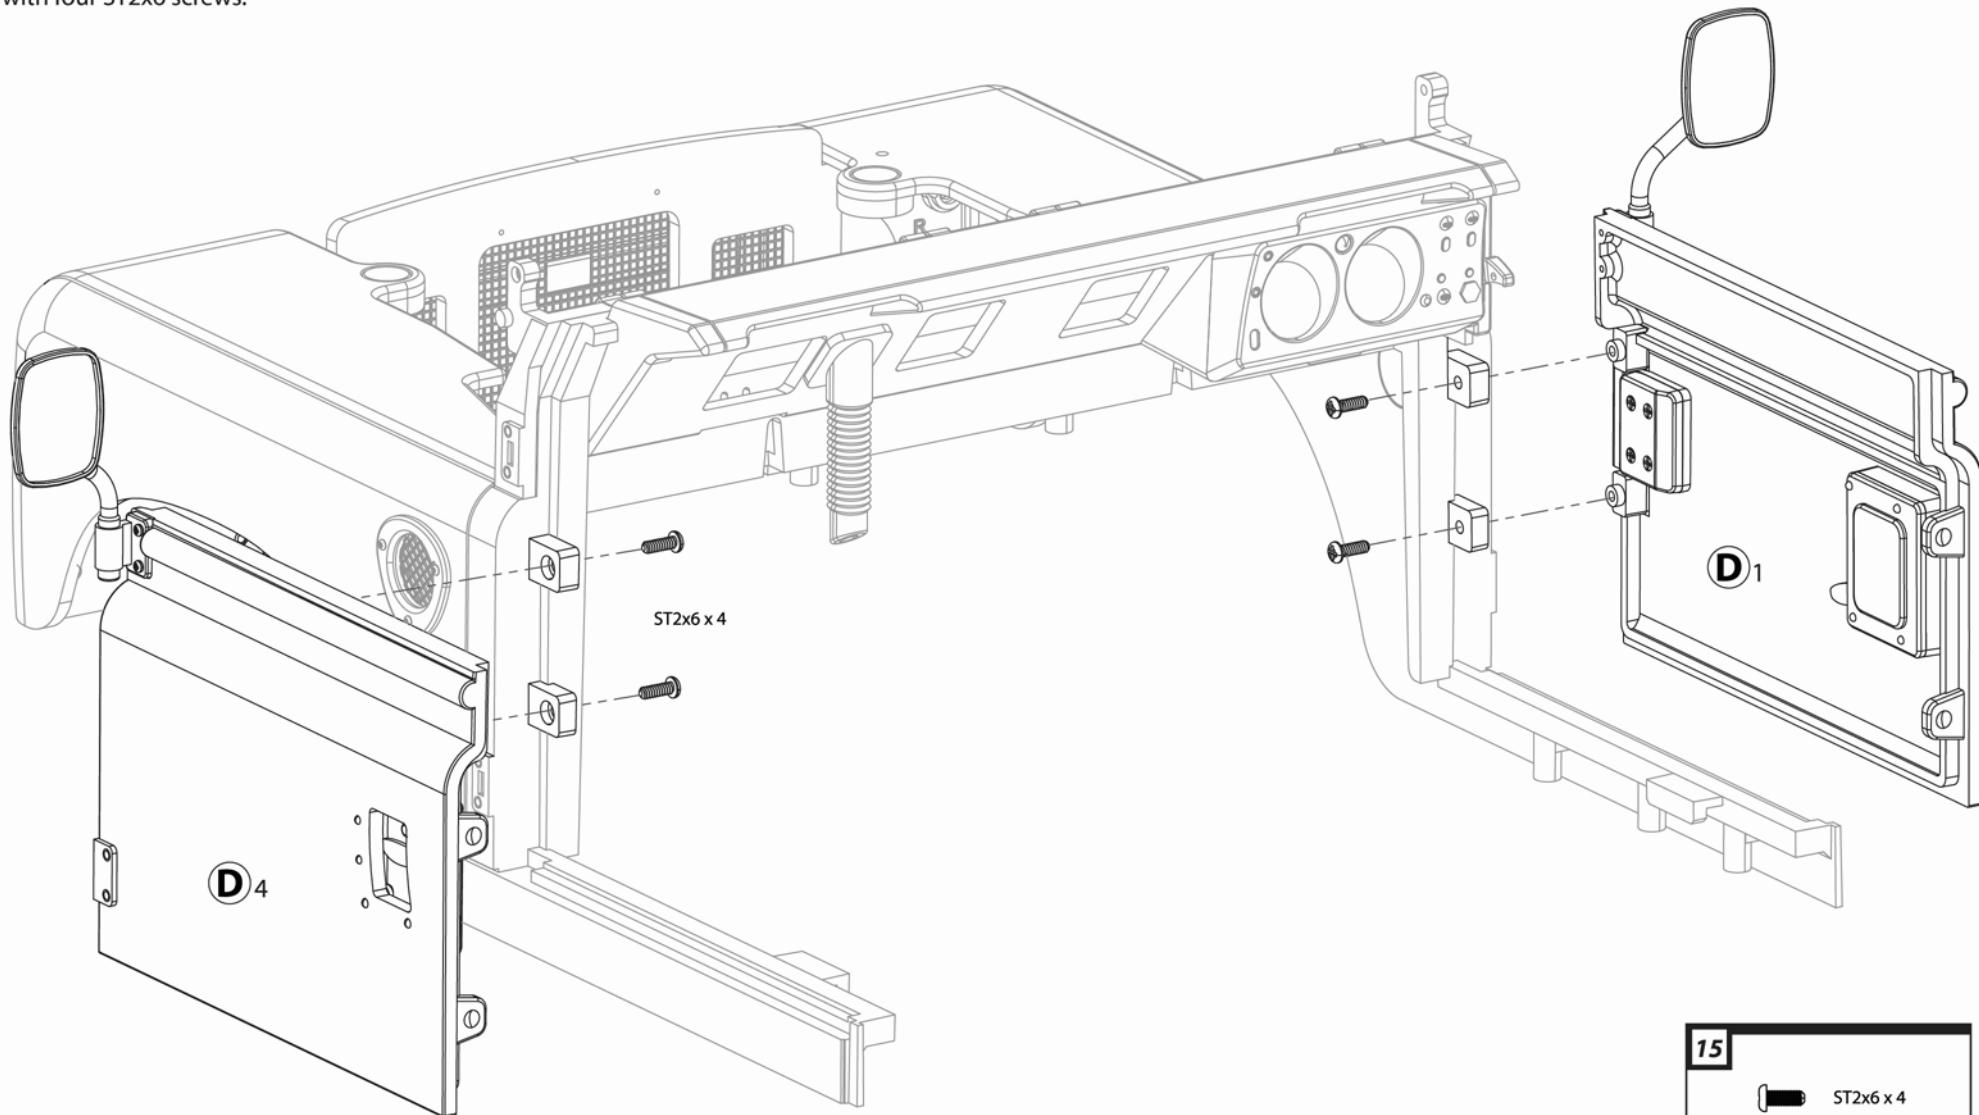

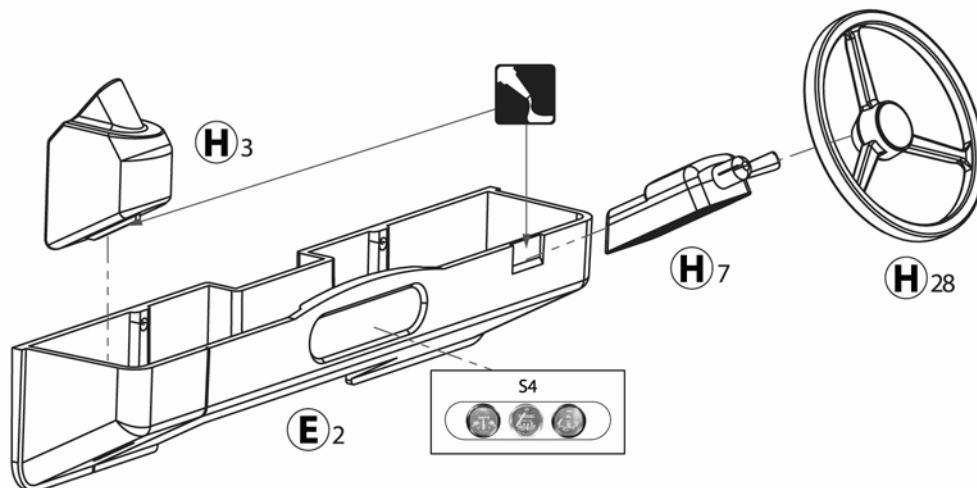


16

Glue the wiper cable cover and the steering column to the lower dash. Push the steering wheel onto the steering column and attach decal sticker.

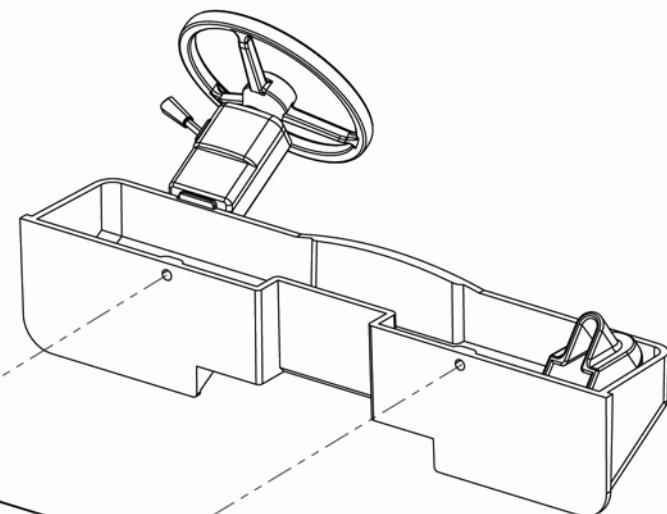



17

Attach the lower dash to the front main body using two ST2.6x6 screws.

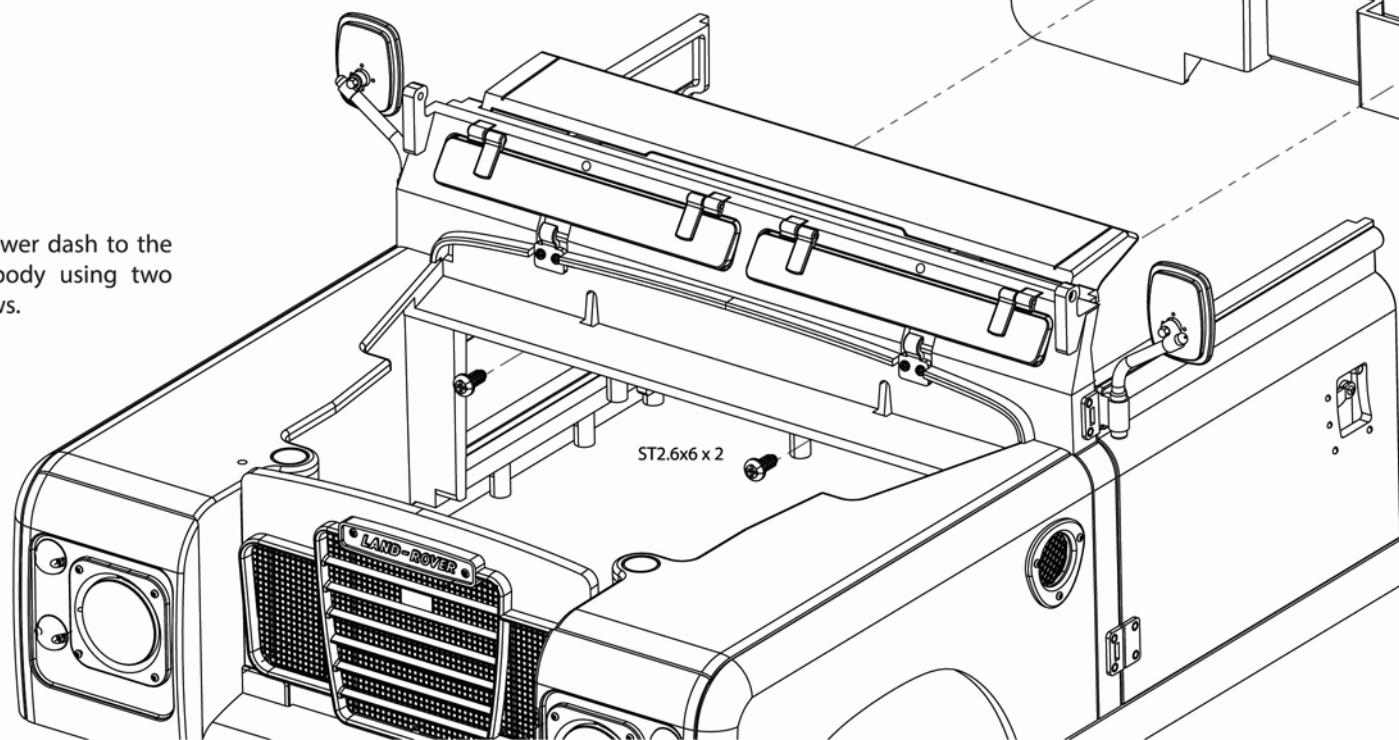


17

ST2.6x6 x 2
Decal Sticker

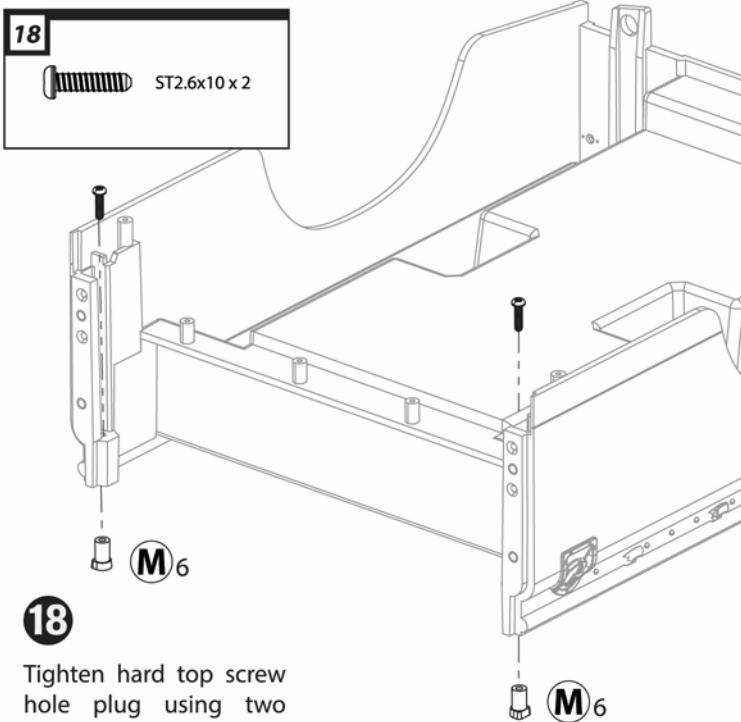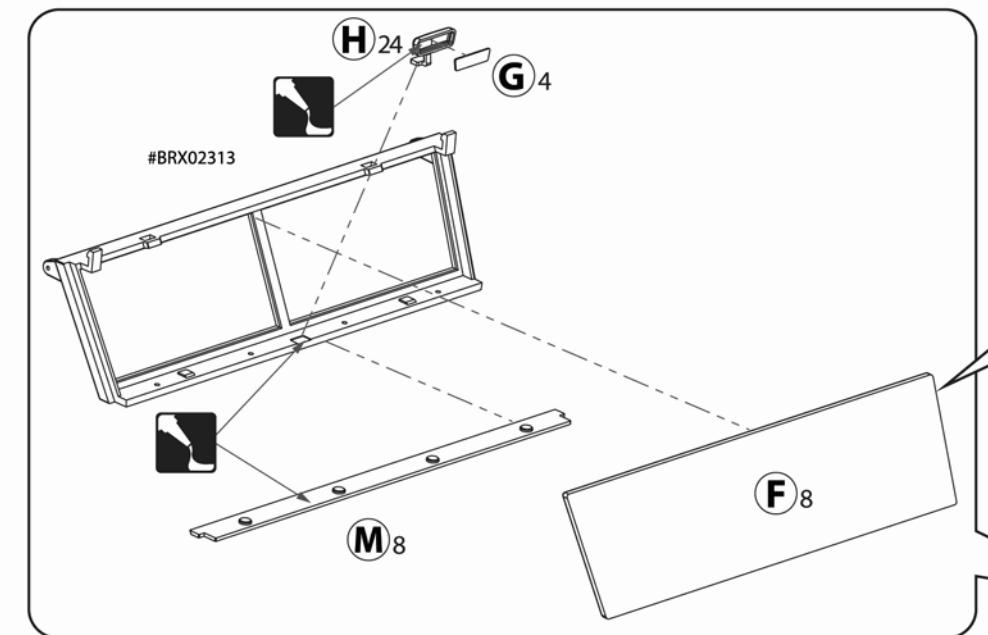


18


Tighten hard top screw hole plug using two ST2.6x10 screws.

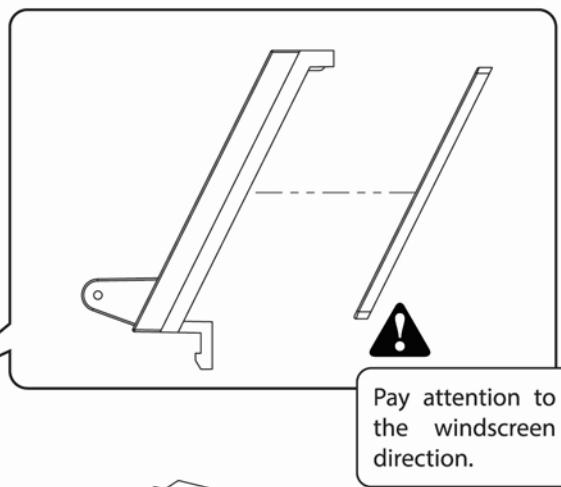



19

Clip the windscreen onto the windscreen frame and glue the interior mirror onto the windscreen frame. Attach the windscreen frame top with glue. Attach the windscreen frame to the vent panel hinge mounts with two ST1.5x5 screws. Insert the hard top screw hole plugs.

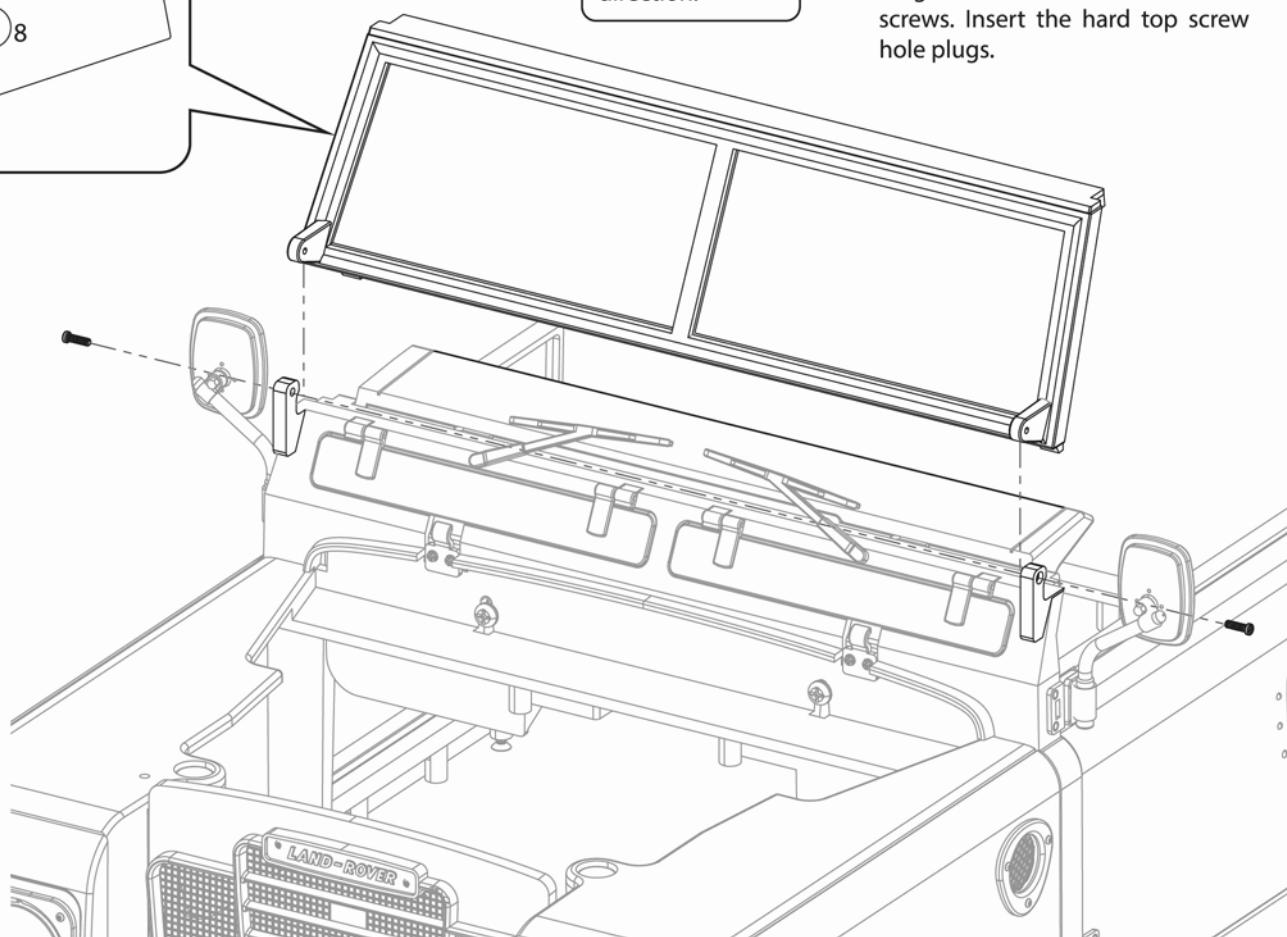



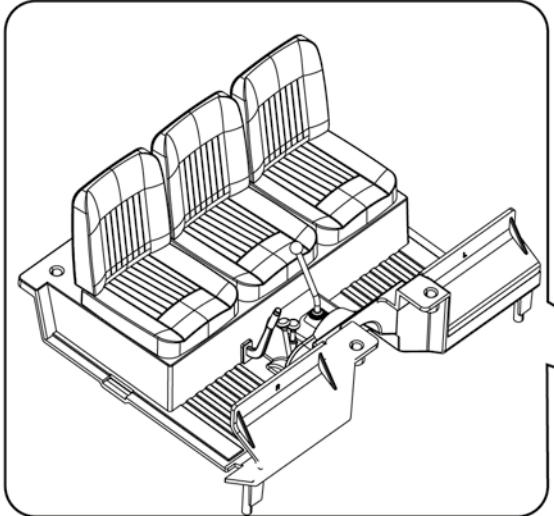
**20**

Carefully flip the main body and bed upside down. Use six ST2x8 screws to lock the floor panel into position.

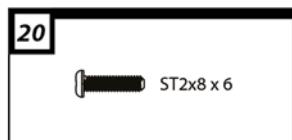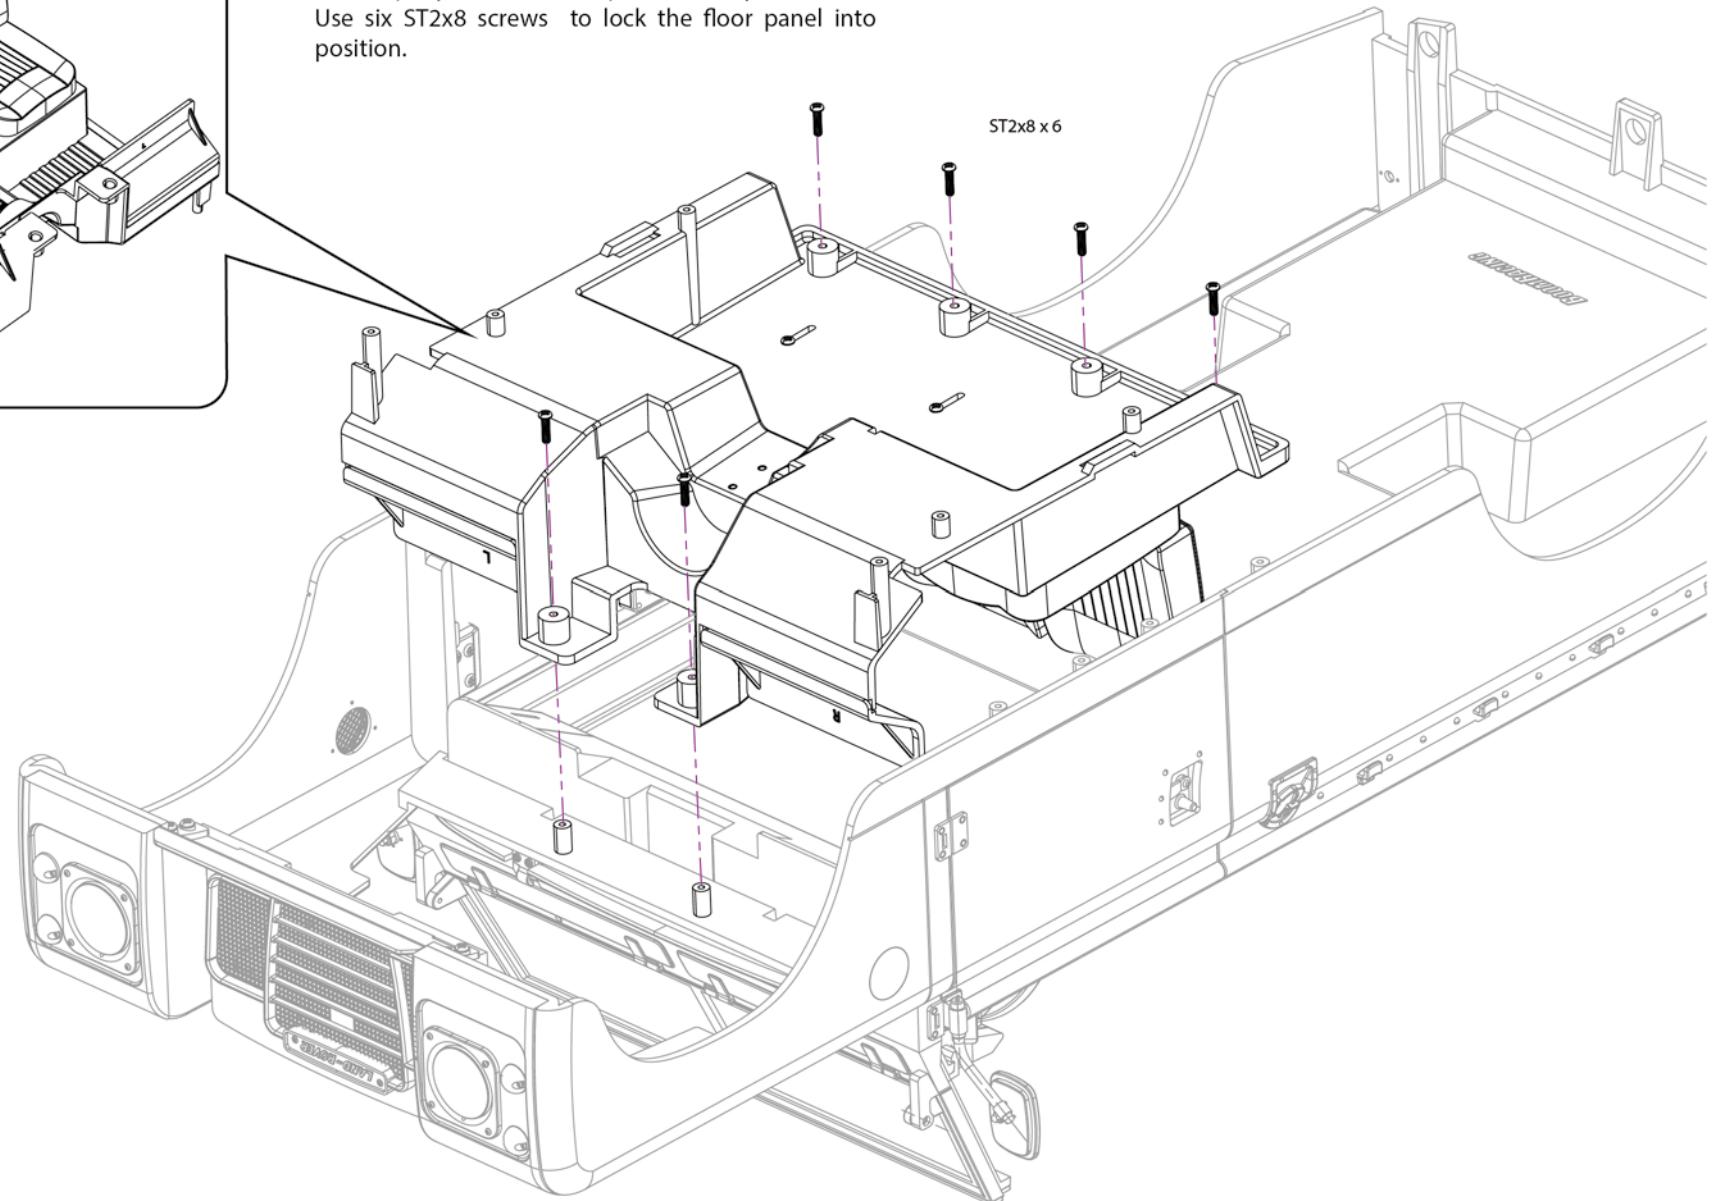







21 Attach the brace to the body using ten STCS2x8 screws to make sure everything is locked into position.

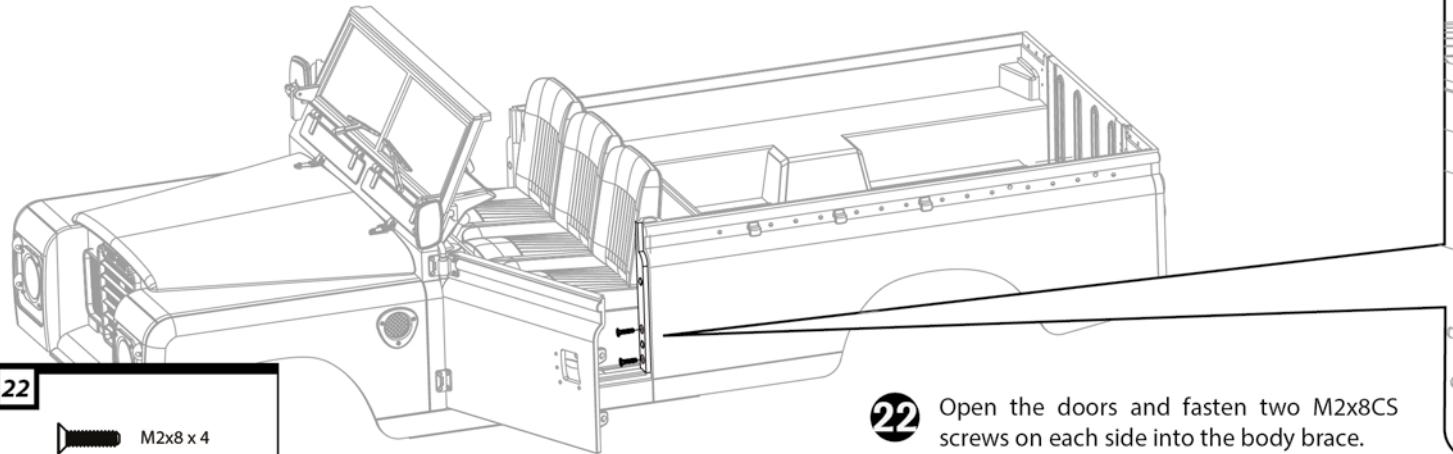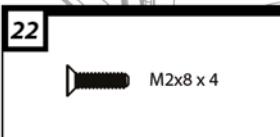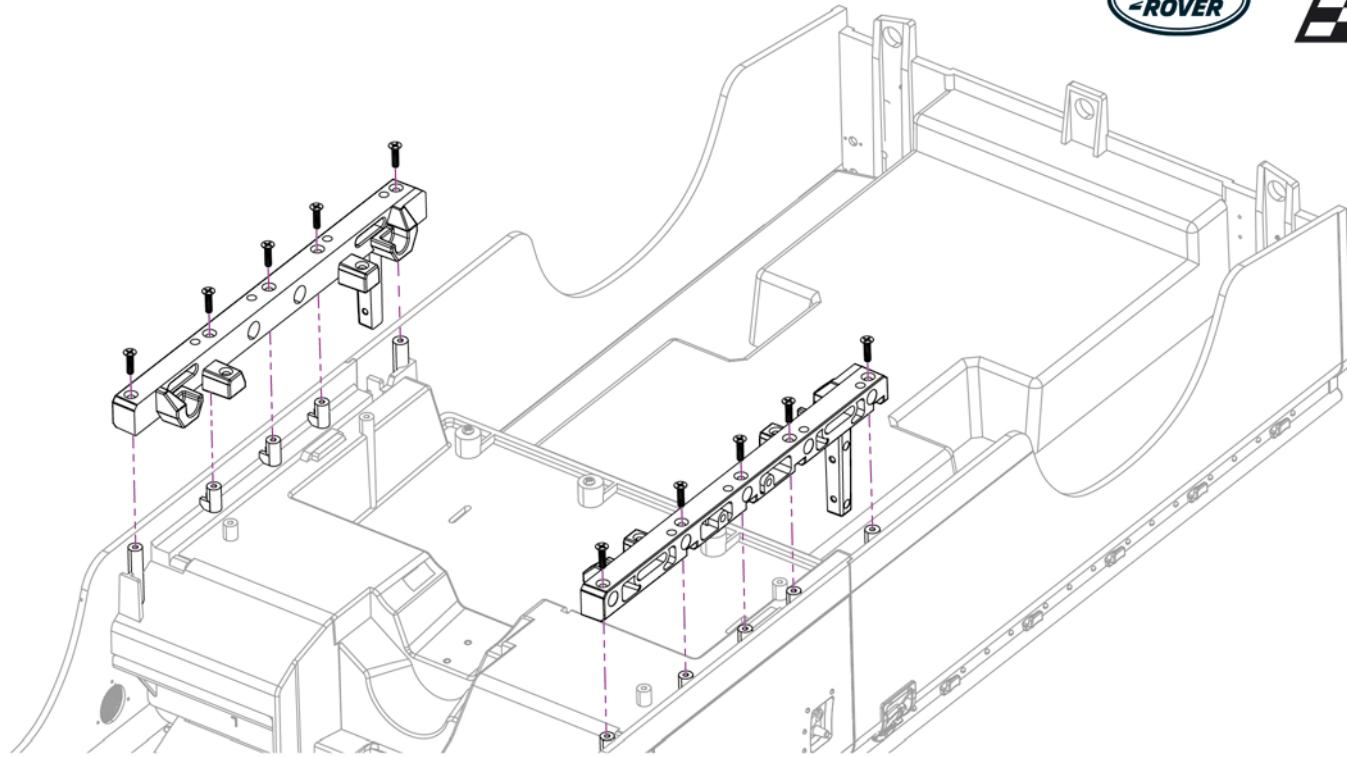

22 Open the doors and fasten two M2x8CS screws on each side into the body brace.


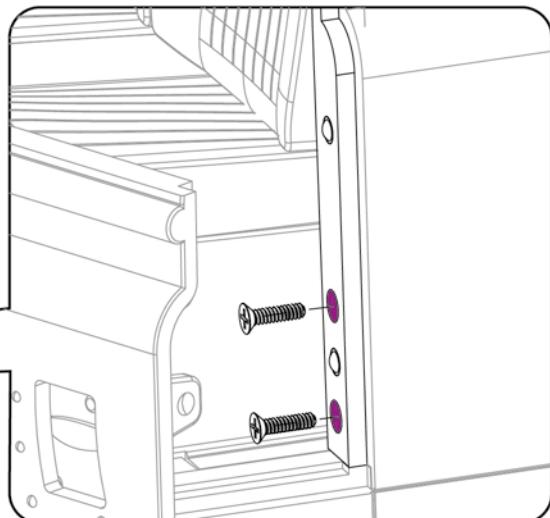


Use the two STCS3x6 screws to adjust the height of the bonnet and how tight they latch to the magnet.

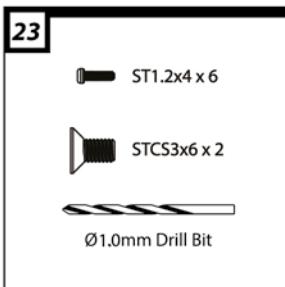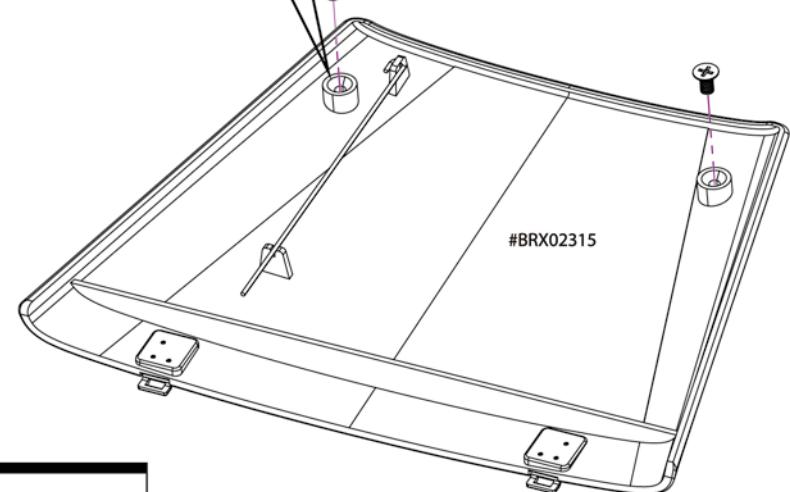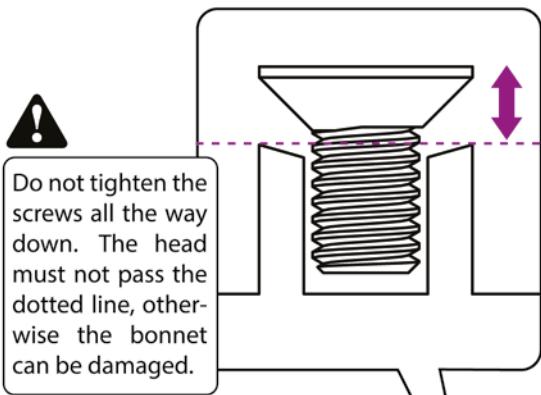



23

Attach the left and right bonnet hinge to the bonnet with six ST1.2x4 screws and two STCS3x6 screws into the bonnet.

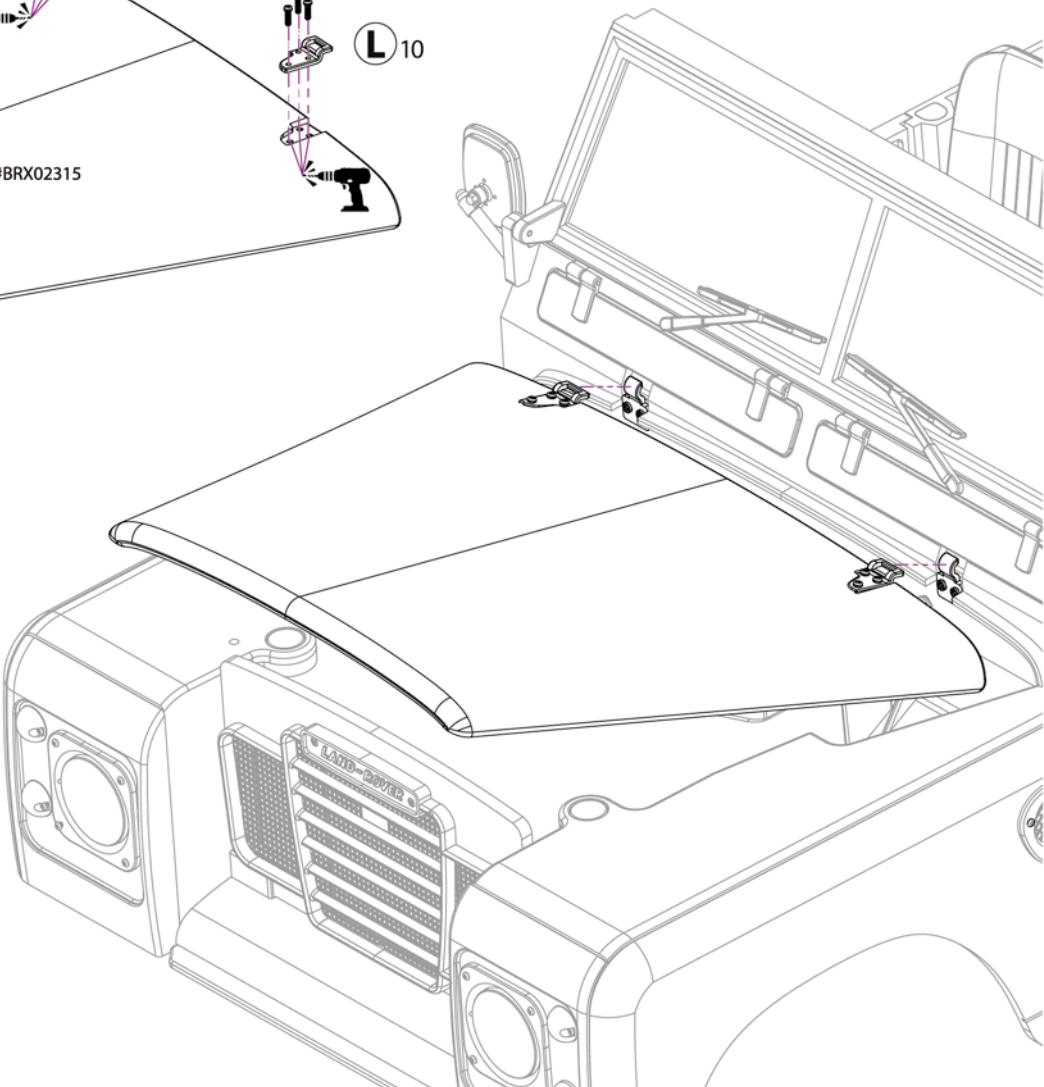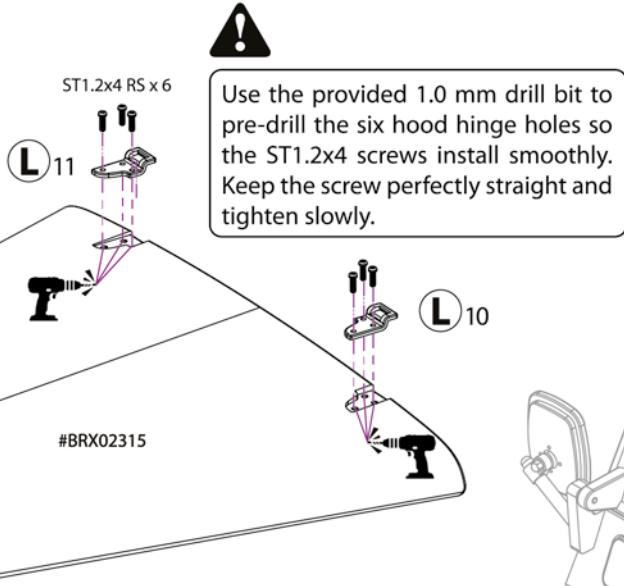




24 Snap the blanking plate onto the front chassis crossmember. Use double-sided tape to attach the license plate to the license plate mount, and the mount to the bumper.

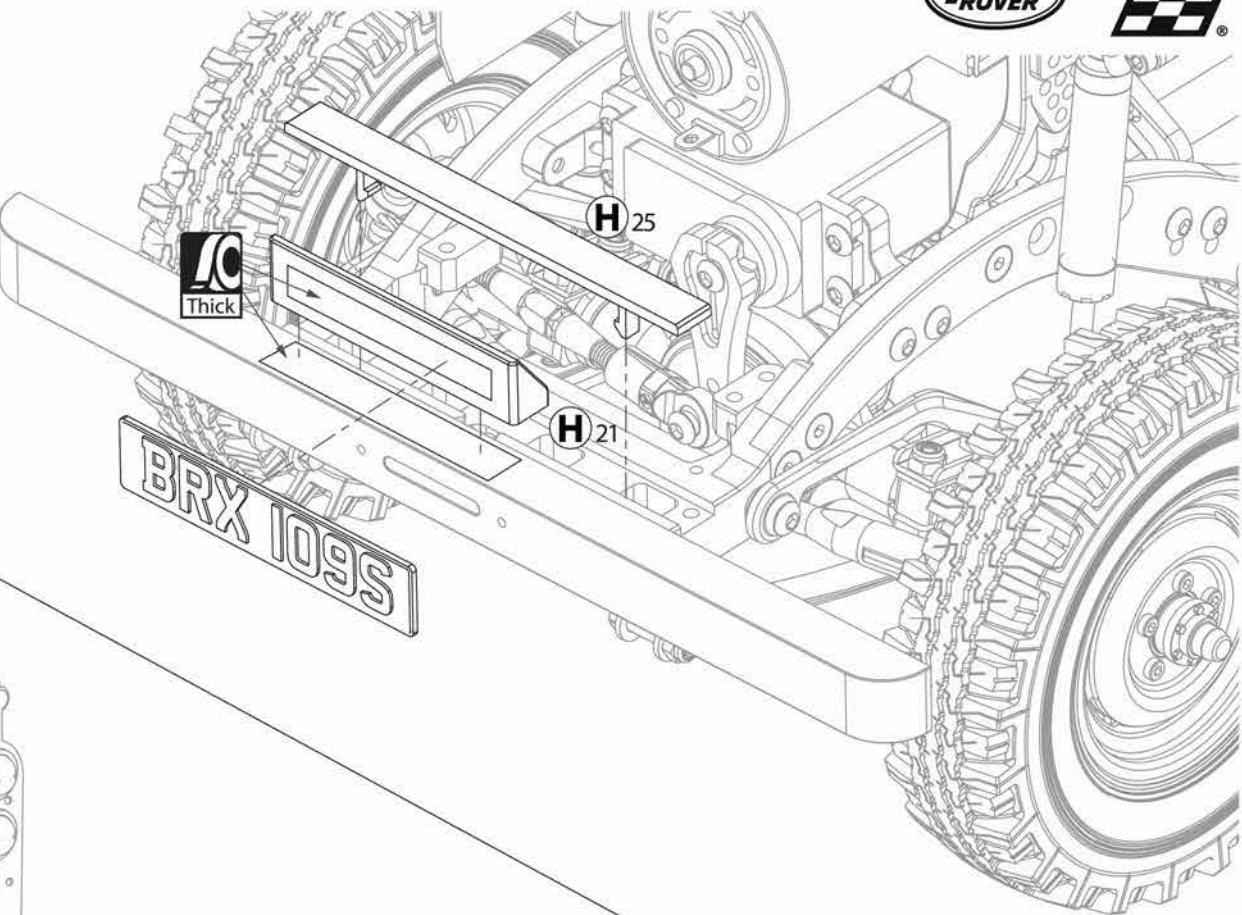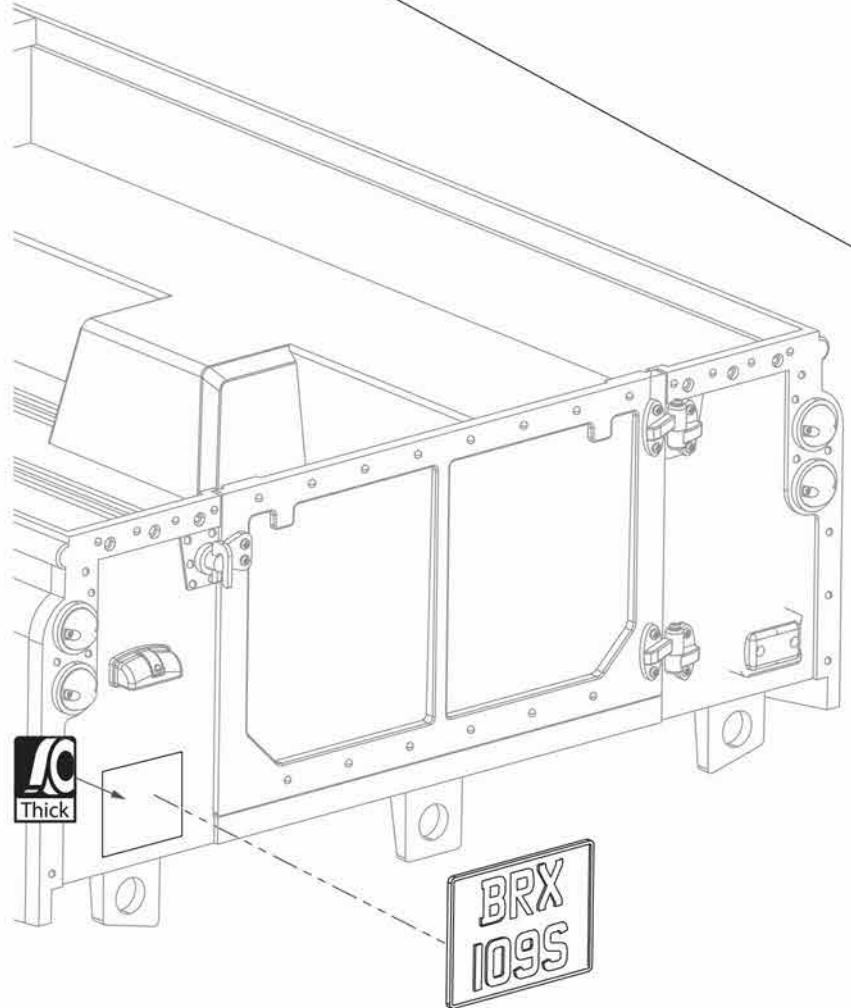

25 Use double-sided tape to attach the rear license plate onto the body below the license plate light.

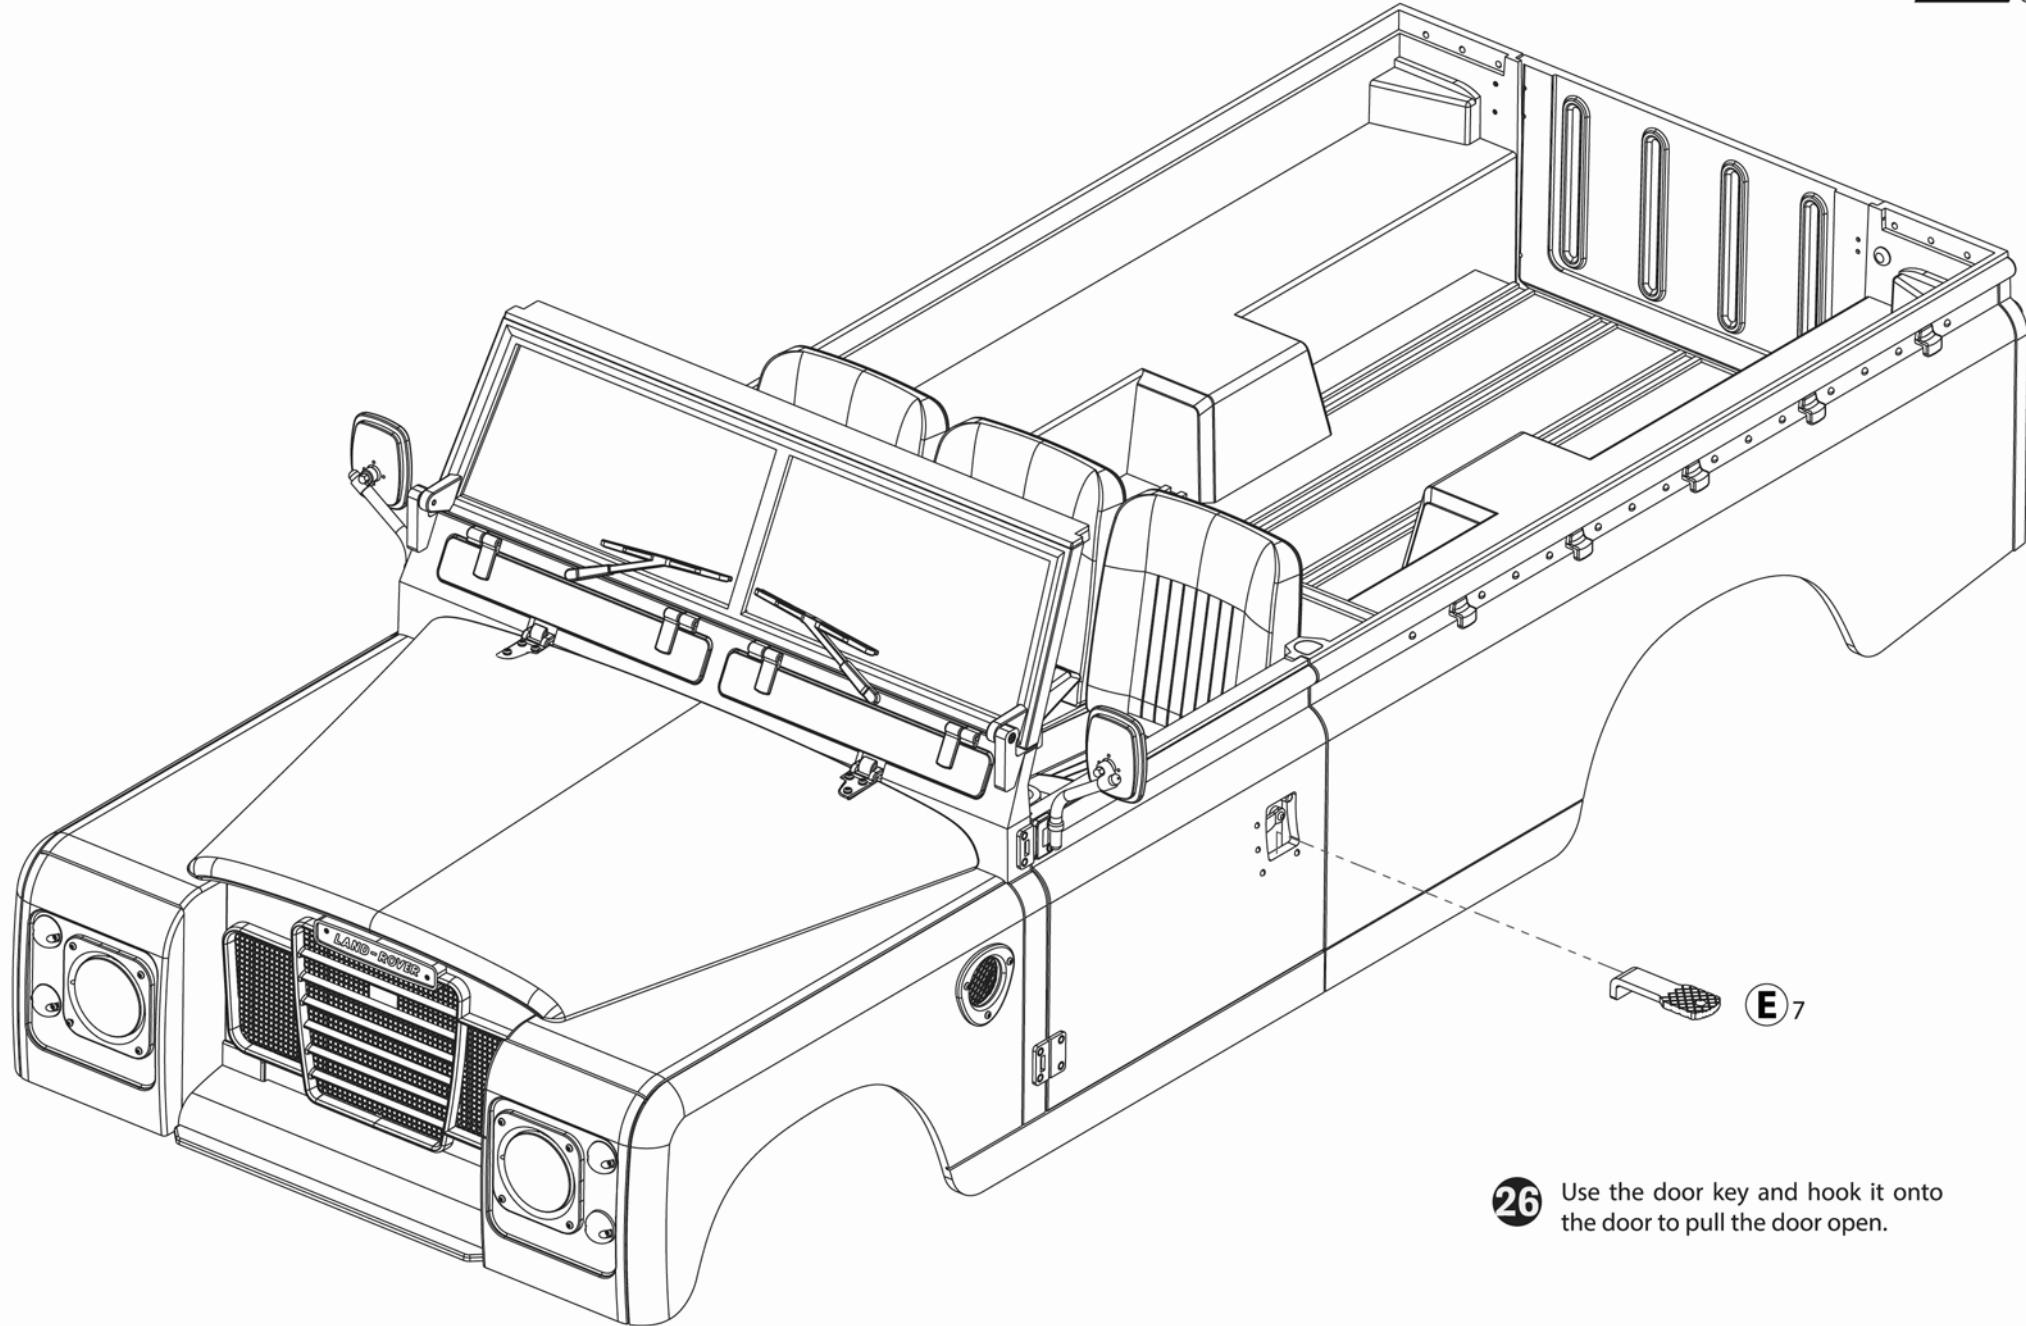

26 Use the door key and hook it onto the door to pull the door open.



 @BOOM_RACING

 BOOMRACINGRC

 SALES@BOOMRACING.COM

BOOMRACING [®]
Your Radio Control Car Specialist

www.enjoybeingabadass.com



Land Rover and the Land Rover Logo are trademarks owned and licensed by Jaguar Land Rover Limited.